



# PRO Series

### **LCD Monitor**

PRO MP243X (3PB5)

PRO MP243XP (3PB5)

PRO MP243XW (3PB5)

PRO MP273A (3PB4)

PRO MP273AP (3PB4)

PRO MP273AW (3PB4)

User Guide

### **Contents**

Getting Started	3
Package Contents	3
Installing the Monitor Stand	4
Adjusting the Monitor	6
Monitor Overview	8
Connecting the Monitor to PC	11
OSD Setup	13
OSD Keys	13
OSD Menus	14
Professional	14
Image	16
Input Source	18
Navi Key	19
Setting	19
Specifications	21
Preset Display Modes	23
Troubleshooting	24
Safety Instructions	25
TÜV Rheinland Certification	27
ENERGY STAR Certification	27
Regulatory Notices	28

#### Revision

V1.0, 2023/04

### **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

### **Package Contents**

Monitor	PR0 MP243X PR0 MP243XP PR0 MP243XW PR0 MP273A PR0 MP273AP PR0 MP273AW	
Documentation	mentation Quick Start Guide	
Accessories	External Power Supply & Power Cord	
Cables	High Speed HDMI™ Cable (Optional)	




- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

### **Installing the Monitor Stand**


#### PRO MP243X, PRO MP243XW, PRO MP273A, PRO MP273AW

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor.
- 2. Connect the base to the stand to secure the base.
- 3. Make sure the stand assembly is properly installed before setting the monitor upright.

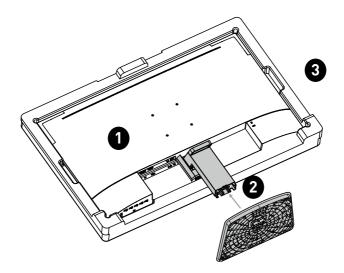

#### PRO MP243XP, PRO MP273AP

- 1. Leave the monitor in its protective foam packaging. Align the stand bracket to the monitor groove.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- 4. Make sure the stand assembly is properly installed before setting the monitor upright.

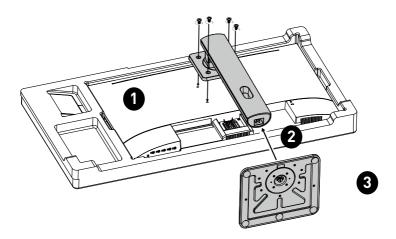

#### \ Important

- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Do not use any sharp objects on the panel.
- The back of the monitor can also be used for wall mount. Please contact your dealer for proper wall mount kit.
- This product comes with NO protective film to be removed by the user! Any mechanical damages to the product including removal of the polarizing film may affect the warranty!




### **Adjusting the Monitor**

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.

#### PRO MP243X, PRO MP243XW, PRO MP273A, PRO MP273AW



### PRO MP243XP, PRO MP273AP

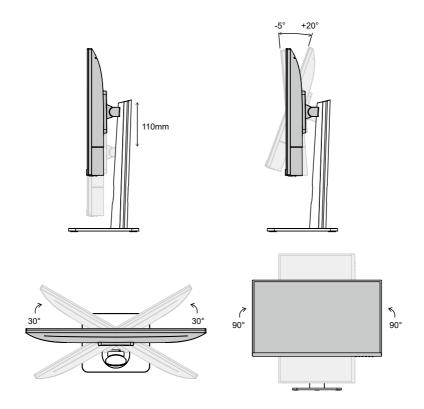





- Avoid touching the display panel when adjusting the monitor.
- Please slightly tilt the monitor backwards before pivoting it.

#### **Monitor Overview**

#### PRO MP243X, PRO MP243XW, PRO MP273A, PRO MP273AW

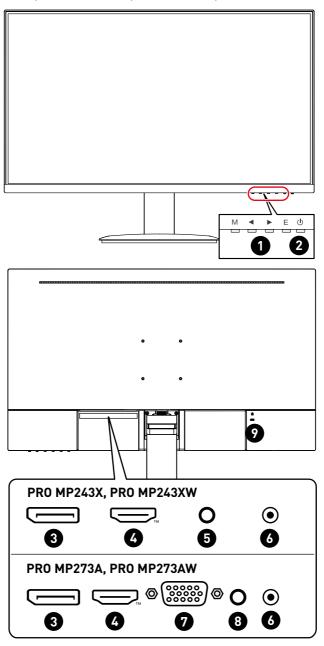

### PRO MP243XP, PRO MP273AP

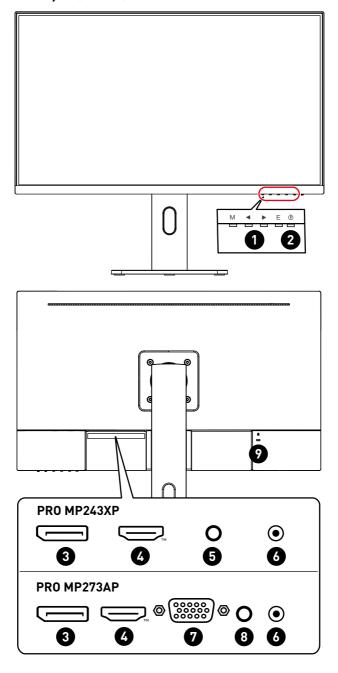


0	OSD Keys
2	Power Button / Power LED
	Lit in white after the monitor is turned on. If no signal input, the LED will turn into orange. Lit in orange when the monitor is in Stand-by mode.
3	DisplayPort
4	HDMI™ Connector <b>H⊃m</b> I™
	Supports 1920x1080@100Hz as specified in HDMI™ 1.4b.
6	Headphone Jack
6	Power Jack
0	D-Sub Port
8	Line-In Jack
9	Kensington Lock

### Connecting the Monitor to PC


#### PRO MP243X, PRO MP243XW, PRO MP273A, PRO MP273AW

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Assemble the external power supply & power cord. (Figure A)
- 4. Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- **6.** Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

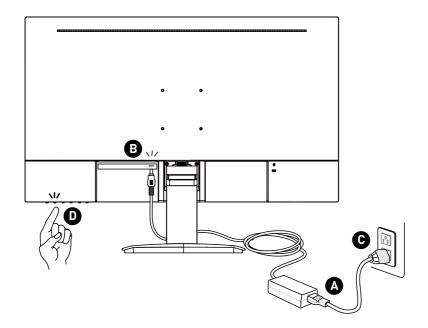

#### PRO MP243XP, PRO MP273AP

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Assemble the external power supply & power cord. (Figure A)
- 4. Connect the external power supply to the monitor power jack. (Figure B)
- **5.** Plug the power cord into the electrical outlet. (Figure C)
- 6. Turn on the monitor. (Figure D)
- 7. Power on the computer and the monitor will auto detect the signal source.

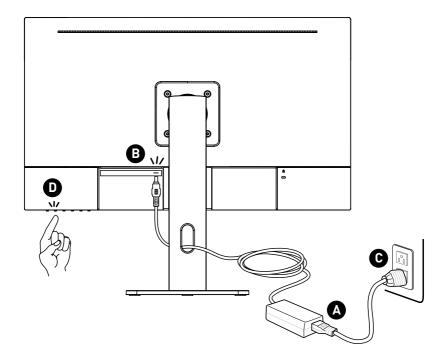

## **OSD Setup**

This chapter provides you with essential information on OSD Setup.




### / Important

All information is subject to change without prior notice.

### **OSD Keys**

The monitor comes with a set of OSD Keys that help to control the On-Screen Display (OSD) menu.

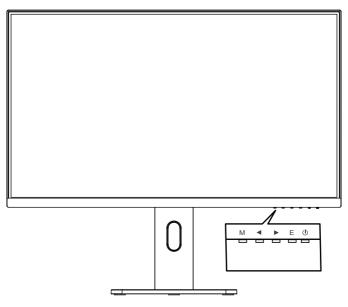

OSD Key	Hot Key (When OSD is OFF)	OSD Setup (When OSD is ON)
M	Activating the OSD Main Menu	<ul><li>Entering the submenus.</li><li>Confirming a selection or setting.</li></ul>
•	• Mode	
	Input Source	
Е	Audio Volume	

### **OSD Menus**



### **Professional**

1st Level Menu	2nd/3rd Level Menu	Description	
Mode	Eco	Use Up or Down Button to select and preview mode effects.	
	User	Press the E Button to confirm and	
	sRGB	apply your mode type.	
	Anti-Blue	The default setting "Eco" mode meets the requirements of	
	Movie	TÜV Rheinland's "Low Blue Light" standard and Eyesafe	
	Office	certification.	
	Black-White		
Response Time	Normal	Users can adjust Response Time	
	Fast	in any mode.	
	Fastest		
MPRT	OFF	Activating MPRT will affect:	
	ON	Affected Function Function Status	
		» Brightness Unable to select	
		» HDCR » Adaptive-Sync Set to 0FF	

1st Level Menu	2nd/3rd Level Menu		Description
Refresh Rate	Location	Left Top	Location is adjustable in OSD
		Right Top	Menu. Press the E Button to confirm and apply your Refresh
		Left Bottom	Rate Location.  This monitor follows and works
		Right Bottom	at the Operating System's preset Screen Refresh Rate.
	OFF		Serven Kenesh Kate.
	ON		
Alarm Clock	Location	Left Top	After setting the time, press the E
	Right Top	Button to activate the timer.  • Users have to manually restore	
		Left Bottom	their preset Alarm Clock after any AC power loss and reconnection.
		Right Bottom	
	OFF		
	15:00	00:01 ~ 99:59	
	30:00		
	45:00		
	60:00		

1st Level Menu	2nd/3rd Level Menu		Description	
Screen	Eye-Q Check	OFF	Select OFF to disable Eye-Q     Check.	
Assistance	Спеск	Amsler Grid	• Select Amsler Grid to check your	
		Astigmatism	central vision field.	
		Posture	Select Astigmatism to check your blurred vision.	
	Crosshair None	Correction	Select Posture Correction to improve your posture when sitting.	
		<ul> <li>Through AI algorithm, this function enhances the visibility of in-game crosshair.</li> <li>Users can select the color and position of the crosshair.</li> </ul>		
		( <u>;</u> ) ( <u>;</u> )		
Screen Size	Auto		Users can adjust Screen Size in any mode, any resolution and any	
	4:3		screen refresh rate.	
	16:9			
Adaptive-Sync	aptive-Sync OFF		Adaptive-Sync prevents screen tearing.	
ON				

### **Image**

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	Properly adjust Brightness according to the surrounding lighting.
Contrast	0-100	Properly adjust Contrast to relax your eyes.
Sharpness	0-5	Sharpness improves clarity and details of images.

1st Level Menu	2nd/3rd Level Menu		Description	
Image	OFF		Image Enhancement enhances image edges to improve their acutance.	
Enhancement	Weak			
	Medium			
	Strong			
	Strongest			
Low Blue Light	OFF		Low Blue Light protects your eyes	
	ON		against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.	
			When Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.	
			This monitor is a Low Blue Light monitor which will decrease the blue light emitted without adjusting the OSD settings.	
HDCR	OFF		HDCR enhances image quality by	
	ON		<ul><li>increasing the contrast of images.</li><li>Activating HDCR will affect:</li></ul>	
			Affected Function Function Status	
			» Brightness Unable to select	
			» MPRT Set to OFF	
Color	olor Cool		Use Up or Down Button to select	
Temperature	Normal		<ul><li>and preview mode effects.</li><li>Press the E Button to confirm and apply your mode type.</li></ul>	
	Warm			
	Customization	R (0-100)	Users can adjust Color     Temperature in Customization	
		G (0-100)	mode.	
		B (0-100)		

1st Level Menu	2nd/3rd Level Menu	Description
Clock (PRO MP273A/ PRO MP273AP/ PRO MP273AW)	0-100	<ul> <li>Adjust Clock setting.</li> <li>For D-Sub only, this setting will be grayed out when detecting other input sources.</li> </ul>
Phase (PRO MP273A/ PRO MP273AP/ PRO MP273AW)	0-100	<ul> <li>Adjust Phase setting.</li> <li>For D-Sub only, this setting will be grayed out when detecting other input sources.</li> </ul>
H.Position (PRO MP273A/ PRO MP273AP/ PRO MP273AW)	0-100	<ul> <li>Adjust H.Position setting.</li> <li>For D-Sub only, this setting will be grayed out when detecting other input sources.</li> </ul>
V.Position (PRO MP273A/ PRO MP273AP/ PRO MP273AW)	0-100	<ul> <li>Adjust V.Position setting.</li> <li>For D-Sub only, this setting will be grayed out when detecting other input sources.</li> </ul>

## **Input Source**

1st Level Menu	2nd Level Menu	Description
HDMI™		Select an Input Source from the list.
DP		
D-Sub (PRO MP273A/ PRO MP273AP/ PRO MP273AW)		
Auto Scan	OFF	Users can use the Navi Key to select Input     Source at below status:
	ON	While "Auto Scan" is set to "OFF" with the monitor at power saving mode;
		While "No Signal" message box is shown on the monitor.

## Navi Key

1st Level Menu	2nd Level Menu	Description
Enter	OFF	All Navi Key items can be adjusted via
Left	Brightness	OSD Menus.
Right	Mode	
	Alarm Clock	
	Input Source	
	Refresh Rate	
	Info. On Screen	
	Audio Volume	

## Setting

1st Level Menu	2nd Level Menu	Description
Language	繁體中文	Users have to press the E Button to
	English	confirm and apply the Language setting.  • Language is an independent setting. Users'
	Français	own language setting will override the factory . When users set Reset to Yes,
	Deutsch	Language will not be changed.
	Italiano	
	Español	
	한국어	
	日本語	
	Русский	
	Português	
	简体中文	
	Bahasa Indonesia	
	Türkçe	
	(More languages coming soon)	

1st Level Menu	2nd Level Menu	Description		
Transparency	0~5	Users can adjust Transparency in any mode.		
OSD Time Out	5~30s	Users can adjust OSD Time Out in any mode.		
Power Button	OFF	When set to OFF, users can press the power button to turn off the monitor.		
	Standby	When set to Standby, users can press the power button to turn off the panel and backlight.		
HDMI™ CEC	OFF	HDMI™ CEC (Consumer Electronics		
	ON	Control) supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC-capable.		
		If HDMI™ CEC is set to ON:     The monitor will automatically power on when the CEC device is turned on.     The CEC device will enter power saving mode when the monitor is turned off.		
		<ul> <li>When Sony PlayStation®, Nintendo® Switch™, or Xbox Series X S console is connected, Mode will be automatically set to default modes and can be adjusted to users' preferred modes later.</li> </ul>		
Info. On Screen	OFF	The information of the monitor status will		
	ON	be shown on the right side of the screen.		
Audio Volume	0-100	Users can adjust Audio Volume in any mode.		
Reset	YES	Users can Reset and restore settings to		
	N0	original OSD Default in any mode.		

## **Specifications**

Model	PRO MP243X PRO MP243XW	PRO MP243XP	PRO MP273A PRO MP273AW	PRO MP273AP	
Size	23.8 inch 27 inch			nch	
Curvature	Flat				
Panel Type	IPS				
Resolution	1920 x 1080				
Aspect Ratio	16:9				
Brightness (nits)	300 (typ.)				
Contrast Ratio	1000:1				
Refresh Rate	100Hz				
Response Time	1ms (MPRT) 4ms (GtG) 14ms (Tr+Tf)				
1/0	<ul> <li>DisplayPort x1</li> <li>HDMI™ Conne</li> <li>Headphone Ja</li> </ul>	ector x1	<ul> <li>DisplayPort x1</li> <li>HDMI™ Connector x1</li> <li>D-Sub Port x1</li> <li>Line-in Jack x1</li> </ul>		
View Angles	178°(H) , 178°(V)				
DCI-P3*/ sRGB	89% / 119%		84% / 106%		
Surface Treatment	Anti-glare				
Display Colors	16.7M 8 bits (6 bits + FRC)				
Speaker	3W x2				
Monitor Power Options	12V === 2.5A				
External Power Supply	Model: ADS-40NP-12-1 12030E				
Power Input	100~240Vac, 50~60Hz, 1.0A Max				
Power Output	12V === 2.5A				

Model		PRO MP243X PRO MP243XW	PRO MP243XP	PRO MP273A PRO MP273AW	PRO MP273AP	
Adjustment	(Tilt)	-5° ~ 20°				
Adjustment (Height)			0 ~ 110mm		0 ~ 110mm	
Adjustment (Swivel)			-30° ~ 30°		-30° ~ 30°	
Adjustment (Pivot)			-90° ~ 90°		-90° ~ 90°	
Kensington Lock Yes						
VESA Mount	ting	Plate Type: 75 x	Plate Type: 75 x 75 mm			
Dimension (W x D x H)		541.93 x 181.14 x 421.79 mm	541.93 x 200.81 x 501.85 mm	613.50 x 182.00 x 461.60 mm	613.50 x 200.80 x 413.40 mm	
Weight	Net	3.0 Kg	4.65 Kg	3.9 Kg	5.6 Kg	
	Gross	4 Kg	6.4 Kg	5.3 Kg	7.6 Kg	
Environment	Operating	<ul> <li>Temperature: 0°C to 40°C</li> <li>Humidity: 20% to 90%, non-condensng</li> <li>Altitude: 0 ~ 5000m</li> </ul>				
	Storage	<ul> <li>Temperature: -20°C to 60°C</li> <li>Humidity: 10% to 90%, non-condensing</li> </ul>				

<sup>\*</sup> Based on CIE1976 test standards.

## **Preset Display Modes**



All information is subject to change without prior notice.

Standard Resolution		tion	PRO MP243X PRO MP243XP PRO MP243XW		PRO MP273A PRO MP273AP PRO MP273AW	
			HDMI™ DP	HDMI™ DP	D-Sub	
VGA	640x480	@60Hz	V	V		
		@67Hz	V	V		
		@72Hz	V	V		
		@75Hz	V	V		
Dos-Mode	720x480	@60Hz	V	V		
	720x576	@50Hz	V	V		
SVGA	800x600	@56Hz	V	V		
		@60Hz	V	V		
		@72Hz	V	V		
		@75Hz	V	V		
XGA	1024x768	@60Hz	V	V		
		@70Hz	V	V		
		@75Hz	V	V		
SXGA	1280x1024	@60Hz	V	V		
		@75Hz	V	V		
WXGA+	1440x900	@60Hz	V	V		
WSXGA+	1680x1050	@60Hz	V	V		
Full HD	1920x1080	@60Hz	V	V	V	
		@75Hz	V	V		
		@100Hz	V	V		
Video	480P		V	V	V	
Timing Resolution	576P		V	V	V	
	720P		V	V	V	
	1080P@60		V	V	V	

### **Troubleshooting**

#### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

#### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

#### The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

#### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

#### The icons, font or screen are fuzzy, blurry or have color problems.

- · Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

#### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

### **Safety Instructions**

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

#### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

#### **Battery**

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

#### **European Union:**



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

#### BSMI:



#### 廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

#### California. USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

#### **Environment**

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening: that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

### **TÜV Rheinland Certification**

### TÜV Rheinland Low Blue Light Certification

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.



- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eve level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Turn on the optional Low Blue Light function.

#### TÜV Rheinland Flicker Free Certification

• TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.



- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on internationally applicable standards or standards common within the industry and exceeds these requirements.
- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)

### **ENERGY STAR Certification**

ENERGY STAR is a program run by the U.S. Environmental Protection Agency (EPA) and U.S. Department of Energy (DOE) to promote energy efficiency. This product qualifies for ENERGY STAR in the "factory default" settings through which power savings will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption, which could exceed the limits necessary to qualify for ENERGY STAR rating.



For more information on ENERGY STAR, refer to https://www.energystar.gov/.

### Regulatory Notices

### **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive (2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

#### FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA [626] 913-0828 www.msi.com

#### WFFF Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



#### Chemical Substances Information

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at: https://csr.msi.com/global/index

#### RoHS Statement

#### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://csr.msi.com/global/Japan-JIS-C-0950-Material-Declarations

#### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

#### Turkey EEE Regulation

Conforms to the EEE Regulations of the Republic Of Turkey

#### Ukraine Restriction of Hazardous Substances

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of 10 March 2017, № 139, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

#### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

#### Green Product Features

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

### **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.



- · Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

#### Warning!

Overuse of screens is likely to affect eyesight.

#### Recommendations:

- 1. Take a 10-minute break for every 30 minutes of screen time.
- 2. Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

### Copyright and Trademarks Notice

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

#### **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.