



# Summit Series

Summit MS321UP (3DA9)

User Guide

# Contents

Getting Started	3
Package Contents	3
Installing the Monitor Stand	
Installing the Monitor Hood (Optional)	
Adjusting the Monitor	7
Monitor Overview	
Connecting the Monitor to PC	11
OSD Setup	
Navi Key	
Hot Key	12
OSD Menus	
P.I. (Productivity Intelligence)	14
Professional	
Image	
Input Source	
PIP/PBP	
Navi Key	21
Setting	
Specifications	
Preset Display Modes	
Troubleshooting	
Safety Instructions	27
TÜV Rheinland Certification	
Regulatory Notices	

#### Revision

V1.0, 2021/06

# **Getting Started**

This chapter provides you with the information on hardware setup procedures. While connecting devices, be careful in holding the devices and use a grounded wrist strap to avoid static electricity.

### **Package Contents**

Monitor	Summit MS321UP		
	Quick Start Guide		
Documentation	Registration Card		
	Warranty Card (Optional)		
	Stand with Screw(s)		
	Stand Base with Screw(s)		
	Stand Cover		
Accessories	Screw(s) for Wall Mount Bracket(s)		
	Cord Sleeve		
	Monitor Hood (Optional)		
	Power Cord		
	HDMI Cable (Optional)		
	DisplayPort Cable (Optional)		
Cables	USB Type-C Cable (Optional)		
	USB Upstream Cable (for USB Type-B Upstream Port) (Optional)		
	Y-type Audio Cable (for Combo Audio Jack) (Optional)		


# Important


- Contact your place of purchase or local distributor if any of the items is damaged or missing.
- Package contents may vary by country.
- The included power cord is exclusively for this monitor and should not be used with other products.

### Installing the Monitor Stand


# Important


- Place the monitor on a soft, protected surface to avoid scratching the display panel.
- Avoid pressing the monitor when installing the monitor stand.
- Do not use any sharp objects on the panel.
- The screw holes for installing the stand bracket can also be used for wall mount. Please contact your dealer for proper wall mount kit.

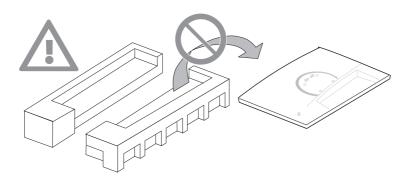

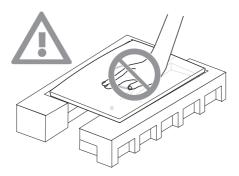


- 1. Leave the monitor in its protective foam packaging. Align and place the tabs on the top edge of the stand bracket into the slots on the back of the monitor.
- 2. Tighten the stand bracket with screws.
- 3. Connect the base to the stand and tighten the base screw to secure the base.
- **4.** Align and push the stand cover towards the stand bracket until it locks in place.
- **5.** Make sure the stand assembly is properly installed before setting the monitor upright.

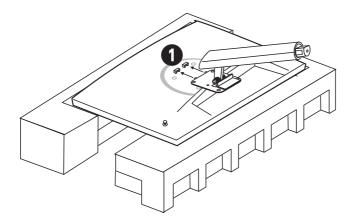

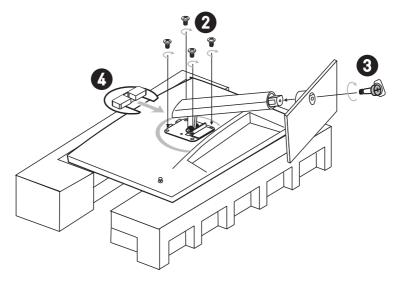

# Installing the Monitor Hood (Optional)

- 1. Unfold and align the hood to the monitor.
- 2. The magnetic hood will be attached to monitor automatically.

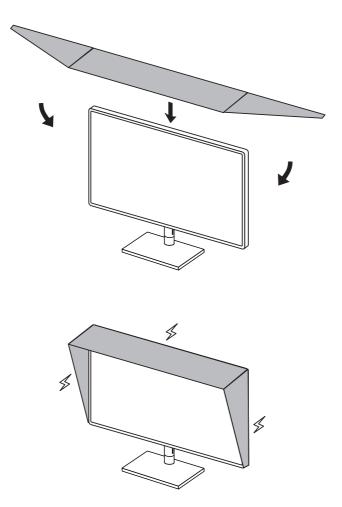



# Adjusting the Monitor

This monitor is designed to maximize your viewing comfort with its adjustment capabilities.


# Important

Avoid touching the display panel when adjusting the monitor.

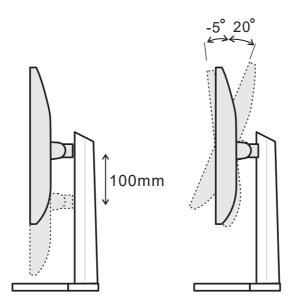

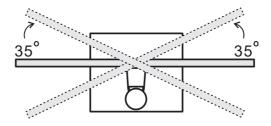

### **Monitor Overview**

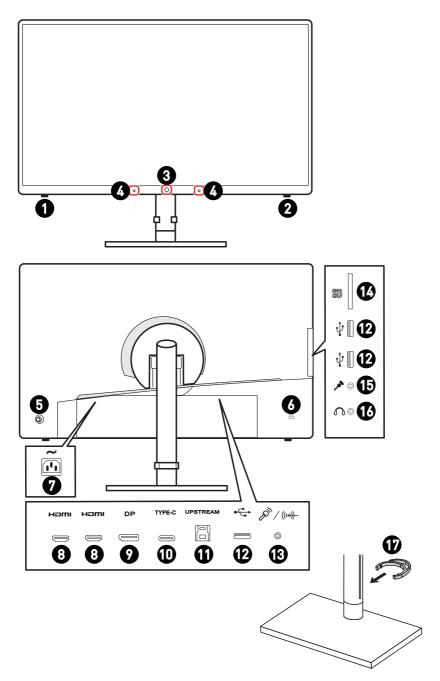

0	Масго Кеу
-	To activate MSI Productivity Intelligence OSD.
2	Power Button
3	Light Sensor
6	Microphone
6	Navi Key
6	Kensington Lock
9	Power Jack
8	
9	DisplayPort
0	<b>USB Type-C Port</b> This port supports DisplayPort Alternate (DP Alt) Mode and up to 5V/3A power delivery.
0	USB 3.2 Gen 1 Type B Upstream Port
	For USB Upstream Cable.
Ð	USB 3.2 Gen 1 Type A Port
B	Combo Audio Jack For Y-type Audio Cable. Important The optional Y-type Audio Cable can connect the PC and monitor. Once this
	cable is connected, the audio jacks on the monitor will be ready for use.


	Card Reader
⊕	Microphone Jack
ß	Headphone Jack
Ð	Cord Sleeve

# Important

All USB ports do not support recharging function under power saving modes.

# **Connecting the Monitor to PC**

- 1. Turn off your computer.
- 2. Connect the video cable from the monitor to your computer.
- 3. Connect the power cord to the monitor power jack. (Figure A)
- 4. Plug the power cord into the electrical outlet. (Figure B)
- 5. Turn on the monitor. (Figure C)
- 6. Power on the computer and the monitor will auto detect the signal source.

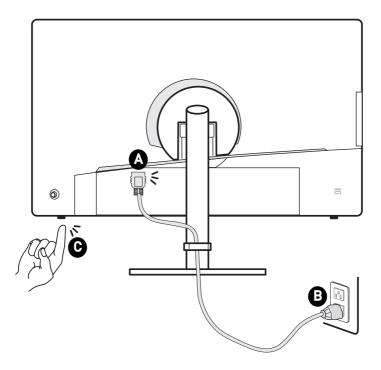

# **OSD Setup**


This chapter provides you with essential information on OSD Setup.

# Important

All information is subject to change without prior notice.

# Navi Key

The monitor comes with a Navi Key, a multi-directional control that helps navigate the On-Screen Display (OSD) menu.

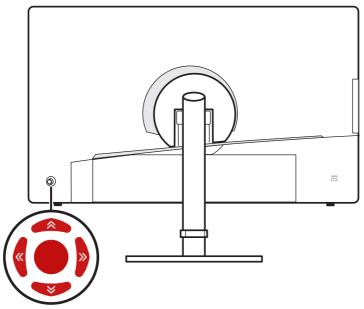

#### Up/Down/Left/Right:

- selecting function menus and items
- adjusting function values
- entering into/exiting from function menus

#### Middle:

- launching the On-Screen Display (OSD)
- entering submenus
- confirming a selection or setting

# Hot Key

- Users may enter into preset function menus by moving the Navi Key up, down, left or right when the OSD menu is inactive.
- Users may customize their own Hot Keys to enter into different function menus.

# **OSD Menus**

11151	3840x2160	60 HZ	HDR : On	Eco		HDMI 1
o <sup>o</sup> P.I.	AL	uto Brightness Co	ntrol	✓ OFF		
Professional	Ar	mbient RGB Light	OFF	Auto		
Image	So	ound Tune	OFF	Customize		
→ Input Source	KV	/M				
PIP/PBP						
🖆 Navi Key						
Setting						
FW 1.0			Exit	I Move	• <b>ē</b> •	

# Important

The following settings will be grayed out when HDR signals are received:

- Low Blue Light
- Brightness
- Contrast
- Color Temperature
- Auto Brightness Control
- Ambient RGB Light
- PIP/PBP
- Gray Level
- Local Dimming
- Gamma
- Saturation
- Hue
- Zoom In
- Mode

1st Level Menu	2nd/3rd Leve	el Menu	Description
Auto Brightness Control	OFF Auto		<ul> <li>Through the internal Light Sensor and AI (Artificial Intelligence) algorithm, this function</li> </ul>
	Customize	0-100	detects the ambient light and automatically sets the monitor to optimal brightness for users.
			• When Auto Brightness Control is set to Auto or Customize, the Brightness of OSD will be grayed out.
			• Customize allows users to adjust the auto brightness curve.
Ambient RGB	OFF		• Through the internal RGB Sensor
Light	ON		and AI algorithm, this function detects the ambient color temperature and presents the best light effects synced to the environment.
			• The Contrast and Color Temperature of OSD will be grayed out while this function is enabled.
Sound Tune	OFF		• Through the internal digital array
	ON		microphone and AI algorithm, this function enables Active Noise Cancellation (ANC) technology.
			• For Sound Tune to properly work, the computer needs to be connected to the USB Upstream port of the monitor.
KVM	Auto		Auto allows the monitor to
	Upstream		automatically switch between USB input sources, such as keyboards,
	Туре С		<ul> <li>mice or other USB devices.</li> <li>Users can also designate Upstream port or USB Type-C as the only USB signal source.</li> </ul>

# P.I. (Productivity Intelligence)

# Professional

1st Level Menu	2nd/3rd Lev	vel Menu	Description
Mode	User		• All items can be adjusted by users.
	sRGB		• Use Up or Down Button to select and preview mode effects.
	Adobe RGB		Press the Middle Button to confirm
	Display P3		and apply your mode type.
	Anti-Blue		
	Movie		
	Office		
	Black-White	9	
	Eco		
	Calibration	1	
	Calibration 2	2	
	Calibration 3	3	
Response Time	Normal		• Users can adjust Response Time in
	Fast		any mode.
	Fastest		
Refresh Rate	Location	Left Top	Location is adjustable in OSD
		Right Top	Menu. Press the Middle Button to confirm and apply your Refresh Rate
		Left Bottom Right Bottom	<ul><li>Location.</li><li>This monitor follows and works at the</li></ul>
			Operating System's preset Screen Refresh Rate.
		Customize	
	OFF		
	ON		

1st Level Menu	2nd/3rd Lev	vel Menu	Description
Alarm Clock	Location	Left Top	• Users can adjust Alarm Clock in any
		Right Top	<ul><li>Mode.</li><li>After setting the time, press the</li></ul>
		Left	Middle Button to activate the timer.
		Bottom	• Users have to manually restore their preset Alarm Clock after any AC
		Right Bottom	power loss and reconnection.
		Customize	
	OFF		
	15:00	00:01 ~	
	30:00	99:59	
	45:00		
	60:00		
Design	OFF		Design Assistance provides settings
Assistance Assistance	Black	that facilitate your design work.	
	Color	Blue	
	Ruler:	Inch	
	Center	Centimeter	
		Customize	
		Reset	
	Ruler:	Inch	
	Edge	Centimeter	
	Scale	Vertical	
		Horizontal	
	Reference		
Line		Horizontal	
	Grid		
		Point	
	Rule of Thirds 3D Motion Sickness Aid		
			]

1st Level Menu	2nd/3rd Level Menu		Description
Zoom In	Location	Center	• The center point will zoom in when
		Up-Left	this setting is enabled. Users can select their Location for Zoom In.
		Up-Right	• Design Assistance and Zoom In can be enabled at the same time
		Down-Left	• PIP/PBP and FreeSync should be set
		Down-	to OFF while Zoom In is enabled.
		Right	• Screen Size 1:1 should be set to Auto
	ON		while Zoom In is enabled.
	OFF		
Screen Size	Auto		• Users can adjust Screen Size in any
	4:3		mode, any resolution and any screen refresh rate.
	16:9 1:1		• If 1:1 is selected then PIP or PBP is
			enabled, Screen Size should be reset to Auto.
FreeSync	OFF		• FreeSync prevents screen tearing.
	ON		• Enabling FreeSync will affect PIP/ PBP, Screen Size 1:1 and Zoom In.

## Image

1st Level Menu	2nd/3rd Level Menu	Description
Brightness	0-100	• Default is 70.
Contrast	0-100	• Default is 70.
Sharpness	0-5	<ul><li>Sharpness improves clarity and details of images.</li><li>Default is 0.</li></ul>
Gray Level	0-20	• Default is 10.
Image	OFF	Image Enhancement enhances
Enhancement	Weak	image edges to improve their acutance.
	Medium	
	Strong	
	Strongest	

1st Level Menu	2nd/3rd Level N	lenu	Description
Low Blue Light	OFF ON		<ul> <li>Low Blue Light protects your eyes against blue light. When enabled, Low Blue Light adjusts the screen color temperature to a more yellow glow.</li> <li>When Mode is set to Anti-Blue, it is mandatory to enable Low Blue Light.</li> </ul>
Local Dimming	OFF ON		<ul> <li>This setting helps enhance the overall picture quality of dark scenes by dimming backlight zones to improve the contrast ratio in dark scenes.</li> <li>When this setting is set to ON, Brightness will be grayed out and Auto Brightness Control will be set to OFF.</li> <li>Enabling Local Dimming will affect visibility of mini OSD, such as Info. On Screen, Refresh Rate, Alarm Clock, Design Assistance, etc.</li> </ul>
Color Temperature	5000K 5500K 6500K 7500K 9300K 10000K Customization	R (0-100) G (0-100) B (0-100)	<ul> <li>Use Up or Down Button to select and preview effects.</li> <li>Press the Middle Button to confirm and apply your selection.</li> </ul>
Gamma	1.8       2.0       2.2       2.4       2.6	I	<ul> <li>Adjust this setting when the coloration of an original item is not accurately reflected in the monitor.</li> </ul>

1st Level Menu	2nd/3rd Level Menu	Description
Saturation	R (0-100)	• Default is 50.
	G (0-100)	
	B (0-100)	
	C (0-100)	
	M (0-100)	
	Y (0-100)	
Hue	R (0-100)	• Default is 50.
	G (0-100)	
	B (0-100)	
	C (0-100)	
	M (0-100)	
	Y (0-100)	

# Input Source

1st Level Menu	2nd Level Menu	Description	
HDMI1		• Users can adjust Input Source in any mode.	
HDMI2			
DP			
Туре С			
Auto Scan	OFF	• Users can use the Navi Key to select Input	
	ON	Source at below status:	
		<ul> <li>While "Auto Scan" is set to "OFF" with the monitor at power saving mode;</li> </ul>	
		<ul> <li>While "No Signal" message box is shown on the monitor.</li> </ul>	

# PIP/PBP

1st Level Menu	2nd/3rd Leve	l Menu	Description
OFF			• Enabling PIP (Picture in Picture)
PIP	Source	HDMI1	or PBP (Picture by Picture) will affect FreeSync, Response Time,
		HDMI2	Screen Size 1:1 and Zoom In.
		DP	Display Switch allows users to
		Туре С	switch between primary and secondary input sources.
	PIP Size	Small	While users choose Audio Switch,
		Medium	the Audio Source will be changed
		Large	to Digital.
	Location	Left Top	<ul> <li>If there is only one signal input, the Display Switch and Audio</li> </ul>
		Right Top	Switch will be grayed out.
		Left Bottom	
		Right Bottom	
		Customize	
	Display Switch		
	Audio Switch		
PBP	Mode 1		
	Mode 2		
	Source 1	HDMI1	
		HDMI2	
		DP	
		Туре С	
	Source 2	HDMI1	
		HDMI2	
		DP	
		Туре С	
	Display Switch		
	Audio Switch		

# Navi Key

1st Level Menu	2nd Level Menu	Description
Up / Down / Left	OFF	• Up Button default is Mode.
/ Right	Brightness	• Down Button default is Design Assistance.
	Mode	<ul> <li>Left Button default is KVM.</li> </ul>
	Design Assistance	<ul><li>Right Button default is Input Source.</li><li>All Navi Key items can be adjusted via</li></ul>
	Alarm Clock	OSD Menus.
	Input Source	
	PIP/PBP Mode	
	Refresh Rate	
	Info. On Screen	
	KVM	

# Setting

1st Level Menu	2nd Level Menu	Description			
Language	繁體中文	• Users have to press the Middle Button to			
	English	confirm and apply the Language setting.			
	Français	• Language is an independent setting. Users' own language setting will override			
	Deutsch	the factory default. When users set Reset			
	Italiano	to Yes, Language will not be changed.			
	Español				
	한국어				
	日本語				
	Русский				
	Português				
	简体中文				
	ไทย				
	Bahasa Indonesia				
	Türkçe				
	(More languages coming soon)				
Transparency	0~5	• Default is 0.			
OSD Time Out	5~30s	• Default is 20s.			
Audio Source	Analog	• Users can adjust Audio Source in any			
	Digital	Mode.			

1st Level Menu	2nd Level Menu	Description	
Power Button	OFF	<ul> <li>When set to OFF, users can press the power button to turn off the monitor.</li> </ul>	
	Standby	<ul> <li>When set to Standby, users can press the power button to turn off the panel and backlight.</li> </ul>	
Info. On Screen	OFF	• The information of the monitor status will	
	ON	be shown on the right side of the screen.	
HDMI CEC	OFF	HDMI CEC (Consumer Electronics Control)	
	ON	supports Sony PlayStation®, Nintendo® Switch™, Xbox Series X S consoles and various audio-visual devices that are CEC- capable.	
		• If HDMI CEC is set to ON:	
		<ul> <li>The monitor will automatically power on when the CEC device is turned on.</li> </ul>	
		<ul> <li>The CEC device will enter power saving mode when the monitor is turned off.</li> </ul>	
		<ul> <li>When Sony PlayStation<sup>®</sup>, Nintendo<sup>®</sup> Switch<sup>™</sup>, or Xbox Series X S console is connected, Pro Mode will be automatically set to Eco (Default) and can be adjusted to users' preferred modes later.</li> </ul>	
Reset	YES	• Users can Reset and restore settings to	
	NO	original OSD Default in any mode.	

# **Specifications**

Monitor	Summit MS321UP	
Size	32 inch	
Panel Type	IPS	
Resolution	3840 x 2160 @60Hz	
Aspect Ratio	16:9	
Brightness (nits)	400	
Contrast Ratio	1000:1	
Refresh Rate	60 Hz	
Response Time	GTG 4ms	
1/0	<ul> <li>HDMI Port x2</li> <li>DisplayPort x1</li> <li>USB Type-C (DP Alt Mode) x1 (Up to 5V/3A power delivery)</li> <li>USB 3.2 Gen 1 Type A Port x3</li> <li>USB 3.2 Gen 1 Type B Upstream Port x1</li> <li>Microphone Jack x1</li> <li>Headphone Jack x1</li> <li>Combo Audio Jack x1</li> <li>Card Reader x1</li> </ul>	
Local Dimming	8 Zones	
View Angles	178°(H) , 178°(V)	
DCI-P3*/ sRGB	95% / 136%	
Surface Treatment	Anti-glare	
Display Colors	1.07B (8 bit + FRC)	
Monitor Power Options	100~240Vac, 50~60Hz, 2A	
Power Consumption (Typical)	Power On < 42W Standby < 0.5W Power Off < 0.5W	
Adjustment (Tilt) -5° ~ 20°		
Adjustment (Swivel)	-35° ~ 35°	

Monitor		Summit MS321UP		
Adjustment (Height)		0 ~ 100 mm		
Kensington Lo	ck	Yes		
VESA Mountin	g	Plate Type: 100 x 100 mm		
		• Screw Type: M4 x 10 mm		
		• Thread Diameter: 4 mm		
		• Thread Pitch: 0.7 mm		
		<ul> <li>Thread Length: 10 mm</li> </ul>		
Dimension (W	x H x D)	727.1 x 460.78 x 235 mm		
Weight		9.7Kg (Net)		
		13.8Kg (Gross)		
Environment Operating Storage		• Temperature: 0°C ~ 40°C		
		• Humidity: 20% ~ 90%, non-condensing		
		• Altitude: 0 ~ 5000 m		
		• Temperature: -20°C ~ 60°C		
		• Humidity: 10% ~ 90%, non-condensing		

<sup>\*</sup> Based on CIE1976 test standards.

# **Preset Display Modes**

Standard	Resolution		ндмі	DP/Type-C
VGA	640x480	@60Hz	V	V
Dos-Mode	720x480	@60Hz	V	V
	720x576	@50Hz	V	V
SVGA	800x600	@56Hz	V	V
		@60Hz	V	V
XGA	1024x768	@60Hz	V	V
SXGA	1280x1024	@60Hz	V	V
WXGA+	1440x900	@60Hz	V	V
WSXGA+	1680x1050	@60Hz	V	V
Full HD	1920x1080	@60Hz	V	V
QHD	2560x1440	@60Hz	V	V
UHD	3840x 2160	@60Hz	V	V
Video	Video 480P Timing Resolution 576P		V	V
			V	V
	720P		V	V
	1080P 2160P		V	V
			V	V

РВР	Resolution		НДМІ	DP/Type-C
Mode 1	2560x2160	@60Hz	Х	V
	1280x2160	@60Hz	Х	V
Mode 2	1920x2160	@60Hz	V	V

# Troubleshooting

#### The power LED is off.

- Press the monitor power button again.
- Check if the monitor power cable is properly connected.

#### No image.

- Check if the computer graphics card is properly installed.
- Check if the computer and monitor are connected to electrical outlets and are turned on.
- Check if the monitor signal cable is properly connected.
- The computer may be in Standby mode. Press any key to activate the monitor.

#### The screen image is not properly sized or centered.

• Refer to Preset Display Modes to set the computer to a setting suitable for the monitor to display.

#### No Plug & Play.

- Check if the monitor power cable is properly connected.
- Check if the monitor signal cable is properly connected.
- Check if the computer and graphics card are Plug & Play compatible.

#### The icons, font or screen are fuzzy, blurry or have color problems.

- Avoid using any video extension cables.
- Adjust brightness and contrast.
- Adjust RGB color or tune color temperature.
- Check if the monitor signal cable is properly connected.
- Check for bent pins on the signal cable connector.

#### The monitor starts flickering or shows waves.

- Change the refresh rate to match the capabilities of your monitor.
- Update your graphics card drivers.
- Keep the monitor away from electrical devices that may cause electromagnetic interference (EMI).

# Safety Instructions

- Read the safety instructions carefully and thoroughly.
- All cautions and warnings on the device or User Guide should be noted.
- Refer servicing to qualified personnel only.

### Power

- Make sure that the power voltage is within its safety range and has been adjusted properly to the value of 100~240V before connecting the device to the power outlet.
- If the power cord comes with a 3-pin plug, do not disable the protective earth pin from the plug. The device must be connected to an earthed mains socket-outlet.
- Please confirm the power distribution system in the installation site shall provide the circuit breaker rated 120/240V, 20A (maximum).
- Always disconnect the power cord or switch the wall socket off if the device would be left unused for a certain time to achieve zero energy consumption.
- Place the power cord in a way that people are unlikely to step on it. Do not place anything on the power cord.
- If this device comes with an adapter, use only the MSI provided AC adapter approved for use with this device.

# Battery

Please take special precautions if this device comes with a battery.

- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
- Avoid disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Avoid leaving a battery in an extremely high temperature or extremely low air pressure environment that can result in an explosion or the leakage of flammable liquid or gas.
- Do not ingest battery. If the coin/button cell battery is swallowed, it can cause severe internal burns and can lead to death. Keep new and used batteries away from children.

#### **European Union:**



Batteries, battery packs, and accumulators should not be disposed of as unsorted household waste. Please use the public collection system to return, recycle, or treat them in compliance with the local regulations.

#### Taiwan:



#### 廢電池請回收

For better environmental protection, waste batteries should be collected separately for recycling or special disposal.

#### California, USA:



The button cell battery may contain perchlorate material and requires special handling when recycled or disposed of in California. For further information please visit: https://dtsc.ca.gov/perchlorate/

### Environment

- To reduce the possibility of heat-related injuries or of overheating the device, do not place the device on a soft, unsteady surface or obstruct its air ventilators.
- Use this device only on a hard, flat and steady surface.
- To prevent the device from tipping over, secure the device to a desk, wall or fixed object with an anti-tip fastener that helps to properly support the device and keep it safe in place.
- To prevent fire or shock hazard, keep this device away from humidity and high temperature.
- Do not leave the device in an unconditioned environment with a storage temperature above 60°C or below -20°C, which may damage the device.
- The maximum operating temperature is around 40°C.
- When cleaning the device, be sure to remove the power plug. Use a piece of soft cloth rather than industrial chemical to clean the device. Never pour any liquid into the opening; that could damage the device or cause electric shock.
- Always keep strong magnetic or electrical objects away from the device.
- If any of the following situations arises, get the device checked by service personnel:
  - The power cord or plug is damaged.
  - Liquid has penetrated into the device.
  - The device has been exposed to moisture.
  - The device does not work well or you can not get it working according to the User Guide.
  - The device has dropped and damaged.
  - The device has obvious sign of breakage.

# **TÜV Rheinland Certification**

# **TÜV Rheinland Low Blue Light Certification**

Blue light has been shown to cause eye fatigue and discomfort. MSI now offers monitors with TÜV Rheinland Low Blue Light certification to ensure users' eye comfort and well-being. Please follow the instructions below to reduce the symptoms from extended exposure to the screen and blue light.

- Place the screen 20 28 inches (50 70 cm) away from your eyes and a little below eye level.
- Consciously blinking the eyes every now and then will help to reduce eye strain after extended screen time.
- Take breaks for 20 minutes every 2 hours.
- Look away from the screen and gaze at a distant object for at least 20 seconds during breaks.
- Make stretches to relieve body fatigue or pain during breaks.
- Use the Reader/Anti-Blue mode or turn on the optional Low Blue Light function.

# TÜV Rheinland Flicker Free Certification

- TÜV Rheinland has tested this product to ascertain whether the display produces visible and invisible flicker for the human eye and therefore strains the eyes of users.
- TÜV Rheinland has defined a catalogue of tests, which sets out minimum standards at various frequency ranges. The test catalogue is based on

internationally applicable standards or standards common within the industry and exceeds these requirements.

- The product has been tested in the laboratory according to these criteria.
- The keyword "Flicker Free" confirms that the device has no visible and invisible flicker defined in this standard within the range of 0 - 3000 Hz under various brightness settings.
- The display will not support Flicker Free when Anti Motion Blur/MPRT is enabled. (The availability of Anti Motion Blur/MPRT varies by products.)





Low Blue Light (Software Solution)

# **Regulatory Notices**

# **CE Conformity**

This device complies with the requirements set out in the Council Directive on the Approximation of the Laws of the Member States relating to Electromagnetic Compatibility (2014/30/EU), Low-voltage Directive (2014/35/EU), ErP Directive (2009/125/EC) and RoHS directive

(2011/65/EU). This product has been tested and found to comply with the harmonized standards for Information Technology Equipment published under Directives of Official Journal of the European Union.

# FCC-B Radio Frequency Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if



F

not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the measures listed below:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

#### Notice 1

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

#### Notice 2

Shielded interface cables and AC power cord, if any, must be used in order to comply with the emission limits.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- **2.** This device must accept any interference received, including interference that may cause undesired operation.

#### MSI Computer Corp.

901 Canada Court, City of Industry, CA 91748, USA (626) 913-0828 www.msi.com

### WEEE Statement

Under the European Union ("EU") Directive on Waste Electrical and Electronic Equipment, Directive 2012/19/EU, products of "electrical and electronic equipment" cannot be discarded as municipal waste anymore and manufacturers of covered electronic equipment will be obligated to take back such products at the end of their useful life.



# **Chemical Substances Information**

In compliance with chemical substances regulations, such as the EU REACH Regulation (Regulation EC No. 1907/2006 of the European Parliament and the Council), MSI provides the information of chemical substances in products at:

https://storage-asset.msi.com/html/popup/csr/evmtprtt\_pcm.html

# **RoHS Statement**

#### Japan JIS C 0950 Material Declaration

A Japanese regulatory requirement, defined by specification JIS C 0950, mandates that manufacturers provide material declarations for certain categories of electronic products offered for sale after July 1, 2006.

https://storage-asset.msi.com/html/popup/csr/cemm\_jp.html

#### India RoHS

This product complies with the "India E-waste (Management and Handling) Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

#### **Turkey EEE Regulation**

Conforms to the EEE Regulations of the Republic Of Turkey.

#### **Ukraine Restriction of Hazardous Substances**

The equipment complies with requirements of the Technical Regulation, approved by the Resolution of Cabinet of Ministry of Ukraine as of December 3, 2008 N $^{o}$  1057, in terms of restrictions for the use of certain dangerous substances in electrical and electronic equipment.

#### Vietnam RoHS

As from December 1, 2012, all products manufactured by MSI comply with Circular 30/2011/TT-BCT temporarily regulating the permitted limits for a number of hazardous substances in electronic and electric products.

### **Green Product Features**

- Reduced energy consumption during use and stand-by
- Limited use of substances harmful to the environment and health
- Easily dismantled and recycled
- Reduced use of natural resources by encouraging recycling
- Extended product lifetime through easy upgrades
- Reduced solid waste production through take-back policy

### **Environmental Policy**

- The product has been designed to enable proper reuse of parts and recycling and should not be thrown away at its end of life.
- Users should contact the local authorized point of collection for recycling and disposing of their end-of-life products.
- Visit the MSI website and locate a nearby distributor for further recycling information.
- Users may also reach us at gpcontdev@msi.com for information regarding proper disposal, take-back, recycling, and disassembly of MSI products.

### Warning!

Overuse of screens is likely to affect eyesight.

#### **Recommendations:**

- 1. Take a 10-minute break for every 30 minutes of screen time.
- Children under 2 years of age should have no screen time. For children aged 2 years and over, screen time should be limited to less than one hour per day.

### **Copyright and Trademarks Notice**

Copyright © Micro-Star Int'l Co., Ltd. All rights reserved. The MSI logo used is a registered trademark of Micro-Star Int'l Co., Ltd. All other marks and names mentioned may be trademarks of their respective owners. No warranty as to accuracy or completeness is expressed or implied. MSI reserves the right to make changes to this document without prior notice.

### **Technical Support**

If a problem arises with your product and no solution can be obtained from the user's manual, please contact your place of purchase or local distributor. Alternatively, please visit https://www.msi.com/support/ for further guidance.

