


6. WIRED SETUP 2/2

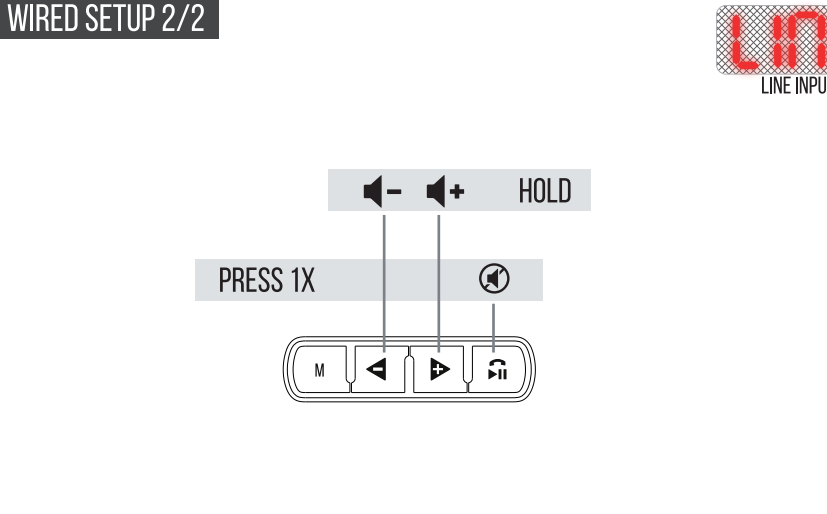


LINE INPUT

PRESS 1X

← → HOLD

M ← →

7. PLAY USB OR SD CARD

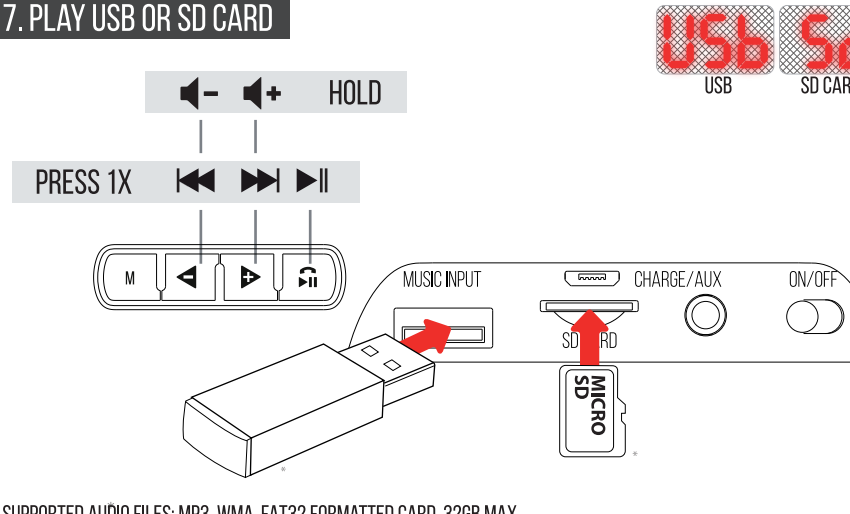

USB SD CARD

PRESS 1X

← → HOLD


M ← →

MUSIC INPUT CHARGE/AUX ON/OFF

SUPPORTED AUDIO FILES: MP3, WMA, FAT32 FORMATTED CARD. 32GB MAX.

* not included

8. PHONE CALL

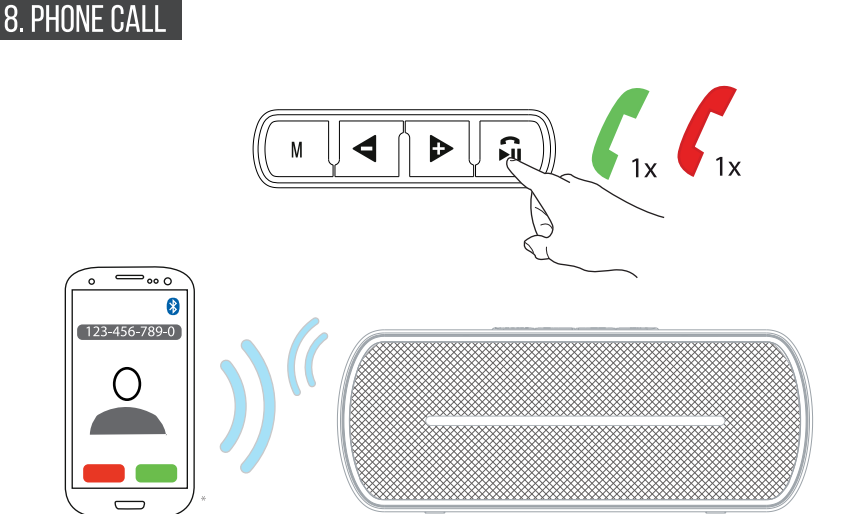


M ← →

1x 1x

* not included

9. HEADPHONE



HEADPHONE

MUSIC INPUT CHARGE/AUX ON/OFF

SD CARD

FAQ

FREQUENTLY ASKED QUESTIONS

[HTTP://WWW.TRUST.COM/21704/FAQ](http://www.trust.com/21704/faq)

* not included

Trust International BV - Laan van Barcelona 600 - 3317DD, Dordrecht, NL © 31-08-2016 Trust All rights reserved.



Trust URBAN

[USER GUIDE]
WIRELESS SPEAKER

1. CHARGE SPEAKER

USB

MUSIC INPUT CHARGE/AUX ON/OFF
SD CARD

* not included

2. WIRELESS SETUP 1/2

bt BLUETOOTH

bt - bt - BLUETOOTH PAIRING
bt bt bt bt BLUETOOTH PAIRED

MUSIC INPUT CHARGE/AUX ON/OFF
SD CARD

3. WIRELESS SETUP 2/2

① Settings

② Bluetooth

③ Trust SPK-16

WIRELESS TROUBLESHOOTING

no devices found

6 SEC

Trust SPK-16

4. PLAY MUSIC WIRELESS

Trust

← - + → HOLD

PRESS 1X ⏪ ⏩ ⏸

5. WIRED SETUP 1/2

LINE INPUT

①

②

③

MUSIC INPUT CHARGE/AUX ON/OFF
SD CARD

* not included