



# UniFi<sup>®</sup> VIDEO

IP Camera/NVR  
Management System

Software Release: 3.9

USER GUIDE



# Table of Contents

---

<b>Chapter 1: Installation</b> .....	1
Overview .....	1
Supported Products .....	1
System Requirements .....	1
Hardware Installation .....	1
Software Installation .....	1
UniFi Video Setup .....	2
Launching UniFi Video .....	4
Non-Cloud UniFi Video Setup .....	4
Enabling Cloud Access from Existing Installations .....	6
<b>Chapter 2: Cameras</b> .....	7
Camera Details Window .....	8
<b>Chapter 3: Map</b> .....	13
Defining a Map .....	13
<b>Chapter 4: Live View</b> .....	15
Create a New View .....	15
Edit a View .....	16
<b>Chapter 5: Timeline</b> .....	17
Selecting a Clip for Playback .....	17
Playback .....	18
<b>Chapter 6: Recordings</b> .....	21
Viewing Recordings .....	22
<b>Chapter 7: Alerts</b> .....	23
Alerts Home Page .....	23
<b>Chapter 8: Users</b> .....	25
User Details .....	25
<b>Chapter 9: Settings</b> .....	29
NVR Settings .....	30
<b>Appendix A: Mobile App</b> .....	33
UniFi Video App for iOS .....	33
UniFi Video App for Android .....	39

**Appendix B: Standalone Mode** ..... 45

- Using Standalone Mode ..... 45
- Configuring the Camera ..... 48
- Standalone Mode from UniFi Video ..... 48

**Appendix C: Contact Information** ..... 51

- Ubiquiti Networks Support ..... 51



# Chapter 1: Installation

## Overview


UniFi Video® is a powerful and flexible, integrated IP video management surveillance system designed to work with Ubiquiti's UniFi Video Camera product line. UniFi Video has an intuitive, configurable, and feature-packed user interface with advanced features such as motion detection, auto-discovery, user-level security, storage management, reporting, and mobile device support.

The UniFi Video software comes pre-installed on the UniFi NVR and requires no additional software installation. This chapter provides instructions for users who are not using the UniFi NVR and wish to install the UniFi Video software on a computer or other hardware platform that meets the system requirements listed below.

## Supported Products

The following models of the UniFi® Video Camera are supported by v3.9:

- UniFi Video Camera G3 (UVC-G3, UVC-G3-AF)
- UniFi Video Camera G3 Dome (UVC-G3-DOME)
- UniFi Video Camera G3 Micro (UVC-G3-MICRO)
- UniFi Video Camera G3 Pro (UVC-G3-PRO)
- UniFi Video Camera (UVC)
- UniFi Video Camera Pro (UVC-Pro)
- UniFi Video Camera Dome (UVC-Dome)
- UniFi Video Camera Micro (UVC-Micro)

 **Note:** UniFi Video 3.2.0 and above does not support airCams.

## System Requirements

- 64-bit Debian 7.0 (or above), Ubuntu v14.04 or v16.04, or Microsoft Windows 8/7 system with an Intel or compatible 1.86 GHz (or above) processor with a minimum of 2GB RAM
- Mobile: iOS or Android
- Java Runtime Environment 1.7 or newer
- Web Browser: Google Chrome

## Hardware Installation

Ensure that each camera on your network is running the latest version of the firmware. The latest firmware (and other UniFi Video downloads) can be found online at:

**[www.ubnt.com/download](http://www.ubnt.com/download)**

Follow the directions in the Quick Start Guide that accompanied your UniFi Video Camera to install your cameras.

## Software Installation


Download the latest version of the UniFi Video software at: **[www.ubnt.com/download](http://www.ubnt.com/download)**

Then follow the instructions for your system.


## Windows Installation

To install the software on Windows:


1. Run the downloaded UniFi Video installer file as Administrator. You may be asked to allow the program to make changes to the computer you're installing it on. If so, click **Yes**.
2. When the *Ubiquiti UniFi Video Setup* wizard starts, click **Next** to continue the installation.

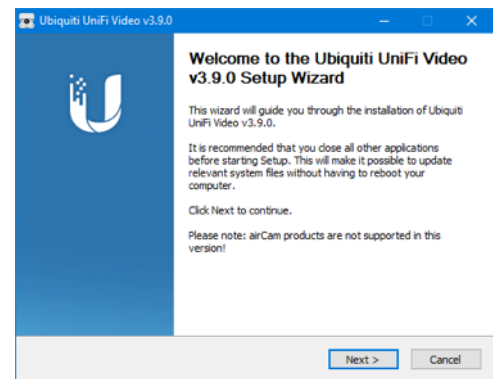

3. Click **I Agree** to accept the license agreement and continue with setup wizard.

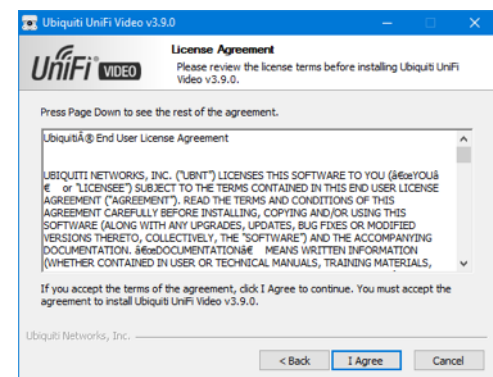

4. The *UniFi Video Setup* wizard will install files on your system. When it is finished, click **Next**.

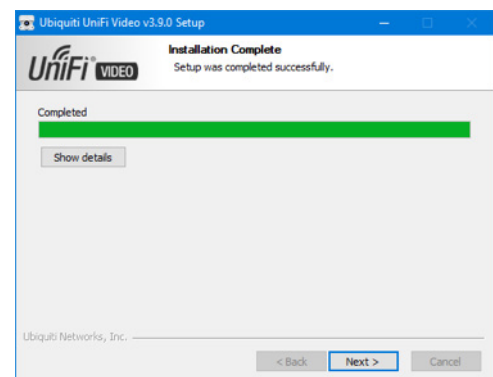

- If your computer doesn't have Java 1.7 or 1.8 software installed, you will be prompted to install it. Click **Install** to continue.



- Click **Finish** the installation. This will start the UniFi Video service.

## Linux Installation

To install the software on linux, enter the following:

```
sudo dpkg -i <installation_file>
```

where *installation\_file* is the file you downloaded from [www.ubnt.com/download](http://www.ubnt.com/download)

## Mobile Installation

For detailed information on installing and using the mobile app, refer to **"Mobile App" on page 33.**

## UniFi Video Setup


Follow these instructions to set up the UniFi Video software for cloud access:

- Open the Chrome browser application on any computer on the same network as the installed software.
- Enter <https://video.ubnt.com> in your browser's address field. Press **Enter** (PC) or **Return** (Mac).
- Enter the *Username* and *Password* for your Ubiquiti account. Click **Sign In**.




**Note:** If you do not have a Ubiquiti account, create one as follows:


- Click **Register**.
- Enter the requested information. Click **Register**.
- A verification e-mail will be sent to the e-mail account you specified. Open the e-mail and click the link to verify your account.

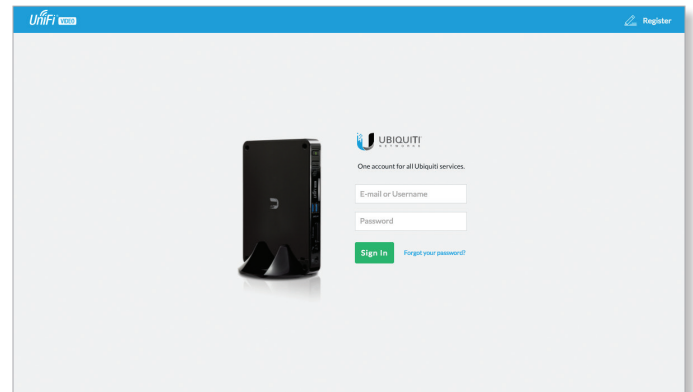


- Click **Get Started** to begin setup of your NVR.

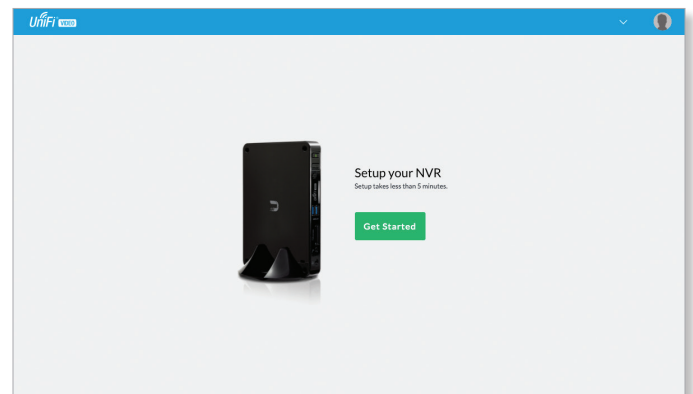


5. The setup wizard will search for the NVR on your network.

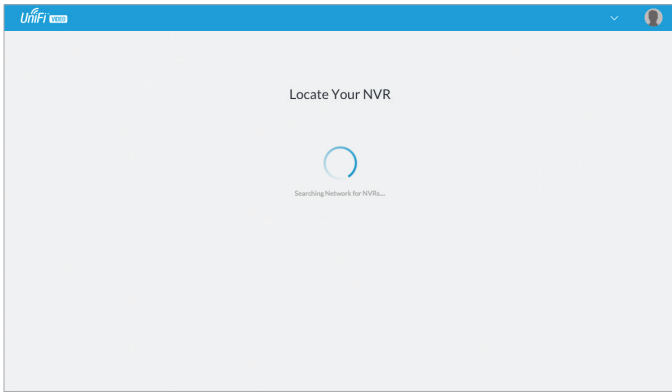


6. If your NVR cannot be found, the wizard displays "Unable to Locate NVR". Verify that the NVR is connected to your network and click **Rescan** to try again.

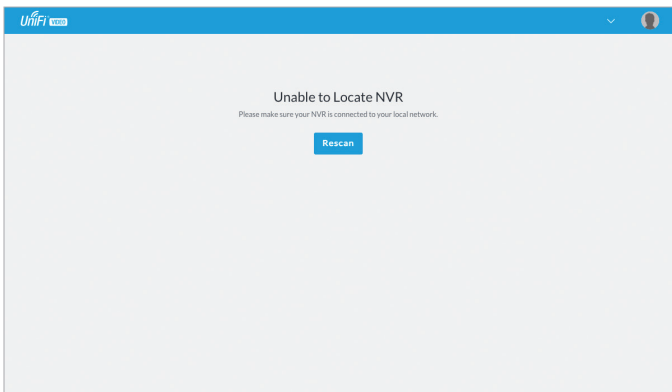


7. The *NVR Discovered* window will appear, listing any NVRs that were discovered. Select your NVR and click **Continue**.

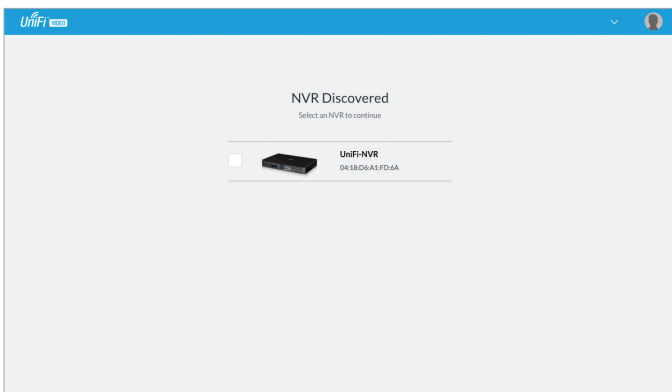


8. The *Setup NVR* window will appear:
  - a. Enter a name for the NVR.
  - b. Specify your time zone.
  - c. Select **I agree to the Terms of Service** (click **Terms of Service** to view the Terms of Service).
  - d. Click **Next**.

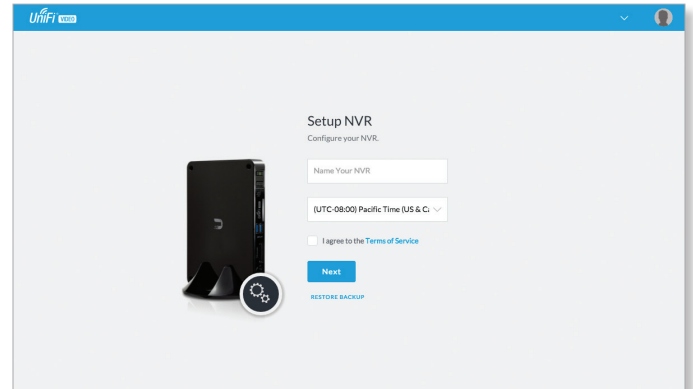

9. Create the local admin account by entering a *Name*, *Username*, and *Password* (enter twice to confirm). This information will be used to log in and access the UniFi Video Controller system. Click **Next**.

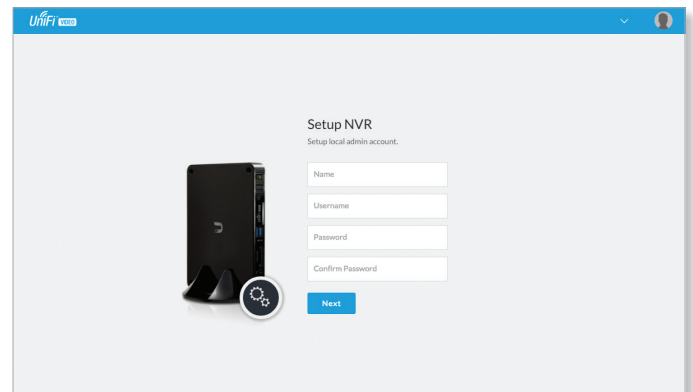

10. The *Setup Cameras* window will appear, displaying a randomly generated password (you can change this password later in the *Settings* section). Click **Continue**.

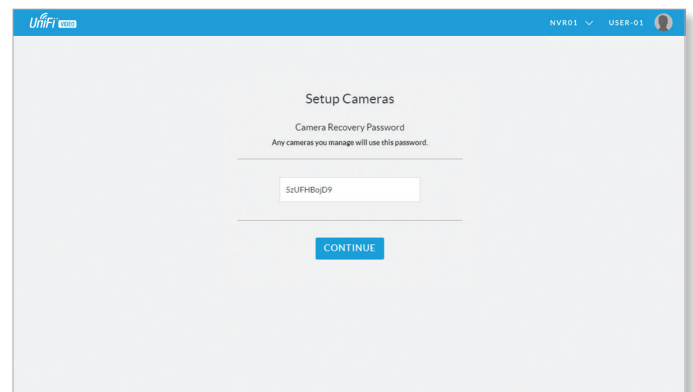


11. When the firmware update is complete, "Setup Complete" will be displayed. Click **Go to Cameras**.

## Launching UniFi Video

After you have set up UniFi Video on your NVR, launch UniFi Video from the cloud as follows:

1. Open the Chrome browser application on a computer with an Internet connection.
2. Enter **https://video.ubnt.com** in your browser's address field. Press **Enter** (PC) or **Return** (Mac).
3. Enter the *Username* and *Password* for your Ubiquiti account. Click **Sign In**.
4. UniFi Video will connect to your NVR and open.

 **Note:** You can also launch UniFi Video from a computer on the same network as the NVR:

1. Open the Chrome browser application on a computer on the same network as the NVR.
2. Enter **https://<NVR\_address>** in your browser's address field, where *NVR\_address* is the NVR's IP address. Press **Enter** (PC) or **Return** (Mac).
3. Enter the *Username* and *Password* for your admin account on the NVR. Click **Sign In**.
4. The UniFi Video application will open.

Proceed to the appropriate chapter for information on using the UniFi Video Management software:

- **[“Cameras” on page 7](#)**
- **[“Map” on page 13](#)**
- **[“Live View” on page 15](#)**
- **[“Timeline” on page 17](#)**
- **[“Recordings” on page 21](#)**
- **[“Alerts” on page 23](#)**
- **[“Users” on page 25](#)**
- **[“Settings” on page 29](#)**

## Non-Cloud UniFi Video Setup

This section describes how to launch and set up UniFi Video using the software installed in **[“Software Installation” on page 1](#)**.


### Windows Launch

Launch includes two steps:

1. Start the UniFi Video service. If you selected *Start UniFi Video after installation* when you installed the software, the UniFi Video service will be started automatically. If you didn't select the option to start the UniFi Video service automatically, you can start it using one of the following two methods:

#### - Start Menu

- a. Click the *Start* menu and select **All Programs** from the pop-up menu.
- b. Scroll down to *Ubiquiti UniFi Video* and click the folder name once to expand its contents.
- c. Select **Ubiquiti UniFi Video**. This will launch the *UniFi Video* tray icon in the bottom right corner of the Windows taskbar.

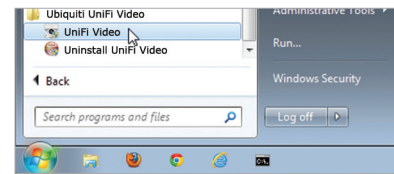

#### - Desktop Icon


- a. Double-click the icon shown below to start the UniFi Video service.



- b. The UniFi Video tray icon will appear in the bottom right corner of the Windows taskbar.




2. Click the *UniFi Video* tray icon and select **Open in Browser** from the pop-up menu.

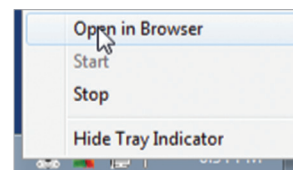


The UniFi Video software will open in your browser. The first time you use the software, set up the NVR as detailed in **[“Windows UniFi Video Setup” on page 5](#)**.

## Windows UniFi Video Setup


1. If you receive a security warning, click **Advanced**, and then click **Proceed to <NVR IP address>**.

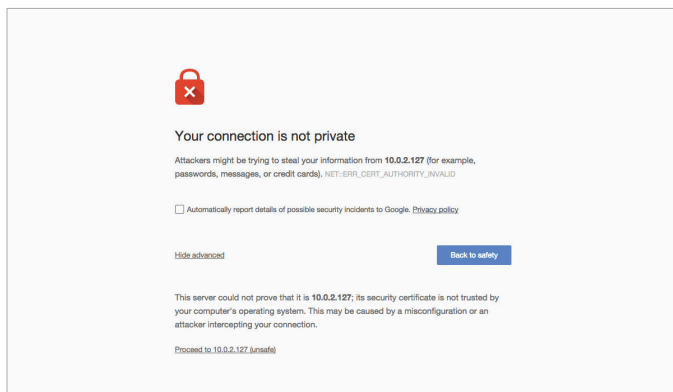


2. The *Setup NVR* window will appear:
  - a. Enter a name for the NVR.
  - b. Specify your time zone.
  - c. Select **I agree to the Terms of Service** (click **Terms of Service** to view the Terms of Service).
  - d. Click **Next**.

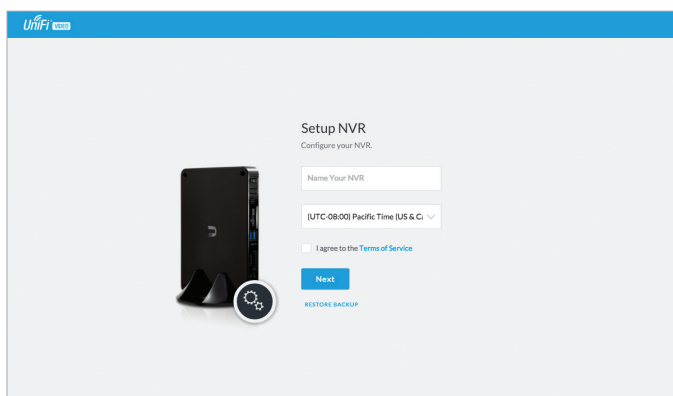

3. Create an Admin account by entering a *Name*, *Username*, and *Password* (enter twice to confirm). This information will be used to log in and access the UniFi Video Controller system. Click **Next**.

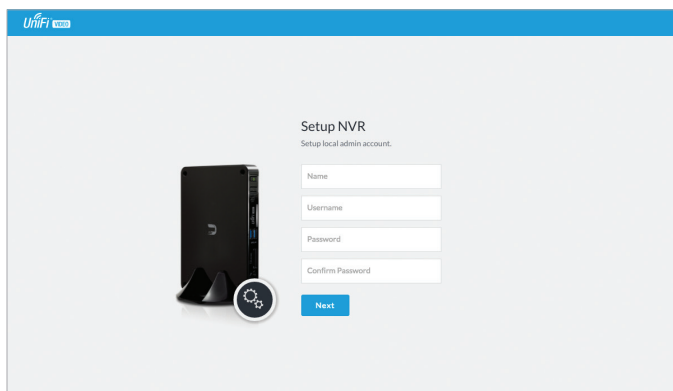

4. The *Setup Cameras* window will appear. Enter a password (twice to confirm) to be used to manage your cameras.

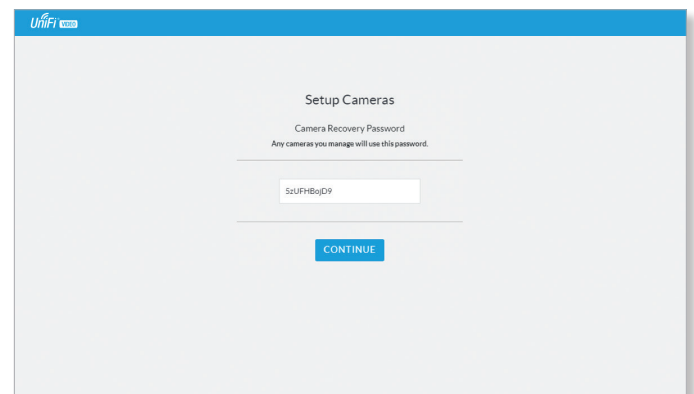

5. When the firmware update is complete, "Setup Complete" is displayed. Click **Go to Cameras**. Proceed to the appropriate chapter for information on using the UniFi Video Management software:

- **"Cameras" on page 7**
- **"Map" on page 13**
- **"Live View" on page 15**
- **"Timeline" on page 17**
- **"Recordings" on page 21**
- **"Alerts" on page 23**
- **"Users" on page 25**
- **"Settings" on page 29**

## Enabling Cloud Access from Existing Installations

If you have upgraded to UniFi Video version 3.8 from an older version, follow these instructions to enable cloud access to your UniFi Video Management system:


1. Launch the UniFi Video Management software, as described in **“Launching UniFi Video” on page 4**.
2. Click **Settings** to open the *Settings* page.
3. Click **Connect to My Ubiquiti Account**.



**Note:** If you do not have a Ubiquiti account, you must create one before continuing. Create a new Ubiquiti account as follows:


1. Go to **<https://video.ubnt.com>**
  2. Click **Register**.
  3. Enter the requested information. Click **Register**.
  4. A verification e-mail will be sent to the e-mail account you specified in the previous step. Open the e-mail and click the link to verify your account.
5. Enter your *Username* and *Password* of your Ubiquiti account to connect the account to the NVR.
  6. You will now be able to access your UniFi Video Management system from **<https://video.ubnt.com>**



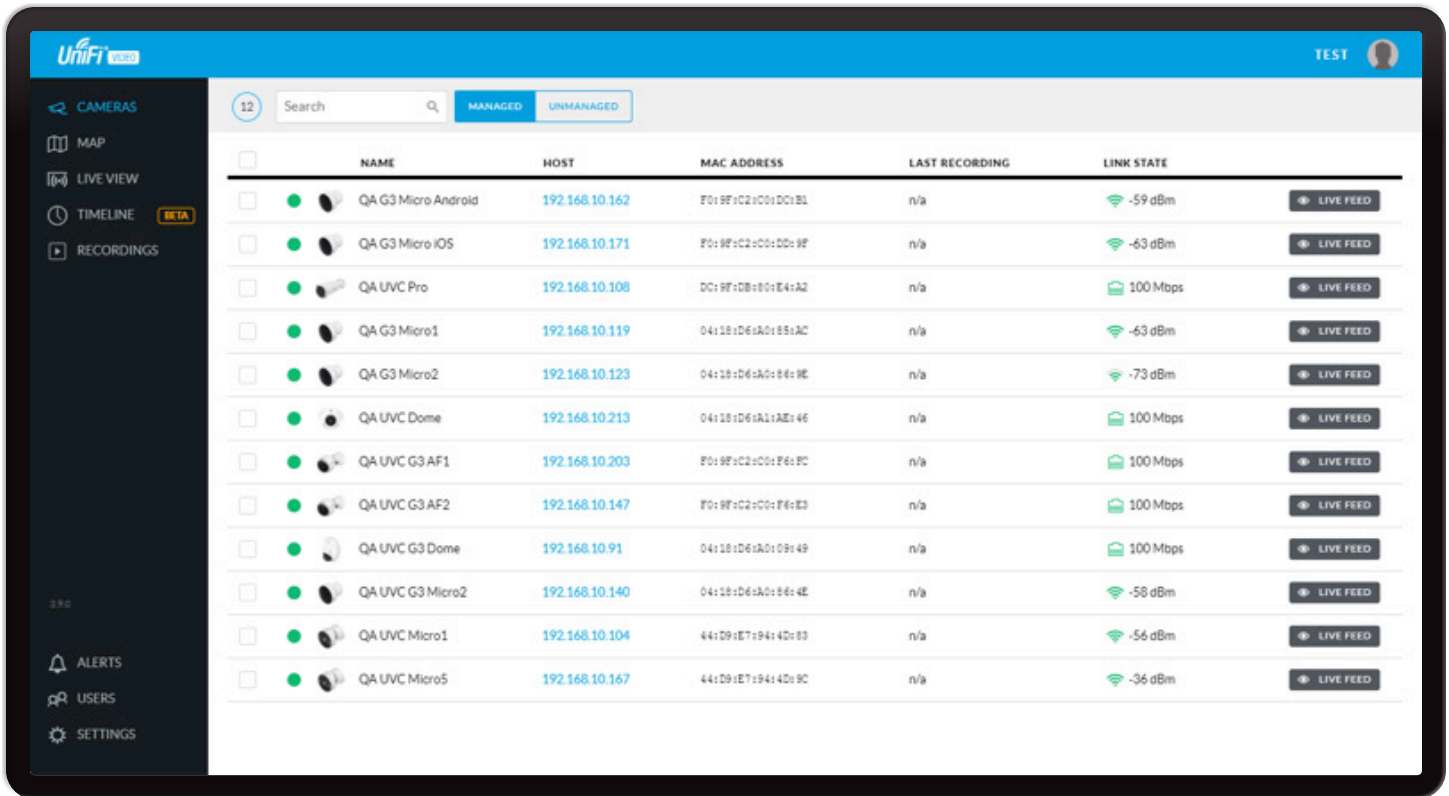

## Chapter 2: Cameras

 On the *Cameras* page, you have the option to view all cameras (default), a selected group of cameras, or a single camera, depending on your search criteria. The *Search* option will narrow down the list of cameras displayed as you type characters into the *Search* text field, eliminating the ones that don't match your search criteria. The searchable columns are *Name*, *Host*, and *MAC Address*.




Each camera will be categorized as *Managed* or *Unmanaged* and the number in the upper left corner indicates how many cameras you have per category. In this example, there are 12 *Managed* cameras.

Cameras listed under the *Managed* tab have been added to the UniFi Video management system. Cameras listed under the *Unmanaged* tab have not been configured or added to the UniFi Video management system yet, or have been unmanaged.

To change the status of a camera from *Unmanaged* to *Managed*, follow these steps:

 1. Click **Unmanaged** to see a list of unmanaged cameras.
2. Click a camera to view its details. Refer to **“Configuration” on page 12**.
3. Enter the username and password for the selected camera and click **Manage**.



Once you've finished adding the unmanaged cameras, click **Managed** to return to the *Managed* cameras view.

NAME	HOST	MAC ADDRESS	LAST RECORDING	LINK STATE
------	------	-------------	----------------	------------

For each camera, the *Managed* camera view lists the *Name*, *Host* (address), *MAC Address*, *Last Recording*, and *Link State*. Click a column heading to sort the list by that column; click again to reverse the sort order.

**Name** Displays the local device name and a thumbnail image of the camera.

**Host** Displays the local host IP address assigned to each specific camera.


**MAC Address** Displays the MAC Address of the camera. Each camera has its own unique hardware address.

**Last Recording** Displays how long it has been since a camera recorded something based on its recording mode. Refer to **“Recording” on page 11**.

**Link State** Displays the following information for the currently selected camera:


- Connection type:
  - Wired or Wireless
  - Green icon: Camera is connected
  - Gray icon: Camera is disconnected
- Connection state: *Connected*, *Disconnected*, *Rebooting*, *Unauthenticated*
- Connection speed in Mbps (wired cameras only)
- Connection quality in dBm (wireless cameras only)

**Live Feed** Click  **LIVE FEED** to view a live feed of the selected camera.

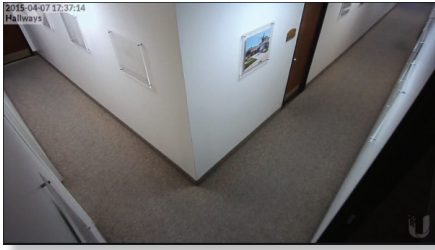


## Camera Details Window

Click a camera to view the details window and display its *IP Address*, *MAC Address*, *Model Name*, *Uptime*, *Connected Time*, *Last Motion At*, and *Status*. To select more than one camera, click the checkbox next to each camera. To select a range of cameras, press and hold *Shift*, and then click the first and last cameras in the range.

 **Note:** To select a camera, do not click the *Host* column (doing so brings up the camera's standalone web UI, described in [“Using Standalone Mode” on page 45](#)).

The *Camera Details* window also has four clickable tabs: *Video*, *Recording*, *Stats*, and *Manage*.

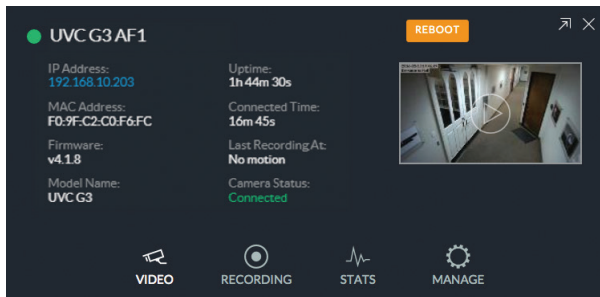

**IP Address** Displays the local IP address of the camera.

**MAC Address** Displays the MAC (Media Access Control) Address of the camera. Each camera has its own unique hardware address.

**Firmware** Displays the version of the firmware currently installed on the camera.

**Model Name** Displays the model name of the camera.

**Uptime** Displays the amount of time that a camera has been running without interruption or since last reboot.


**Connected Time** Displays the amount of the time the camera has been connected.

**Last Recording At** Displays the last date and time that a recording took place for the camera you are currently viewing.

**Status** Displays the current status of the camera. Indicators are *Connected*, *Disconnected*, or *Rebooting*. If *Disconnected* is displayed, a message summarizing the reason for the disconnection is also displayed. The following table describes these messages in detail:

Message	Detailed Description
Error Conditions	
Camera Database Failure	UniFi Video database corruption was detected during a camera firmware upgrade.
Unauthorized Access	The camera username and/or password were rejected when attempting to manage a camera.
Authentication Failed	The camera and/or the controller failed during their mutual authentication process.
Upgrade Failed	The camera firmware upgrade failed.
Connection Lost	The controller lost its connection with the camera.
Provisioning Failed	The controller failed to provision the camera during the camera management process.
Video Settings Failed	The controller failed while applying video settings during the camera management process.
Password Sync Failed	The controller failed while updating the camera password.
Analytics Settings Failed	The controller failed while applying analytics settings during the camera management settings.
Network Status Settings Failed	The controller failed while applying network settings during the camera management settings.
Controller Bad Request	The controller sent a bad request to the camera.
Connection Timeout	The connection timed out while the controller was trying to send the camera a message.
Camera Error	An internal camera error was reported back to the controller.
Firmware Not Supported	The controller detected an unsupported firmware installed on a camera it is trying to manage.
No Route To Host	The controller is unable to reach the camera from its IP address.
Certificate Mismatch	The controller has detected a certificate mismatch during the authentication process.
Informational	
Upgrade In Progress	The controller disconnected the camera due to the camera firmware upgrade being initiated.
Rebooting	The controller disconnected the camera due to the user rebooting the camera from the UniFi Video web application.
Updating Password	The controller has requested a password update to the camera.
Camera Umanaged	The controller un-managed the camera.
Camera Discovered	The controller discovered a camera.
Camera Initialized	The controller is initialized and can be managed.

**Reboot** (Functional for administrators only.) Click **Reboot** to reboot the camera. The camera's status will temporarily change from *Connected* to *Rebooting*, and then *Disconnected* before coming back online as *Connected*. Rebooting a camera will also reset the *Uptime* and *Connected Time* fields in the details window.


**Hide Details** Click  to hide the camera details. Click it again to reveal the camera details.

**Exit Camera Detail** Click  to close and exit the *Camera Details* window.

**Live Stream** Click the image thumbnail in the upper-right corner to display the live stream window of the selected camera.



## Live Stream Window

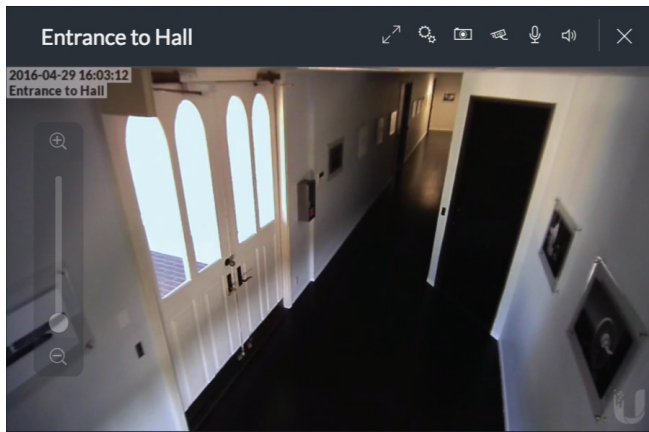


The *Live Stream* window above has a menu bar in the upper right corner that allows you to view the camera feed in *Full Screen*, adjust the *Image Settings*, take a *Snapshot* of the live feed, change the *Camera Resolution*, and adjust the volume controls for audio input and output.


**Full Screen** Click to view the live stream window in full screen. Press **esc** on your keyboard to exit full screen mode and return to the window view.

**Image Settings** Click to view the imaging drop-down menu that allows you to change the live view image settings for each of the following:

- **Brightness** Adjust the brightness of the live view image by dragging the slider control to the left or right.
- **Contrast** Adjust the contrast of the live view image by dragging the slider control to the left or right.
- **Hue** Adjust the hue of the live view image by dragging the slider control to the left or right.
- **Saturation** Adjust the saturation of the live view image by dragging the slider control to the left or right.
- **Denoise** Adjust the noise level of the live view image by dragging the slider control to the left or right.
- **Sharpness** Adjust the sharpness of the live view image by dragging the slider control to the left or right.
- **WDR** Adjust the WDR (Wide Dynamic Range) sensitivity of the live view image by dragging the slider control to the left or right. WDR helps create better image and video detail in frames that contain both light and dark areas that would otherwise be over- or underexposed.
- **AE Mode** Choose AE (*Auto Exposure*) mode for the live view images by selecting **Normal**, **Anti-Flicker for 60 Hz light**, or **Anti-Flicker for 50 Hz light** from the drop-down menu. The default is *Normal*.

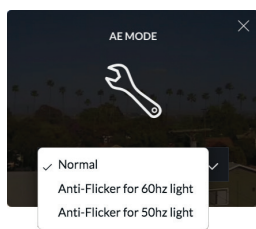

- **Orientation** Change the way an image is displayed in the live stream window by selecting **Normal**, **Flip Horizontally**, **Flip Vertically**, or **Flip Both** from the drop-down menu. The default setting is *Normal*.

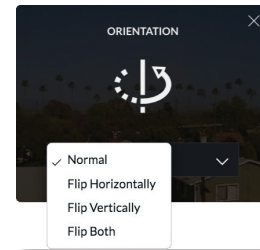


- **Infrared** The infrared filter can be changed for the live view image by selecting *On* or *Off* from the drop-down menu. The default setting is *Auto*.
- **Zoom** Adjust the optical zoom (if equipped) from 1x up to 3x
- **Focus** Adjust the focus mechanism (if equipped)

**Snapshot** Click to take a snapshot of the live video image and save it to a file. The file name will have the following format: `<camera name><date and time>.jpg`

**Camera Resolution** Click to set the live view image resolution to *High*, *Medium*, or *Low*. The default setting is *Auto*, which allows the camera to choose the best supported setting automatically.

**Microphone Volume** (Option available for cameras that support audio.) Click to adjust the microphone volume used to record audio input for a recording. You can adjust the volume by dragging the slider horizontally.

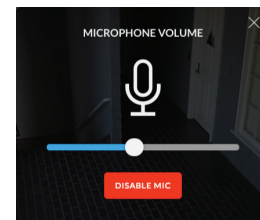

- **Disable Mic** To disable the microphone, click **Disable Mic**, and then click **Yes, Disable Microphone** to confirm.



**Note:** To re-enable the microphone, the camera must be set to its factory default settings.



**Note:** UniFi Video Cameras can be reset to factory defaults using one of the following methods:

- **Camera's WEB UI**
- **SSH**
- **Camera's Physical Reset Button**

**Audio Output** (Option available for cameras that support audio.) Click to mute or unmute the live view audio feed of the camera.

**Close** Click to close the *Camera Details* window and exit back to the home screen.


## Video

### Resolution

Resolution in this section refers to video output quality expressed in total pixels: image length (horizontal) x image height (vertical).



**Override Suggested Settings** Click to enable or disable manual override of the selected camera's resolution settings. With *Override Suggested Settings* set to *ON*, you will be able to adjust *FPS* (frames per second, also known as frequency), and *Bitrate*, for the video output at each resolution: *High*, *Medium*, and *Low*.


 **Note:** The displayed resolution (n X n) for *High*, *Medium*, and *Low* is hardware-dependent.

#### High/Medium/Low (n X n)

**FPS** Drag the slider to choose a frame rate for the selected camera's video output resolution.

**Bitrate** Drag the slider to choose a bitrate for the selected camera's video output resolution. The bitrate is selectable in 100 Kbps increments.

### On Screen Display

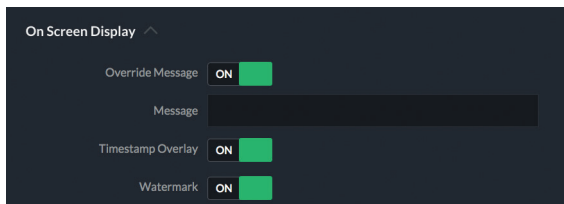


**Override Message** Click to enable or disable message override. When enabled, enter the text, for example, *Rob's Office*, that you want to be displayed on the video feed for the selected camera.

**Timestamp Overlay** Click to enable or disable the timestamp from appearing on the live video feed.

**Watermark** Click to enable or disable the visibility of the watermark on the live video feed of the selected camera.

## Accessories

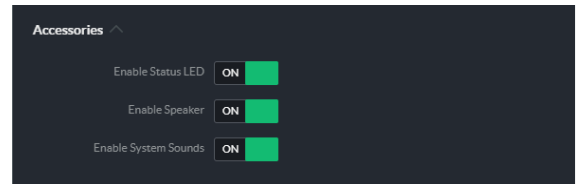


**Enable Status LED** (Available on UVC-G3 Dome and UVC-G3-Micro.) Click to enable or disable the status LED on the camera.


**Enable Speaker** Enable for two-way communication

**Enable System Sounds** Enables or disables informational tones, such as WiFi or controller disconnects.

### RTSP/RTMP/RTMPS Services


*RTSP Service* (Real Time Streaming Protocol), *RTMP Service* (Real Time Media Protocol), and *RTMPS Service* (Real Time Media Protocol over SSL) are network protocols designed for facilitating the playback of media files. These settings allow you to enable RTSP/RTMP/RTMPS service(s) for each of the camera's resolutions (High, Medium, and Low).

 **Note:** The displayed resolution (n X n) for *High*, *Medium*, and *Low* is hardware-dependent.

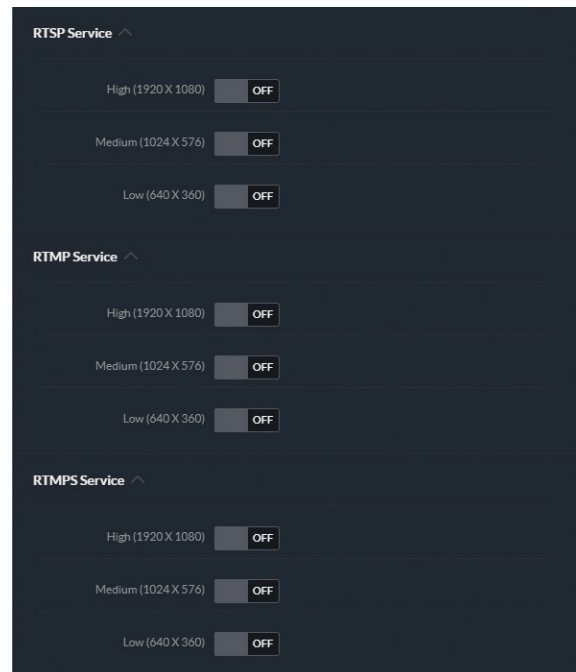


Click to enable/disable the toggle switch *ON* or *OFF* for each resolution under the specified service.

## Recording Configuration

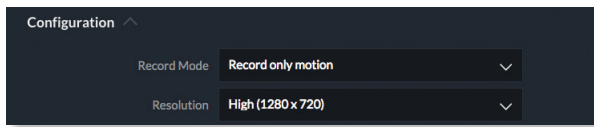

**Record Mode** Allows you to define the recording mode of the selected camera.


- **Don't change** This option only appears when multiple cameras are selected. Choosing this option keeps the cameras in their current recording mode.
- **Don't record** Nothing will be recorded by the camera.
- **Always record** Enables the camera to record all the time, regardless if there is motion detected or not.
- **Record only motion** All captured images are analyzed and only recorded when motion is detected.
- **Record on schedule** Allows you to set up a specific recording schedule for each individual camera. Choosing this *Record Mode* will display a *Schedule* option. Click the *Schedule* drop-down menu to create a new schedule or select from a list of existing schedules.
- **New Schedule** To create a new recording schedule, click and drag a block of time on each day you would like the camera to record. When you are finished, click **Save**. You can also update or delete an existing schedule by clicking to view it in edit mode.

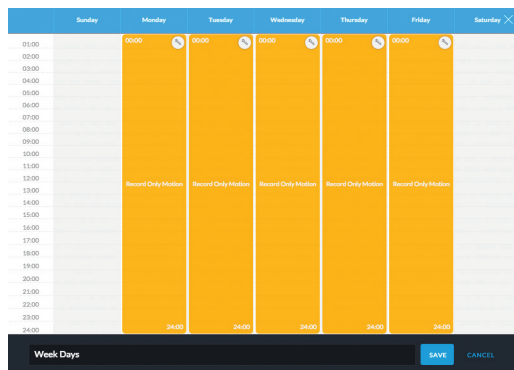

**Resolution** Choose one of the following three resolutions to use for the selected camera: *High*, *Medium*, or *Low*.

**Note:** The displayed resolution for *High*, *Medium*, and *Low* is hardware-dependent.

## Motion Detection

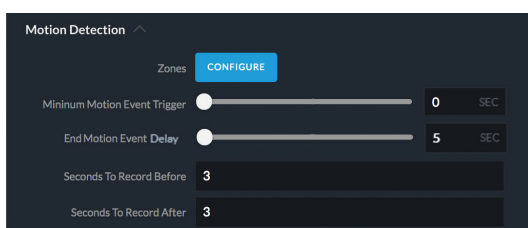

**Zones** Click **Configure** to edit motion zones for the selected camera. This option does not appear if multiple cameras are selected, as zones are configured individually.

**Minimum Motion Event Trigger** Drag the slider control left or right to set the minimum duration (0 to 10 seconds) that motion must take place to trigger recording.


*(X Seconds Before -> Actual Motion -> X Seconds After Motion)*

**End Motion Event Delay** The number of seconds that must elapse before a camera considers motion to have stopped.

**Seconds To Record Before** Enter the number of seconds you want UniFi Video to record before the triggering motion occurs on the selected camera.


**Seconds To Record After** Enter the number of seconds you want UniFi Video to record after the triggering motion occurs on the selected camera.

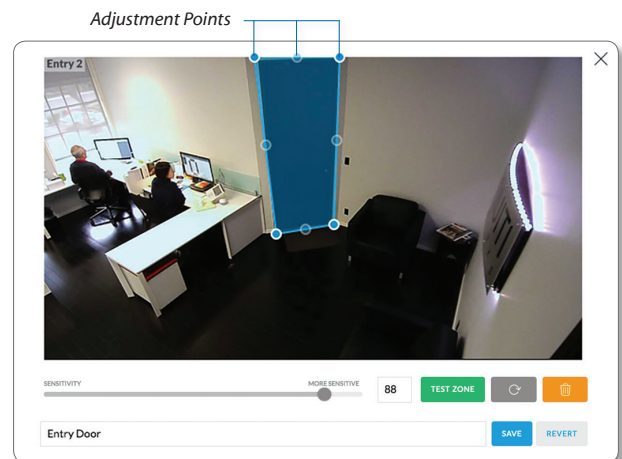

## Configuring a Zone




By default, the initial zone for each camera is the entire viewing area captured in the live feed window. Click and drag the *Adjustment Points* from each corner of the window to the perimeter of the area you would like to define as your zone. Only motion within this zone will trigger recording.

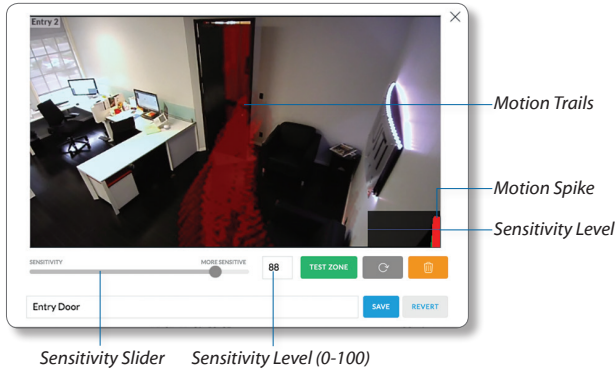Click **TEST\_ZONE** to test the zone you just created and adjust the sensitivity using the *Sensitivity Slider* control. Image trails will appear when motion is detected and the sensitivity level and motion spikes will appear in the bottom right corner of the camera feed. The sensitivity level (from 0 to 100) is shown in the box to the right of the slider control. As various degrees of motion occur, you'll see different level spikes. Adjust the sensitivity to a level that best suits your needs. Motion spikes that exceed the defined sensitivity threshold will be recorded when motion recording is enabled. Click **Test Zone** again to stop the test.



-  Click to refresh the camera image that appears in the zone preview.
-  Use this button to delete the current zone. Click an area of the camera feed to define another zone after deleting the existing zone.
- Enter a name or brief description of the zone you are creating, in the text field provided. In this example, *Entry Door* is used.
- Click **Save** when you are done configuring and naming your new zone.
- Click **Revert** to cancel all changes and restore the previous settings.

### Status

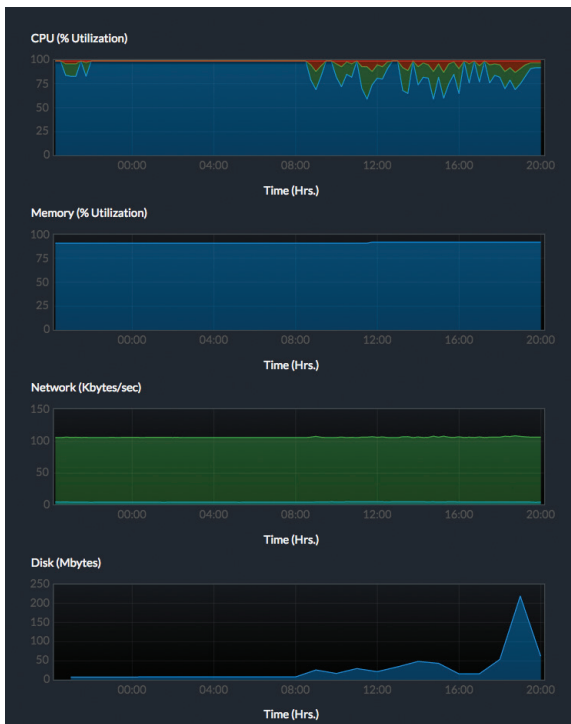


**CPU (% Utilization)** Displays the camera’s CPU utilization recorded over 24 hours with high, low, and average points highlighted. Red indicates the highest point, green is the average, and blue is the lowest point during sampled intervals.

**Memory (% Utilization)** Displays the percentage of the camera’s memory utilization over a 24-hour period.

**Network (Kbytes/sec)** Displays the network traffic for the selected camera over the last 24 hours. Graph is expressed in kilobytes per second.

**Disk (Mbytes)** Displays the amount of disk usage for the selected camera over the last 24 hours. Graph is expressed in total megabytes.

### Manage

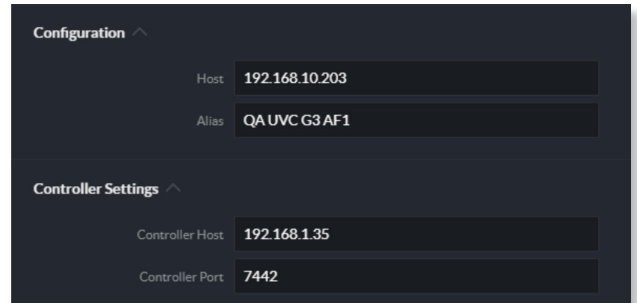

#### Configuration

**Host** Displays the local IP address configured for the camera you are currently viewing.


**Alias** Displays the device name configured for the live feed window for each camera. This is different from the name described for **“On Screen Display”** on page 10.

#### Controller Settings

**Controller Host** The IP address that the camera should use to communicate with the controller. This setting is typically used in environments where the UniFi Video server has multiple active network interfaces.

**Controller Port** The port that the camera should use to communicate with the controller. Beginning with version 3.8.0, this has been separated from the web management port (default 7443) for security purposes.

### Unmanage

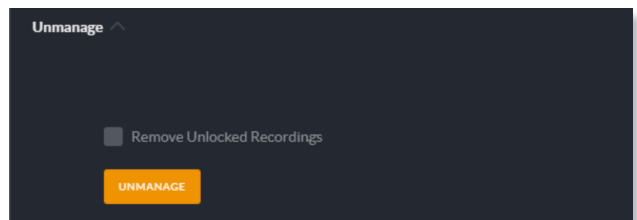

Click **Unmanage** if you no longer want to manage the selected camera. If you wish to remove unlocked recordings for that particular camera as well, check the box labeled *Remove Unlocked Recordings*.





## Chapter 3: Map

The *Map* page allows you to upload custom map images of your site or floor plan, including aerial locations from Google Maps™ for a visual representation of your camera layout.

The map also indicates if motion has been detected on a camera. The color of each camera’s field of view varies from red (motion currently detected) to green (no recent motion).

### Defining a Map


You can add an image you’ve created as a map image or use Google Maps to generate an image for use as a background.

### Image Map


To add a custom map, you must first create the image using an illustration, image editing, or blueprint application that exports .jpg, .gif, or .png file formats.

Once you’ve created the map, you can upload it to the UniFi Video software by performing the following steps:


1. Click **Add New Map** in the *Map* drop-down menu.

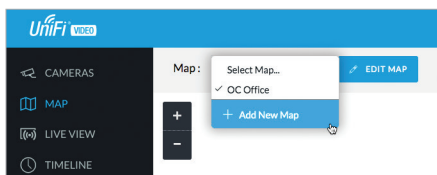


2. Enter a map name in the *Enter new map name* field and click **Image Map**.

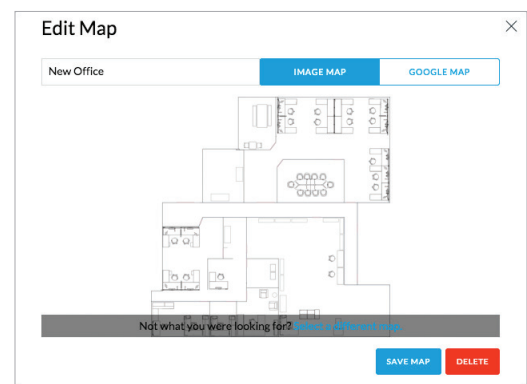

3. Select the file to use as a map (valid file formats are .jpg, .gif, and .png). Click **Open**.
4. Click **Add Map**.
5. Zoom in on the map using the **+** button on the left. Zoom out using the **-** button.

- Click the  button in the upper right corner to bring up a list of cameras for placement. Drag the camera from the *Cameras* list on the right to the appropriate location on the map. The camera will appear in the area it was placed.

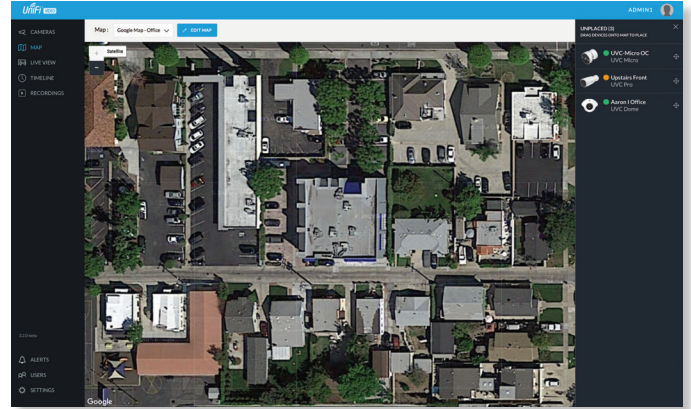


### Camera Placement

Camera thumbnails can be placed on the map to show the location of your cameras. To reposition a camera on the map, click and hold the *Camera* thumbnail and then drag the camera to another location on the map.


### Google Map




To create a custom map using *Google Maps*, perform the following steps:

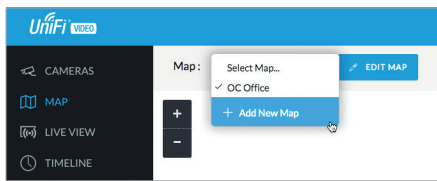
- Click **Add New Map** in the *Map* drop-down menu.

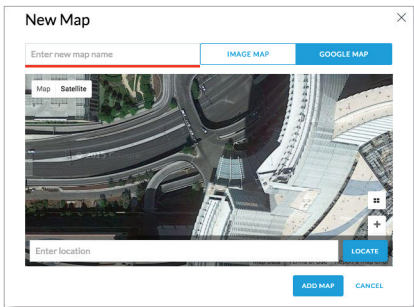


- Enter the desired address in the *Enter location* field and click **Locate**.






- Enter a map name in the *Enter new map name* field and click **Add Map**.
- Zoom in on the map using the  button and zoom out using the  button.
- Click the  button in the top right corner to bring up a list of cameras for placement. Drag the camera from the *Cameras* list on the right to the appropriate location on the map. The camera will appear in the area it was placed.

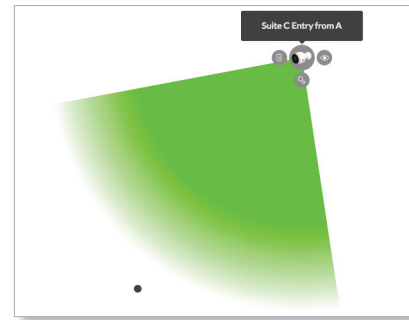
 **Note:** When using *Google Maps*, you must supply an API Key in the *Maps Settings* box under *Settings*.



 
Click and drag the black dot to adjust the camera's direction and field of view.

Click the *Camera* icon to reveal additional options: *Live Feed* , *Details* , and *Remove* .


### Live Feed


Click the *Live Feed*  icon to bring up the camera's *Live Stream* window. The details are described in **"Live Stream Window" on page 9.**

### Details

Click the *Camera Details*  icon to bring up the *Camera Details* page. The details are described in **"Cameras" on page 7.**

### Delete

Click the  icon to remove the camera from the map.

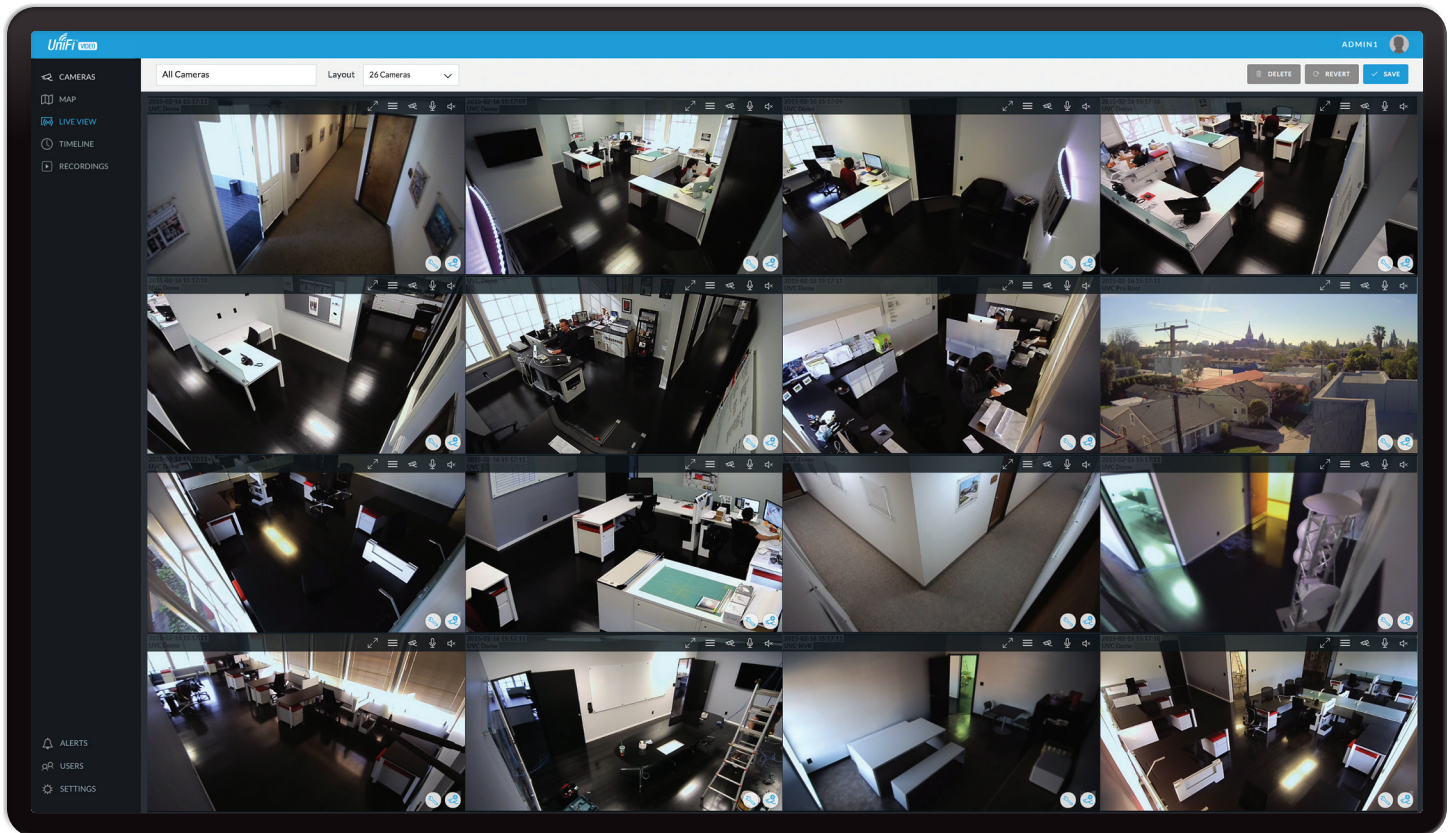


## Chapter 4: Live View

You can monitor multiple camera feeds through a single view layout using the *Live View* page. There are 12 pre-defined templates that support up to 26 cameras. *Live View* allows you to select which camera layout to use and which video feeds to display in that particular layout.


### Create a New View

To create a custom *Live View*, follow these steps:


1. Click the drop-down box at the top left of the window. Click **New View**.

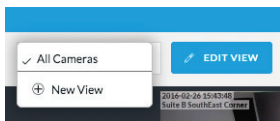

2. Select a layout by clicking one of the templates in the *Choose a Layout* window.

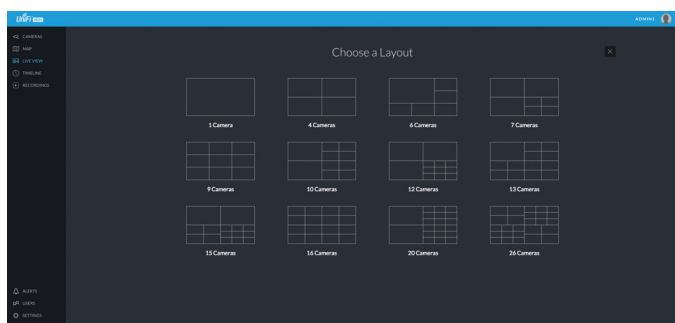


3. Do the following for each of your cameras:
  - a. Click the *Camera Select* icon in the bottom right corner of a video feed area to display the list of available cameras.

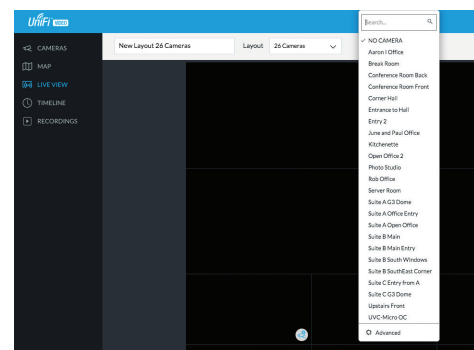


- b. Assign the camera to the video feed area using one of the following methods:
  - Select a camera from the list.
  - Search for a camera name (or part of a name) by entering it into the *Search* field at the top of the list.
  - Select **Advanced** at the bottom of the list to open the *Advanced* dialog. Then select the camera from the drop-down list and select the *Cycle On* setting: *Motion* or *Time Interval*.

4. The cameras will appear in the areas of the layout and you will see their live video feeds in the *Live View* window.



  
- To view or modify the details of any camera in your layout, click the *Configure*  icon and refer to **“Camera Details Window” on page 8**.
- Save the layout by entering a name or brief description in the *View Name* text field and clicking **Save** on the right side of the menu bar. Or, click **Delete** to delete the view without saving it.










## Edit a View


To edit an existing *Live View*, follow these steps:

- Display the view that you want to edit by selecting it from the drop-down list. Then click **Edit View**.




- Edit the view using the icons displayed in the video feeds of the layout:
  - **Camera Select**  Click this icon to assign a different camera to the video feed.
  - **Configure**  Click this icon to display the camera details window (described in detail in **“Camera Details Window” on page 8**).
  - **Camera Settings**  Click this icon to configure various image settings such as *Brightness*, *Contrast*, *Hue*, *Saturation*, *Denoise*, *Sharpness*, *WDR*, *AE Mode*, *Orientation*, and *Infrared*.
  - **Snapshot**  Click this icon to download a snapshot of the current view.
  - **Camera Resolution**  Click this icon to set the camera’s resolution to one of the following settings: *Auto (Medium)*, *High*, *Medium*, *Low*.
  - **Microphone Volume**  Click this icon to configure the camera’s microphone. Drag the slider to the left or right to adjust the volume for recording audio input, or click **Disable Mic** to disable the microphone.

 **Note:** If the microphone is disabled, the volume icon will not appear in the toolbar. To re-enable the microphone, you will have to manually reset the camera to factory defaults by pressing its reset button.


  - **Audio**  Click this icon to mute or unmute the audio.
- Save the edited layout by clicking **Save** on the right side of the menu bar. Click **Revert** to cancel the changes you’ve made to the view.

## Renaming a View

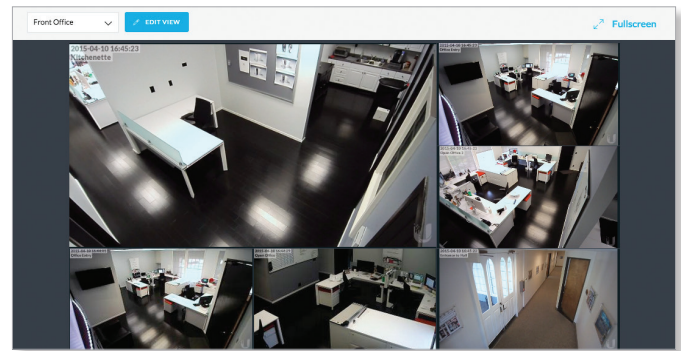

You can rename an existing view or layout by performing the following steps:

 - Click the drop-down list of existing camera layouts and select the view you want to rename. In this example, we will use *Front Office*.
- Click **Edit View** next to the camera layout you selected and enter a new name for the layout.




- Click **Save** to save the changes you’ve made to the view. Click **Revert** to cancel the changes you’ve made to the view.

## Deleting a View


You can delete an existing view or layout by performing the following steps:

- Click the drop-down list of existing camera layouts and select the view you want to delete.
- Click the **Delete** button to remove a view.

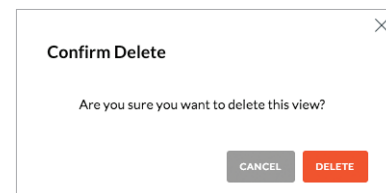

- When prompted, click **Delete** to confirm.



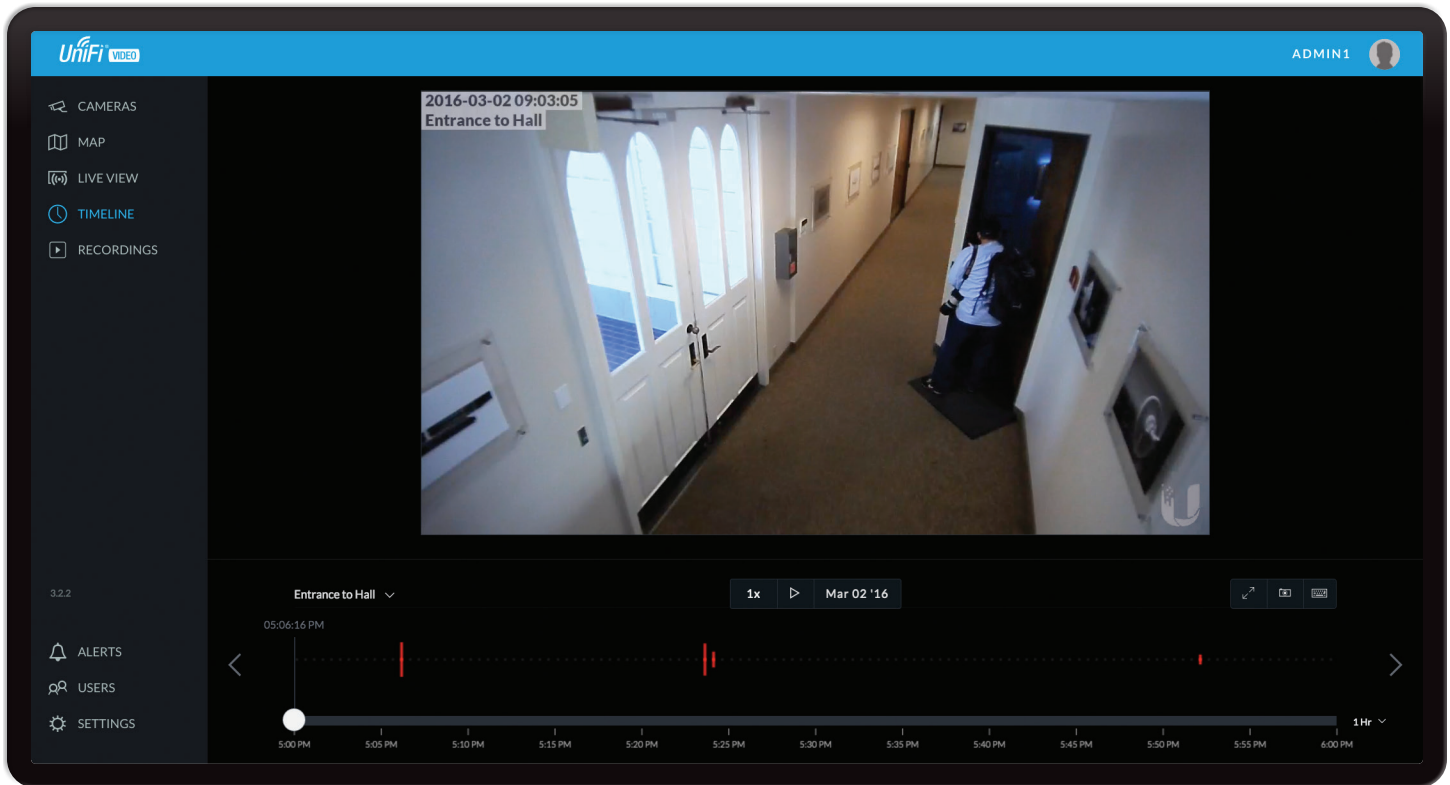

## Chapter 5: Timeline

The *Timeline* page allows you to selectively view the parts of recorded video clips where motion has been detected. You can also set the duration of video to play, adjust the playback speed, and move directly to any point in a clip. Keyboard shortcuts are also provided as a convenient method of control during playback.


### Selecting a Clip for Playback

Selecting a clip to view involves the following steps:

1. Select the camera whose video clip(s) you want to view.
2. Select the playback date.
3. Select the playback start time and duration.
4. Select the playback rate.

### Select Camera

1. At the lower left of the video screen, click the drop-down box to display a list of available cameras.

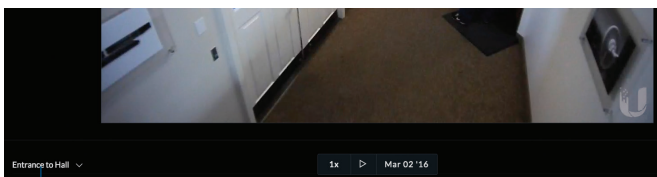


Camera List

2. Select the desired camera.
3. If the camera has no recorded video clips, "No Video" is displayed; select another camera for playback.


### Select Playback Date

1. The playback date is displayed below the center of the video screen.

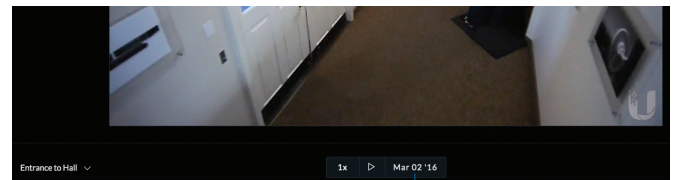

Playback Date


2. To change the date, click it to display a calendar, and then select the desired date.

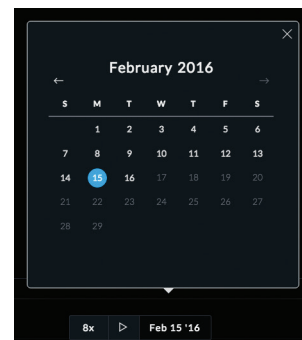

3. Click X to close the calendar.

## Select Playback Start Time and Duration


1. The playback start time is displayed at the lower left side of the video screen.

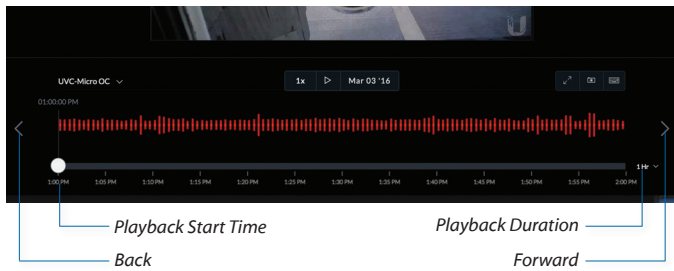

2. To change the start time, use the < and > controls (Back and Forward, respectively) on the left and right sides of the window. Each click will move the start time forward or backward by half the value of the playback duration. For example, if the duration is one hour, clicking < will move the start time back 30 minutes.
3. The playback duration is displayed at the lower right of the video screen.
4. To change the duration, click it to display a list of available values: 24 Hrs, 12 Hrs, 6 Hrs, 1 Hr, or 30 Min. Select the desired duration. The default is 1 Hr.

## Select Playback Rate

1. The playback rate is displayed below the center of the video screen.

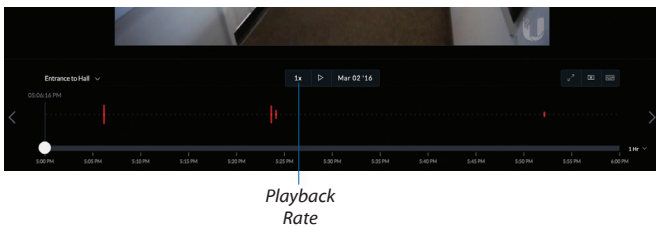


2. To change the rate, click it to display a list of available rates: 0.25x, 0.5x, 1x, 2x, 4x, or 8x. Select the desired rate. The default is 1x.

## Playback

 After you have selected the video clip, use the controls to view it. The controls include:

- **Timeline** The *Timeline* shows the start and end times of the video clip, with tick marks at regular intervals in between. Drag the slider to advance directly to a specific point in the video.



- **Motion Bar** The *Motion Bar* contains red markers to show where motion has been detected in the video clip.




- **Zoom** When you position the cursor over the video screen, the *Zoom* control appears, allowing you to zoom in on specific parts of the video display, or to zoom back out. Use the slider control or the and buttons to adjust the zoom factor.




When you zoom in, a small box will appear in the upper-right corner of the video display, showing the zoomed-in area within the main field of view. To zoom in on a different area, click and drag the video screen until the desired area is displayed.



Control buttons used for playback include the following:

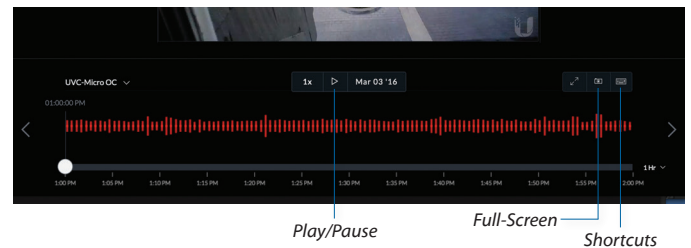

- Click *Play* to start playing the clip. The playback automatically plays only the sections of the clip where motion has been detected.
- Click *Pause* to stop playing the clip.
- Click *Full-screen* to enlarge the video display to full-screen or reduce it from full-screen back to normal size.
- Click *Snapshot* to download a snapshot of the current view.
- Click *Shortcuts* to display a list of keyboard shortcuts:

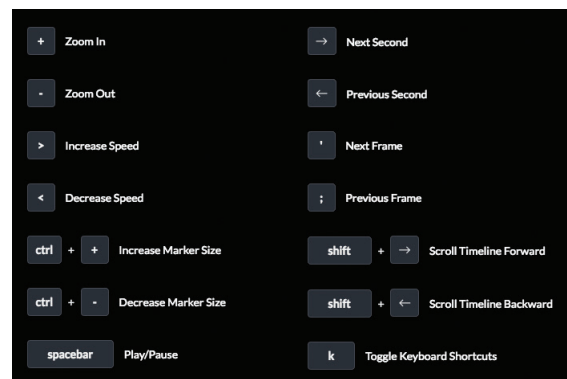


Keyboard shortcuts include:

- **+** *Zoom In* – Changes the playback duration to the next lower value (for example, from *1 Hr* to *30 Min*).
- **-** *Zoom Out* – Changes the playback duration to the next higher value (for example, from *1 Hr* to *6 Hrs*).
- **>** *Increase Speed* – Changes the playback rate to the next higher value (for example, from *1x* to *2x*).
- **<** *Decrease Speed* – Changes the playback rate to the next lower value (for example, from *0.5x* to *1x*).
- **ctrl +** *Increase Marker Size* – Increases the height of the markers in the *Motion Bar*.
- **ctrl -** *Decrease Marker Size* – Decreases the height of the markers in the *Motion Bar*.
- **spacebar** *Play/Pause* – Starts/stops playback.
- **▶** *Next Second* – Advances the video by one second.
- **◀** *Previous Second* – Moves the video back by one second.
- **alt ▶** *Next Frame* – Moves the timeline forward one frame.
- **alt ◀** *Previous Frame* – Moves the timeline back one frame.
- **shift ▶** *Scroll Timeline Forward* – Moves the *Timeline* start and end times forward (later in time). This has the same effect as the **>** control.
- **shift ◀** *Scroll Timeline Backward* – Moves the *Timeline* start and end times backward (earlier in time). This has the same effect as the **<** control.
- **k** *Toggle Keyboard Shortcuts* – Press **k** to toggle the display of keyboard shortcuts on and off.

When you are finished viewing the shortcut list, click **✕** to close the list.



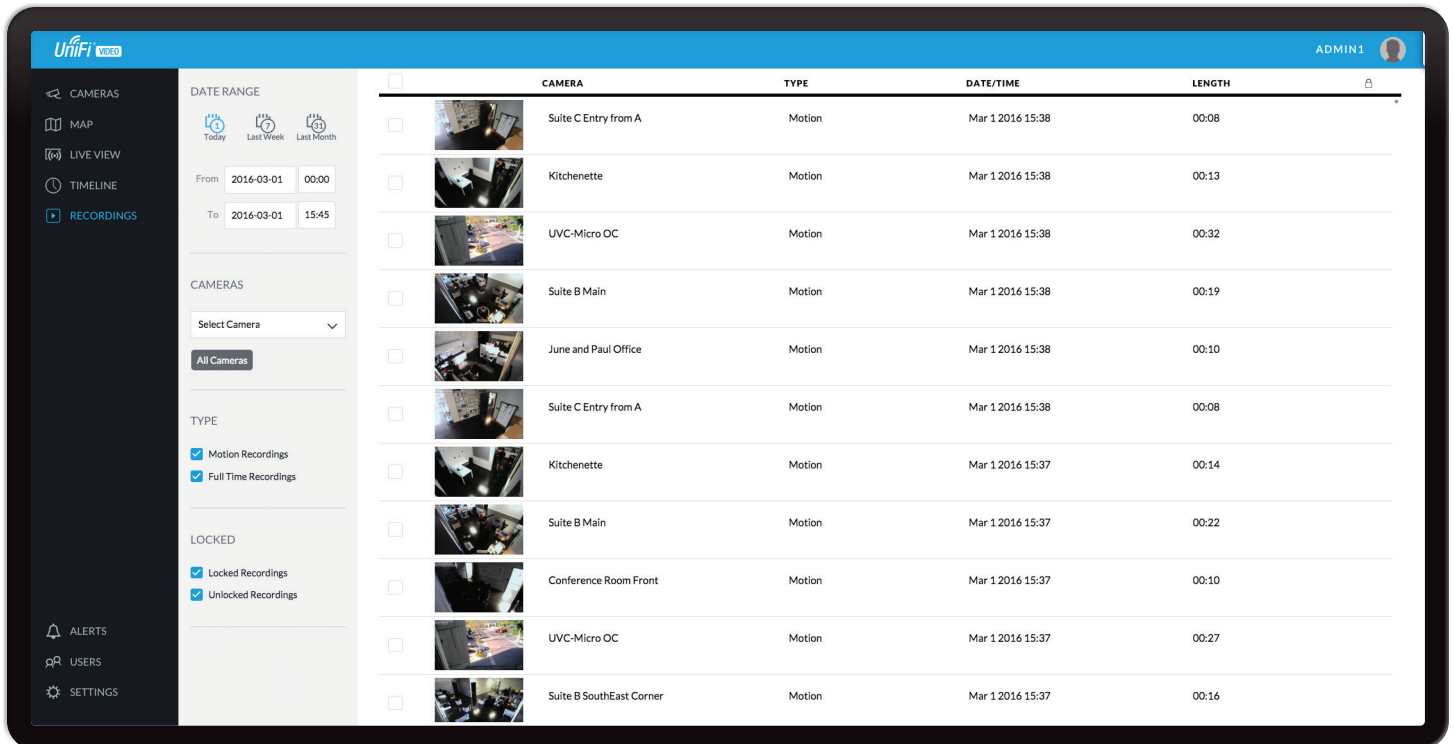

## Chapter 6: Recordings

The *Recordings* page lets you search, sort, and view saved video recordings based on camera name, recording type, recording date, or length of video clip. Each of the following column headers is a clickable label that sorts the list of recordings alphabetically or numerically, depending on the type of data contained in that field: *Camera*, *Type*, *Date/Time*, and *Length*.

**Camera** Displays the local device name of each camera that recorded a video clip on the *Recordings* page.

**Type** Displays the type of recording that was made based on the recording mode defined in the camera details. The two types are *Motion* and *Full Time*.

**Date/Time** Displays the date and time each video clip was recorded.

**Length** Displays the length of each video clip recorded.

 
### Date Range



**Today** Displays a list of all video recordings made within the last day (24 hours).

**Last Week** Displays a list of all video recordings made within the last week (7 days).


**Last Month** Displays a list of all video recordings made within the last month.



**From** Specify the beginning range of video recordings.

**To** Specify the ending range of video recordings.


### Cameras

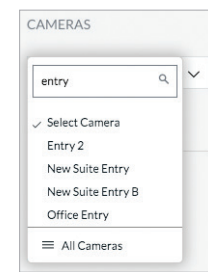

**Select Camera** Allows you to filter your search by camera name. The *Search* option will narrow down the list of cameras as you type into the *Search* box, eliminating the ones that don't match your search string criteria.

**All Cameras** Click **All Cameras** to display the video recordings made by every camera.


### Type

 

**Motion Recordings** Check this box to include motion-detection recordings.

**Full Time Recordings** Check this box to include full-time recordings.

## Locked

 

**Locked Recordings** Check this box if you would like to include *Locked Recordings* in the list of video clips displayed in the *Recordings* window.

**Unlocked Recordings** Check this box if you would like to include *Unlocked Recordings* in the list of video clips displayed in the *Recordings* window.

## Viewing Recordings

**Play** Click the video clip to open a window where you can view the recording. Use the controls displayed in the window as follows:

Icon	Name	Function
	Play	Click to start playing the video clip. The icon changes to the <i>Pause</i> icon.
	Pause	Click to stop playing the video clip. The icon changes to the <i>Play</i> icon.
	Playback Rate	Click to set the playback rate to one of the following: <i>0.25x</i> , <i>0.5x</i> , <i>1x</i> , <i>2x</i> , <i>4x</i> , <i>8x</i> .
	Mute	Click to mute the camera's audio. The icon changes to the <i>Unmute</i> icon.
	Unmute	Click to unmute the camera's audio. The icon changes to the <i>Mute</i> icon.
	Motion Indicator	Click to enable or disable the motion detection indicator. When enabled, the indicator shows where motion occurred in the field of view using red shading.
	Snapshot	Click to download a JPG of the current frame
	Microphone	Two-way communication available on select cameras (UVC-Micro and UVC-G3-Micro).



Motion Detection (red-shaded areas)

### Info

Click any recording to display the details and options for the selected video clip.

**Camera** Displays the name of the camera.

**Date/Time** Displays the date and time the video clip was recorded.


**Duration** Indicates the length of the video clip.

**Type** Displays the type of recording that was made.


**Unlocked** Changes the status of a video clip recording between *Locked* and *Unlocked*. If a recording is unlocked, the video clip can be deleted by an administrator. If a recording is locked, the video clip cannot be deleted.

**Download** Click **Download** to save a copy of the selected camera recording to your computer as an MPEG4-formatted video.


**Delete** Click **Delete** to initiate removal of a video clip from the current list of recordings. A video clip can only be deleted if it is designated as *Unlocked*.

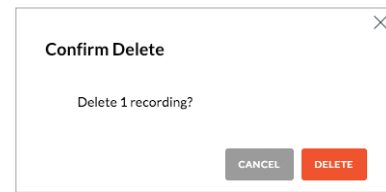

When prompted to confirm deletion, click **Delete** to permanently delete the selected recording, or click *Cancel* to keep it.

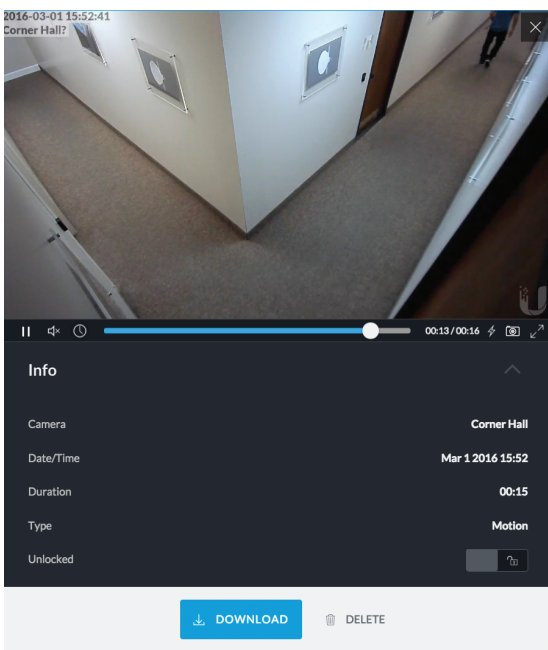



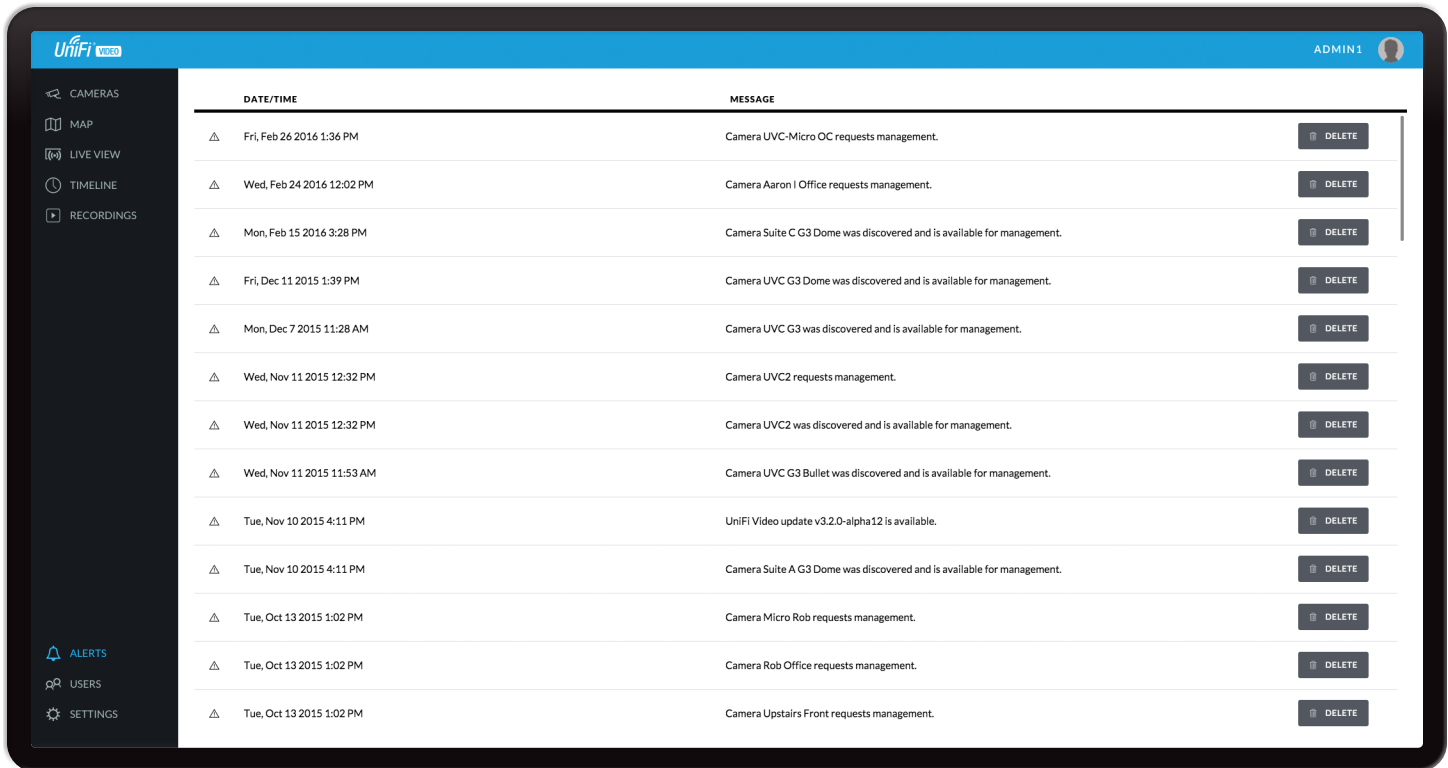

DATE/TIME	MESSAGE	
△ Fri, Feb 26 2016 1:36 PM	Camera UVC-Micro OC requests management.	DELETE
△ Wed, Feb 24 2016 12:02 PM	Camera Aaron I Office requests management.	DELETE
△ Mon, Feb 15 2016 3:28 PM	Camera Suite C G3 Dome was discovered and is available for management.	DELETE
△ Fri, Dec 11 2015 1:39 PM	Camera UVC G3 Dome was discovered and is available for management.	DELETE
△ Mon, Dec 7 2015 11:28 AM	Camera UVC G3 was discovered and is available for management.	DELETE
△ Wed, Nov 11 2015 12:32 PM	Camera UVC2 requests management.	DELETE
△ Wed, Nov 11 2015 12:32 PM	Camera UVC2 was discovered and is available for management.	DELETE
△ Wed, Nov 11 2015 11:53 AM	Camera UVC G3 Bullet was discovered and is available for management.	DELETE
△ Tue, Nov 10 2015 4:11 PM	UniFi Video update v3.2.0-alpha12 is available.	DELETE
△ Tue, Nov 10 2015 4:11 PM	Camera Suite A G3 Dome was discovered and is available for management.	DELETE
△ Tue, Oct 13 2015 1:02 PM	Camera Micro Rob requests management.	DELETE
△ Tue, Oct 13 2015 1:02 PM	Camera Rob Office requests management.	DELETE
△ Tue, Oct 13 2015 1:02 PM	Camera Upstairs Front requests management.	DELETE

## Chapter 7: Alerts

(The *Alerts* section is available to administrators only.) Alerts and messages can be sorted by date or message type, including software updates, camera discoveries, and requests for management.

### Alerts Home Page

**Date/Time** Displays the day of week, date, and time that an event occurred.


**Message** Displays a description of each event recorded by the NVR.

If you would like to remove a message from the list of alerts, click **DELETE** next to the corresponding event you would like to delete.

Click any message to view specific details of the device recorded in the selected event. Details and options will vary based on the type of device being reported. Refer to **“Cameras” on page 7.**





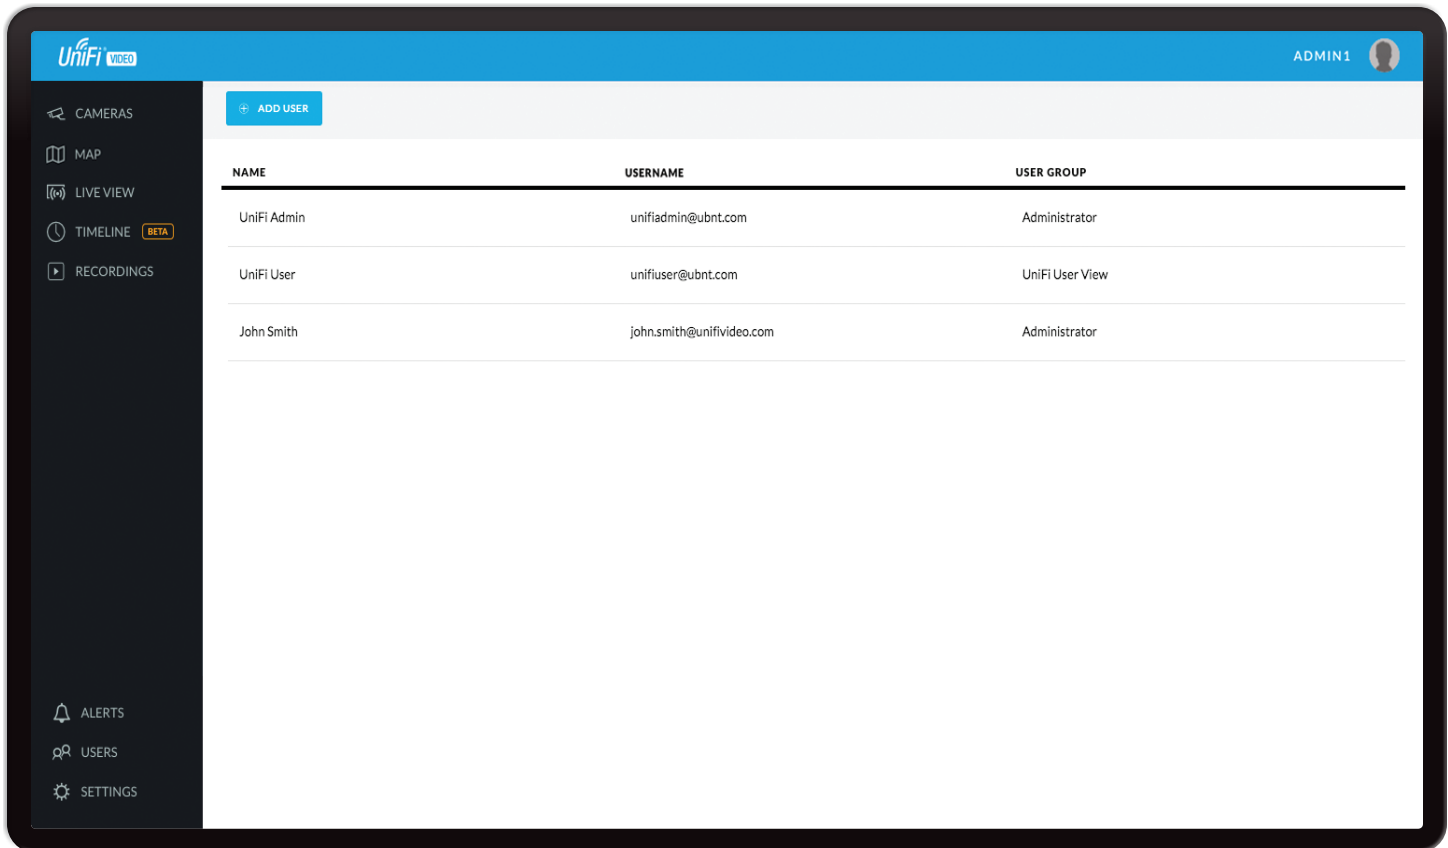

## Chapter 8: Users


(The *Users* section is available to administrators only.) This section allows you to manage user accounts on the NVR.

**Name** Displays the user's full name.

**Username** Displays the user's email address. This email address is used to log into the NVR.

**User Group** Displays the name of the user group that each NVR user belongs to.

### User Details

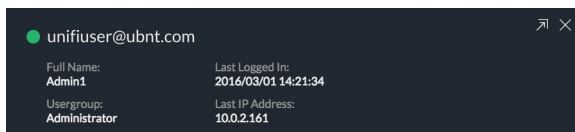

Click any user account to open the *Details* window for that particular user.

**Full Name** Displays the selected user's full name.

**Usergroup** Displays the name of the user group that the selected NVR user belongs to.


**Last Logged In** Displays the date and time when the selected user account last logged in to the NVR.

**Last IP Address** Displays the last IP address used to log in to the NVR (by the selected user account).

There are four clickable tabs below the user details: *Account*, *API Access*, *Alert*, and *Delete*. (*Delete* is not displayed if you are viewing your own account.)



### Account

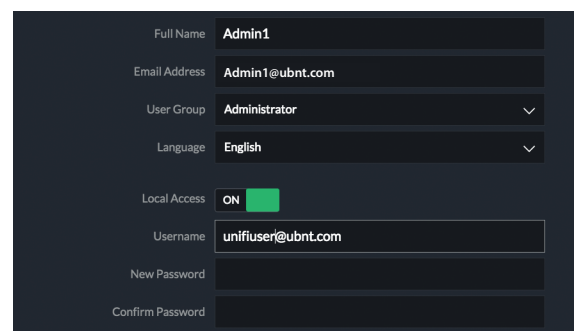

**Full Name** View or edit the user's full name.

**E-Mail Address** View or edit the user's email address. This email address is used to log into the NVR.

**User Group** Select or edit the user group for this account. Click **Edit** to make changes to an existing user group. Refer to **"New User Group" on page 27** for group options.

**Language** Select the user's language preference.


**Local Access** Used to turn local access on or off. When set to **ON**, the *Username* and *Password* options become available. These credentials are required when the cloud option is not being utilized.

**Username** The user name for the user account.

**New Password** Create a password for the selected user. This password will be used to log in and access the NVR.

**Confirm Password** Confirm the password by entering it a second time in the *Confirm Password* field.

## API Access

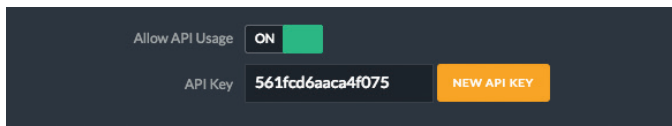


**Allow API Usage** API stands for *Application Programming Interface*. Click to toggle **ON** and display the *API Key* field.

**API Key** Click **New API Key** to generate a key code when accessing UniFi Video from external applications.

## Alerts

For a non-cloud UniFi Video installation, the *Alerts* tab appears as shown below:

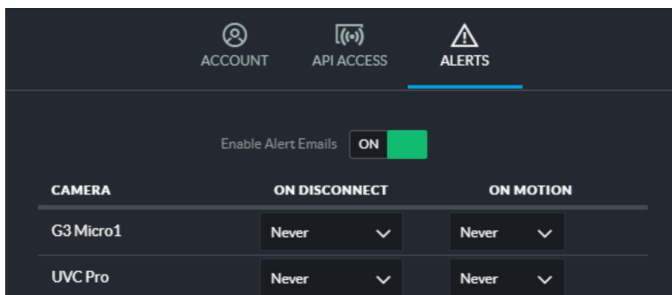


**Enable Alert Emails** Click to enable or disable email alerts for specific cameras and events.

**Camera** Displays the camera name.


**On Disconnect** Indicates when to notify the administrator if the selected camera becomes disconnected. Select **Never** or **Always**.

**On Motion** Indicates when to notify the administrator if the selected camera records motion. Select **Never** or **Always**, or select **New Schedule** to define a schedule.

For a cloud-based UniFi Video installation, the *Alerts* tab appears as shown below:

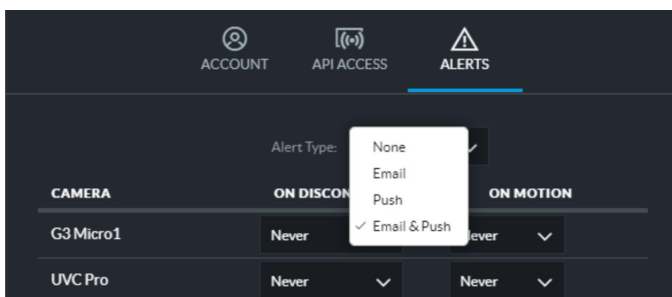

**Alert Types** Select the type of alert to be received: *None*, *Email*, *Push*, or *Email & Push*.

 **Note:** Push notifications requires your install to be connected to the cloud.

**Camera** Displays the camera name.


**On Disconnect** Indicates when to notify the administrator if the selected camera becomes disconnected. Select **Never** or **Always**.

**On Motion** Indicates when to notify the administrator if the selected camera records motion. Select **Never** or **Always**, or select **New Schedule** to define a schedule.

## Alert Schedule for Motion Detection


To create a new schedule for motion detection alerts:

1. Select **New Schedule** in the *On Motion* drop-down list.
2. A window showing the days of the week and hours of the day will be displayed.

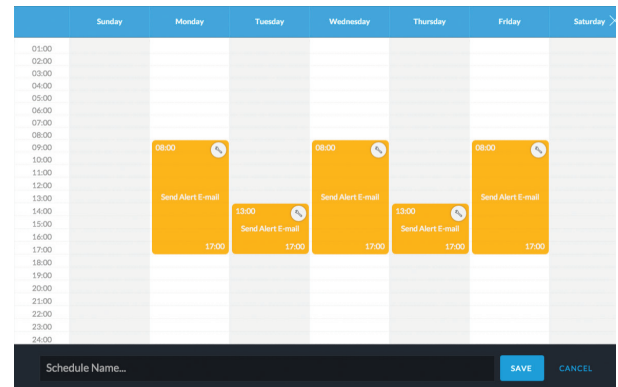


3. Select the periods to send an alert upon motion detection by dragging the cursor within the appropriate days of the week.
4. Enter a name for the schedule and click **Save**.


To edit an existing schedule for motion detection alerts:

1. Select the schedule from the *On Motion* drop-down list and click .
2. The schedule will be displayed in a separate window.
3. Edit the schedule as needed.
4. When done editing, click **Save** to save the changes.

To delete an existing schedule for motion detection alerts:

1. Select the schedule from the *On Motion* drop-down list and click .
2. The schedule will be displayed in a separate window.
3. Click **Delete** to delete the schedule.

### Delete

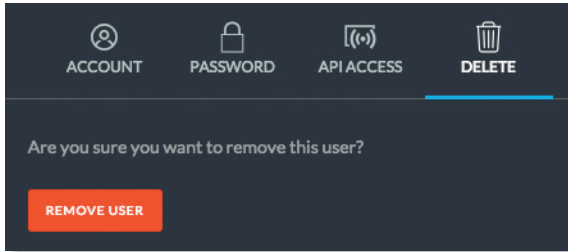


Click **Delete** to remove the selected user. When prompted to confirm removal of the user, click **Remove User**.

**Note:** This option is not available when viewing your own account.


### Add User

NAME	USERNAME	USER GROUP
UniFi Admin	unifadmin@ubnt.com	Administrator
UniFi User	unifuser@ubnt.com	UniFi User View
John Smith	john.smith@unifivideo.com	Administrator

To add a new user, click **Add User** on the top left corner of the window. The *Create New User* window will appear. Click each field and fill out the requested information. The *Account* and *Password* tabs are only required if you want this user to access the install via direct IP access; the API Access tab is optional. When you are finished, click **Save**.

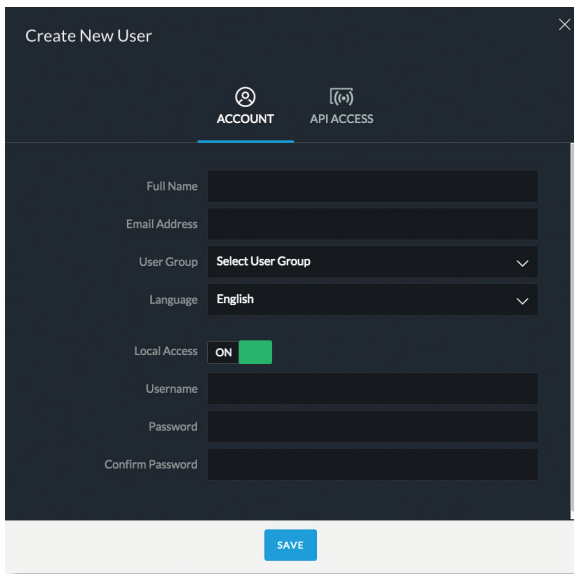


An e-mail invitation will be sent to the new user using the e-mail address you specified only if you are connected to the cloud. If you are not connected to the cloud, you must share the configured credentials with the intended user manually.

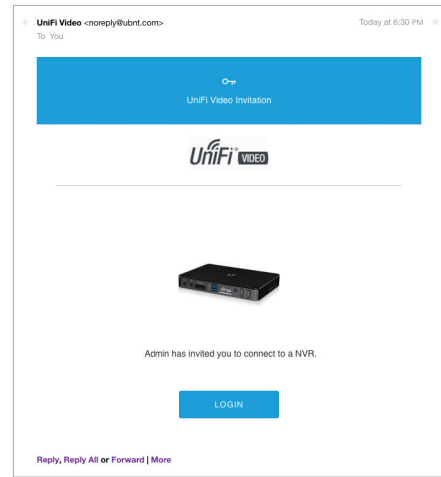


Upon receipt of the e-mail invitation, the new user should click **Login** to accept the invitation and log into the UniFi Video system.

### Account

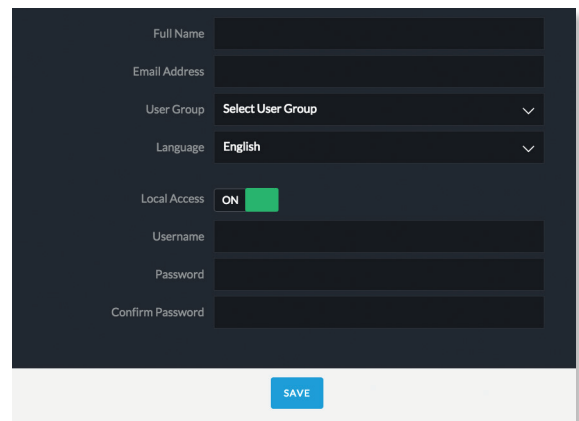


- Full Name** Enter the full name of the new user.
- E-Mail Address** Enter an email address for the new user. This email address will be used to log in to the NVR.
- User Group** Click *Select User Group* to display the *User Group* menu. Select an existing user group from the drop-down list or select *New User Group* to create a new group.

### New User Group

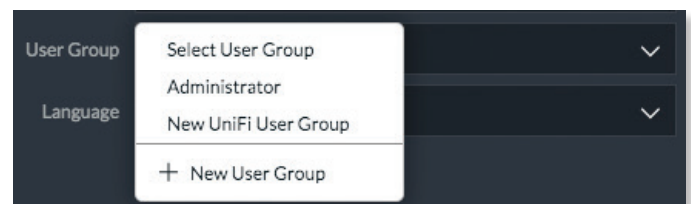

If you select *New User Group*, the following window will appear:

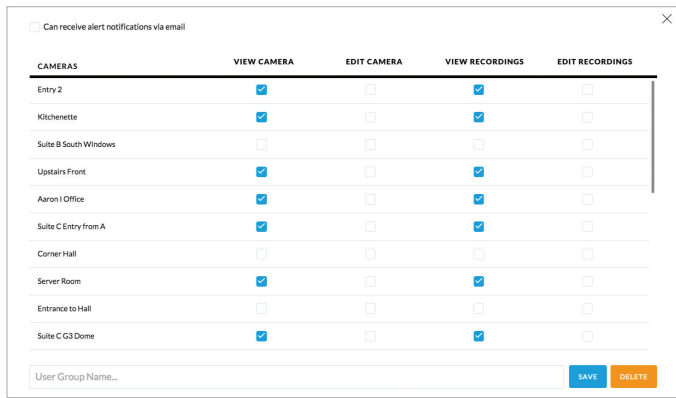

CAMERAS	VIEW CAMERA	EDIT CAMERA	VIEW RECORDINGS	EDIT RECORDINGS
Entry 2	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Kitchenette	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Suite B South Windows	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Upstairs Front	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Aaron I Office	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Suite C Entry from A	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Corner Hall	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Server Room	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Entrance to Hall	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Suite C G3 Dome	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>

User Group Name:  SAVE DELETE

- **Can receive alert notifications via email** Check this box to grant users (in this group) the ability to receive email notifications when the NVR generates an alert message.
- **View Camera, Edit Camera, View Recordings, Edit Recordings** Select which cameras and recordings can be accessed by users in this group by clicking the checkbox next to each camera in the list.



**Note:** Some permissions are contingent on others. Therefore, as you select specific privileges, the system will automatically place a check mark next to the additional permissions required.

- **User Group Name** Assign the group a new name by entering it into the *User Group Name* field and click **Save**. You can also delete the group name by clicking **Delete**.

**Language** Select the user's language preference.

**Local Access** Used to enable or disable local access. If enabled (set to *ON*), the *Username*, *New Password*, and *Confirm Password* options are available.

**Username** The user name for the user account.

**New Password** Create a password for the selected user. This password will be used to log in and access the NVR.

**Confirm Password** Confirm the password by entering it a second time in the *Confirm Password* field. Passwords must match in both fields before UniFi Video will allow you to save the user account.

## API Access



**Allow API Usage** Click to enable or disable access to UniFi Video from an external application. When enabled, click **New API Key** to generate a new random key in the *API Key* text field.

**API Key** Use this key to authenticate access to UniFi Video from an external application.

When you are finished entering all of the information for the new user account, click **Save**.

The screenshot displays the UniFi Video web interface for an OC-NVR. The main content area is titled 'CAMERA SETTINGS' and includes several sections:
 

- CAMERA SETTINGS:** A notice states 'Any managed cameras will be updated to use this password.' Below this are fields for 'Camera Password' (masked with dots) and 'Camera Adoption Token'. A 'NEW TOKEN' button is present next to the token field, with a note 'Use to adopt in Camera Web UI.' Below these fields is a 'CONFIGURE ALERTS' button.
- TIME & DATE:** A 'Timezone' dropdown menu is set to '(UTC-08:00) Pacific Time (US & Canada)'.
- ALERTS:** A field for 'Minutes Between Motion Alert Emails' is set to '0'. A 'CONFIGURE ALERTS' button is located below this field.
- FIRMWARE UPDATES:** Two toggle switches are shown: 'Check UBNT for Updates' and 'Report Statistics', both currently turned 'ON'.
- DEVICE DISCOVERY:** This section is currently empty.

 The left sidebar contains navigation links: CAMERAS, MAP, LIVE VIEW, TIMELINE (marked BETA), RECORDINGS, ALERTS, USERS, and SETTINGS. The top navigation bar includes 'UPDATE AVAILABLE', 'GET SUPPORT FILE', 'DOWNLOAD CONFIGURATION', and buttons for 'REVERT' and 'SAVE'. The user 'AARONJ' is logged in.

## Chapter 9: Settings

(The *Settings* section is available to administrators only.) The *Settings* section provides you with important system information and configuration options for your NVR.

**System Configuration** Click this button to configure your NVR's settings. Refer to "System Configuration" on page 30 for detailed information on System Configuration.

**Get Support File** Click this button to generate a support file for use by Ubiquiti customer support. This file only needs to be generated at their request.

**Download Configuration** Click this button to download your NVR's configuration to a file. (This doesn't include recordings). The configuration file is only used by the Setup Wizard when installing a new NVR.

**Revert** Click this button to cancel all changes you have made on the *Settings* page.

**Save** Click this button to save all changes you have made on the *Settings* page.

### UniFi Video Cloud

**Connect To My Ubiquiti Account/Disconnect From My Ubiquiti Account** Click to connect or disconnect your UniFi Video installation from your Ubiquiti account. This enables or disables the free cloud access to your UniFi Video installation.

### Camera Password

**Camera Password** The camera password, by default, is generated by UniFi Video's initial configuration wizard. Click this field to view the password in plain text, in the event you need to access a specific camera. You can also use this field to change the password used to access individual cameras. To save any password changes, you must also click **Save** in the upper right.



**Note:** This change will only apply to cameras that are currently managed by and connected to the UniFi Video server.

**Camera Adoption Token** A random adoption token can be generated to aid in the rapid adoption of multiple cameras. To use this feature, click **New Token** and a token will be generated in the field. The token is valid for 30 minutes from its generation and can be copied/pasted into the camera's web UI along with the IP address of the UniFi Video server for rapid camera management.



**Note:** The *Adoption Token* option only exists on cameras with firmware version 3.8.3 or newer.

### Time & Date

**Timezone** Select the local time zone where the UniFi Video NVR is located.

## Alerts

**Minutes Between Motion Alert Emails** Specify the number of minutes you want to separate recurring motion alert emails.

**Configure Alerts** Click **Configure Alerts** to customize the alert settings for each camera managed by the NVR. For information on configuring alerts, see “Alerts” on page 26.

[SMTP/Email Server (Only shown in installations that are not connected to the cloud) When not connected to the cloud, you may still receive camera disconnect and motion alert emails; however, push notifications are a cloud exclusive feature. In order to utilize this feature on an installation that is not connected to the cloud, you must toggle this feature **On** and then configure your SMTP server settings in conjunction with your email provider.

## Firmware Updates

**Check UBNT For Updates** UniFi Video automatically checks for system updates but doesn’t install them unless initiated by an administrator. If you don’t want the NVR to automatically check for updates, click to toggle *OFF*.


**Report Statistics** (Available if *Check UBNT for Updates* is enabled.) Statistics are gathered and provided to Ubiquiti Networks for reference, in an effort to continually improve performance. To opt out, click to toggle *OFF*.

## Device Discovery

**Discover Cameras** When set to *ON*, your NVR will automatically discover UniFi Video cameras as they become available on the network. To disable this feature, click to toggle *OFF*.

## System Configuration

Click **SYSTEM CONFIGURATION** to open the *System Configuration* window. This will display the configuration details for the NVR.

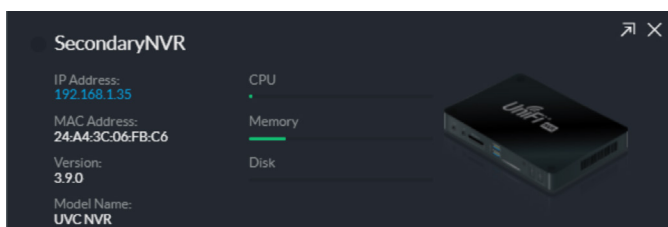

**IP Address** Displays the current IP address of the NVR.

**MAC Address** Displays the hardware MAC address.

**Version** Displays the firmware version currently installed on the NVR.


**Model Name** Displays the model name of the NVR.

**CPU** Indicates the percentage of the CPU being utilized by the NVR.

**Memory** Indicates the amount of memory used by the NVR (expressed in gigabytes).

**Disk** Indicates the amount of disk space used on the NVR.

## Configure Configuration

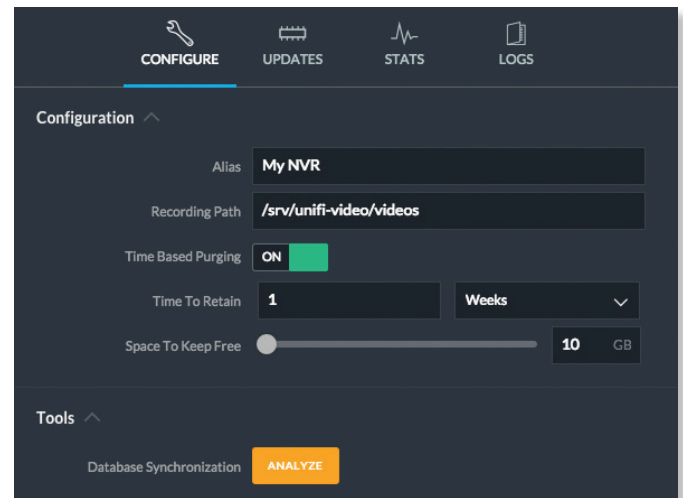

**Alias** Displays the current name of the NVR.

**Recording Path** Path to where video clip recordings are stored on the NVR.

**Time Based Purging** When enabled, recordings are deleted after the amount of time specified in the *Time To Retain* field.

**Time To Retain** Defines the number of *Hours*, *Days*, or *Weeks* to keep recordings before deleting them. This option is available when *Time Based Purging* is set to *ON*.

**Space to Keep Free** Use the slider or text field to define how much space should be kept available on the NVR (expressed in gigabytes).




**Note:** This feature cannot be disabled.

## Tools

**Database Synchronization** Allows you to analyze the current NVR database.

## Updates

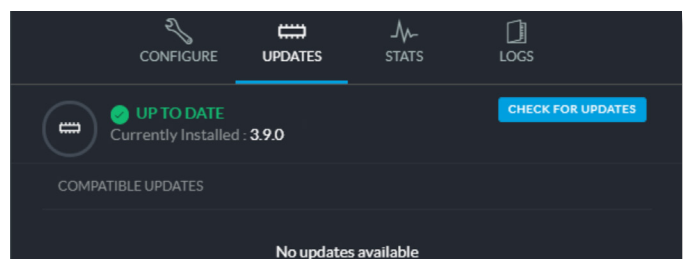


**Currently Installed** Displays the firmware currently installed on your NVR. If it is the most recent firmware, “Up to Date” is also displayed.

**Check for Updates** Click to check the website for the latest firmware update (requires Internet connection). If an update is available, the version number will be listed with an Install button for easy upgrades through the web UI.



## Stats

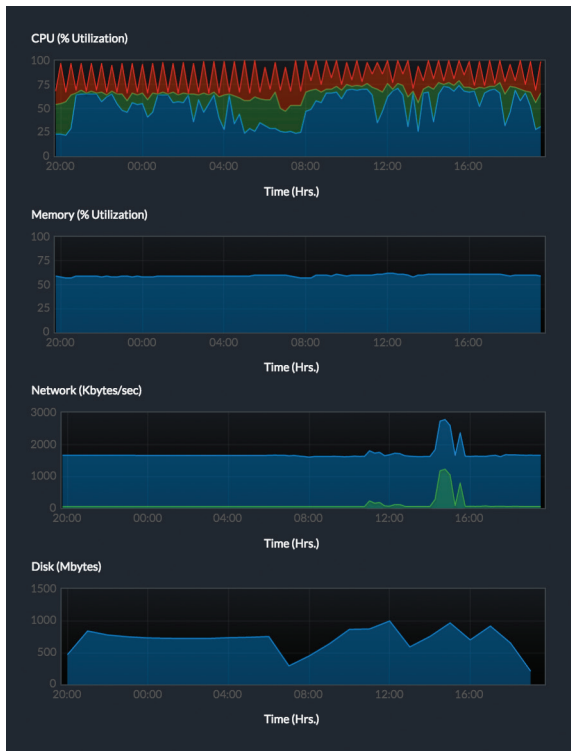

**CPU** Displays percentage utilization of the NVR's processor over a 24-hour period.


**Memory** Displays percentage utilization of the NVR's memory over a 24-hour period.

**Network** Displays the amount of network activity over a 24-hour period (expressed in kilobytes).

**Disk** Displays the amount of disk activity over a 24-hour period (expressed in megabytes).

## Logs

The **Logs** tab provides you with four separate log files generated by the NVR in the UniFi Video management system. Click **Logs** to display the current log activity. The default log is the *Error* log.

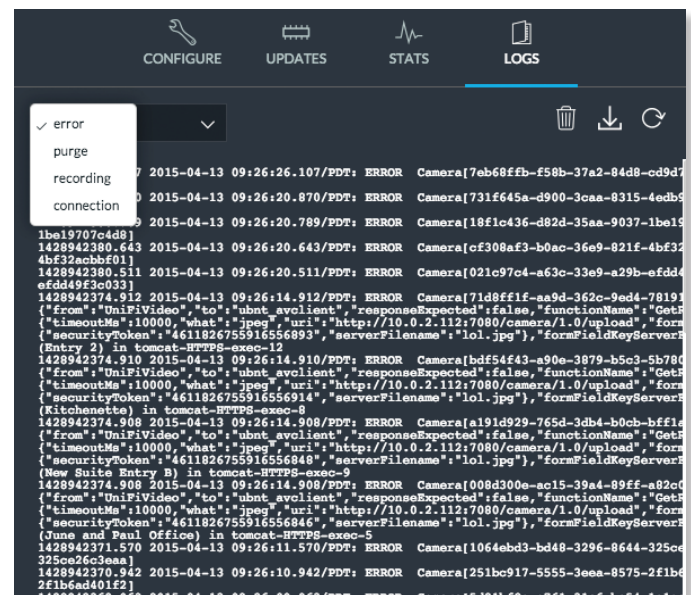


**Error** Displays a running log of all error messages.


**Purge** Displays a running log of all purge activity.


**Recording** Displays a running log of all recording activity.

**Connection** Displays a log of all connection activity, including loss of connection.

You can also delete, download, or refresh the view of any log activity by clicking one of the toolbar icons located in the upper right corner of the *Logs* screen.

**Delete**  Clears the log file currently displayed on your screen, without saving a copy to your computer.

**Download**  Allows you to save a log file to your computer.

**Refresh**  Updates the running log activity on your screen.





# Appendix A: Mobile App


UniFi Video is now accessible from iOS and Android™ smartphones and tablets using the *UniFi Video* mobile app. This appendix describes how to use the app on your mobile device to communicate with an NVR over the internet (cloud access).

## UniFi Video App for iOS

1. If you have not connected your Ubiquiti account to the NVR, do so now as described in **“UniFi Video Cloud” on page 29**.
2. On your smartphone or tablet, download the free *UniFi Video* mobile app for iOS from the iTunes® App Store.



3. Open the *UniFi Video* mobile app. The *Sign In* screen appears:

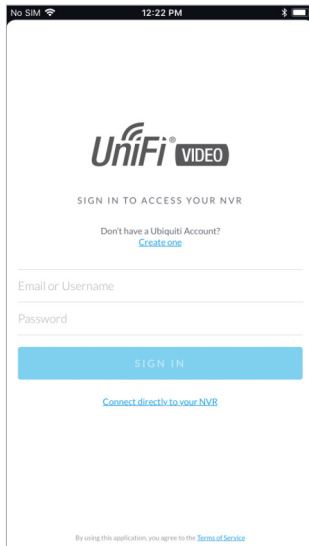


4. To sign in using your Ubiquiti user account, enter your *E-mail* address or *Username* and *Password*, and then tap **Sign In**. Go to step 7.



**Note:** If you do not have a Ubiquiti account, tap **Register**, enter all requested info, and tap **Register**. Then connect the account to your NVR as described in **“UniFi Video Cloud” on page 29** before continuing.

5. To connect directly to an NVR without signing into your Ubiquiti account, tap **Connect directly to your NVR**.

6. The *Select NVR* screen appears. Select the desired NVR from the list.

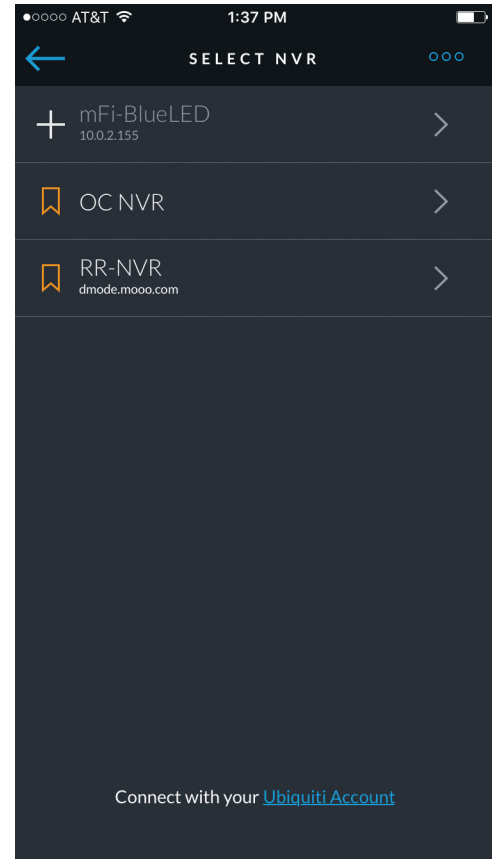

If the NVR you want is not displayed in the list, you can add it as follows:


- a. Tap the more options icon, and then tap **Add New NVR**.
- b. Enter the NVR's *IP address* and your *Username* and *Password*. Then tap **Sign In**.

If you don't know the NVRs IP address, use the search function as follows:

- a. Tap the more options icon, and then tap **Search for NVR**.
- b. Newly discovered NVRs will be displayed with **+** next to the name.



7. The app opens. By default, the *Cameras* screen appears:

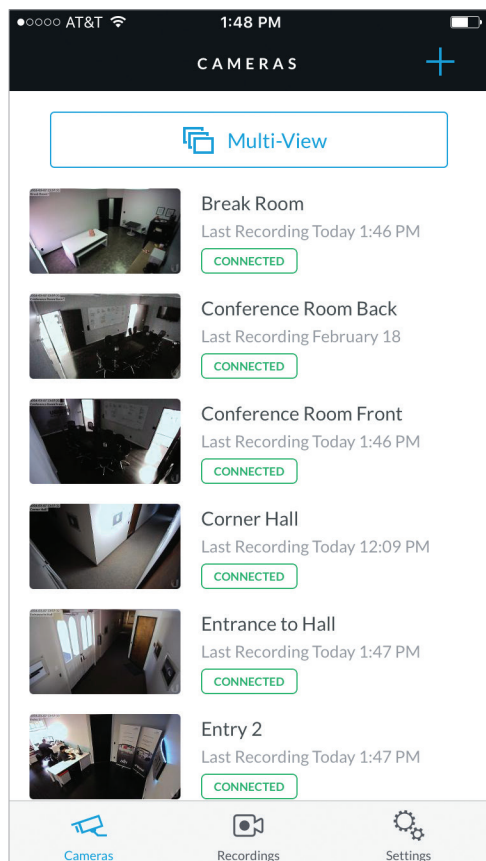

The menu bar at the bottom of the screen has icons used to navigate between the main screens:

- Tap to display the *Cameras* screen (already selected by default).
- Tap to display the *Recordings* screen.
- Tap to display the *Settings* screen.

## Cameras Screen

The *Cameras* screen displays a list of cameras that are known to the UniFi controller. For each camera in the list, the following information is displayed:

- A thumbnail image of the camera's view (image is faded if the camera is offline).
- The name of the camera.
- Date and time of two different events, depending on the connection status:
  - Connected: The date and time of the last recording, or N/A if no recordings are available.
  - Not connected: The date and time when the camera was last seen by the UniFi Video controller.
- The camera's connection status: *Connected* or *Disconnected*.


On the *Cameras* screen, you have the following options:

- Select a camera from the list to open the *Camera Detail* screen which contains a live video feed from the camera as well as information on the camera.

- At the top of the screen, tap **Multi-View** to open the *Multi-View* screen, which displays live feeds from four cameras.

## Camera Detail

The *Camera Detail* screen displays a live video feed from the selected camera, as well as specific details on the camera, including its name, status, IP address, and software version.

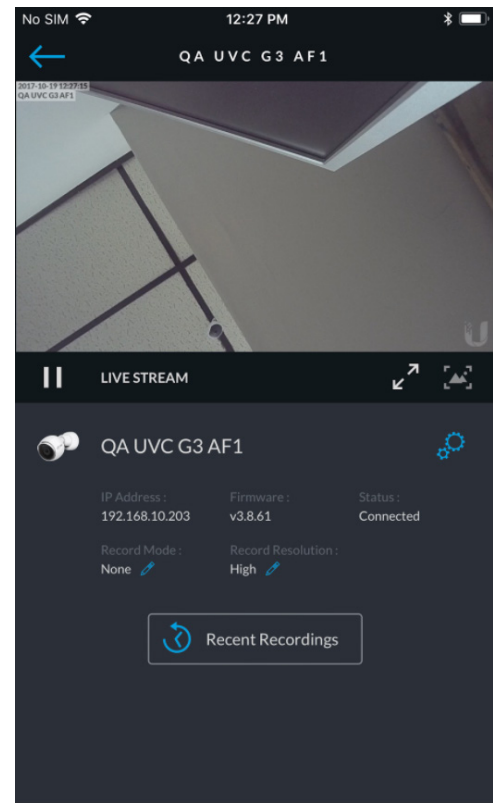

Icons located just below the *Camera Detail* screen provide the following controls:

Icon	Name	Function
	Pause	Tap to pause the live video stream. The icon changes to the <i>Play</i> icon.
	Play	Tap to resume the live video stream. The icon changes to the <i>Pause</i> icon.
	Enhance	(Available only on select G3 cameras. The G3 Pro does not support Magic Zoom). This feature lets you set a camera's view to a specific part of its full field of view. After zooming in (pinch to zoom), tap this icon and then tap <b>Continue</b> to make the zoomed-in view persist. To disable the zoomed-in view and restore the camera's full field of view, tap the icon again.
	Mute	Tap to mute the camera's audio. The icon changes to the <i>Unmute</i> icon.
	Unmute	Tap to unmute the camera's audio. The icon changes to the <i>Mute</i> icon.
	Full-screen	Tap to toggle the video display between normal size and full-screen display. (Not available on all models; if not available, rotate the device between landscape and portrait mode to switch views.)

- Note:** When *Enhance* is selected, the new view will apply to the following:
  - All live video from the camera.
  - All recorded video from the camera.
  - All motion zones for the camera.

**Note:** Depending on your mobile device's setup, the icon bar may contain additional icons not related to the UniFi Video mobile app.

Below the icon bar, the following information is displayed:

**Camera Name** Displays the name of the camera.


**Camera Settings** Tap **Camera Settings** to access camera settings:


- Motion Alert Sound** (Available on UVC-Micro and UVC-Pro only) Set to *On* to enable the camera's motion alert sound, or set to *Off* to disable the motion alert sound.
- Camera LED** (Available on UVC-Micro only) Set to *On* to enable the camera's LED, or set to *Off* to disable the LED.
- Image Settings** Tap **Image Settings** to access the *Image Settings* screen.

**IP Address** Displays the IP address of the camera on the local network.

**Firmware** Displays the firmware version installed on the camera.


**Status** Displays *Connected* or *Disconnected*.


**Record Mode** Displays the recording mode: *Off*, *On Motion*, or *Always*. To change the setting, tap the  icon and select the new setting.

**Record Resolution** Displays the recording resolution: *High*, *Medium*, or *Low*. To change the setting, tap the  icon and select the new setting.

**Recent Recordings** Tap **Recent Recordings** to open a *Recordings* screen that lists recordings for the selected camera only.


## Image Settings

 
The *Image Settings* screen lets you change the image settings for the live feed you are currently viewing. You can access this screen by tapping  to the right of the camera name.

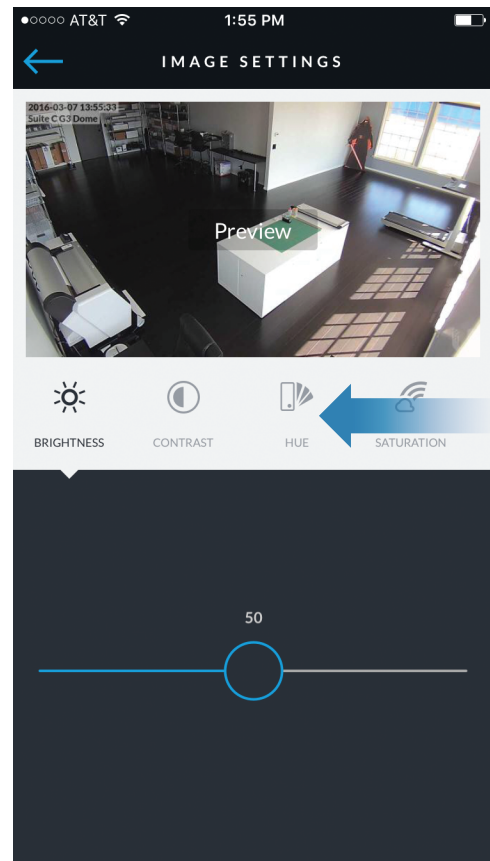


 
Use the adjustment slider to modify each image property. The *Image Settings* window includes a live preview that updates as adjustments are made. Swipe the *Image Settings* menu horizontally to see additional image settings.


The image settings include the following:

 **Brightness** Change the image brightness by moving the slider control left or right, from 0 (darkest) to 100 (brightest).



 **Contrast** Change the image contrast by moving the slider control left or right, from 0 (least contrast) to 100 (greatest contrast).



 **Hue** Change the image hue by moving the slider control left or right, from 0 (red end of spectrum) to 100 (purple end of spectrum).





SATURATION

**Saturation** Change the image saturation by moving the slider control left or right, from 0 (least saturated) to 100 (most saturated).



SHARPNESS

**Sharpness** Change the image sharpness by moving the slider control left or right, from 0 (least sharp) to 100 (sharpest).


 


DENOISE

**Denoise** Change the amount of image noise (“graininess”) by moving the slider control left or right, from 0 (most noise) to 100 (least noise).



ORIENTATION

**Orientation** Change the orientation of the live feed window by selecting **Flip Horizontally**  for a mirror image of the display or **Flip Vertically**  for an upside-down image of the display. Select both options to flip the image horizontally and vertically at the same time.



INFRARED

**Infrared** Adjust the infrared setting for the live feed image by selecting **Auto**, **On**, or **Off** on the menu bar.



AUTO EXPOSURE

**Auto Exposure** Adjust the exposure setting for your live feed image by selecting **Auto**, **50 Hz**, or **60 Hz** on the menu bar.



WDR

**WDR** Adjust the WDR sensitivity level by selecting **Lowest**, **Low**, **Mid**, or **High** on the menu bar.




RESET

**Reset** Resets all of the *Image Settings* to their default values.



## Multi-View Screen

The *Multi-View* screen displays live video feeds from four cameras. By default, the first four cameras listed in the *Cameras* screen are displayed.

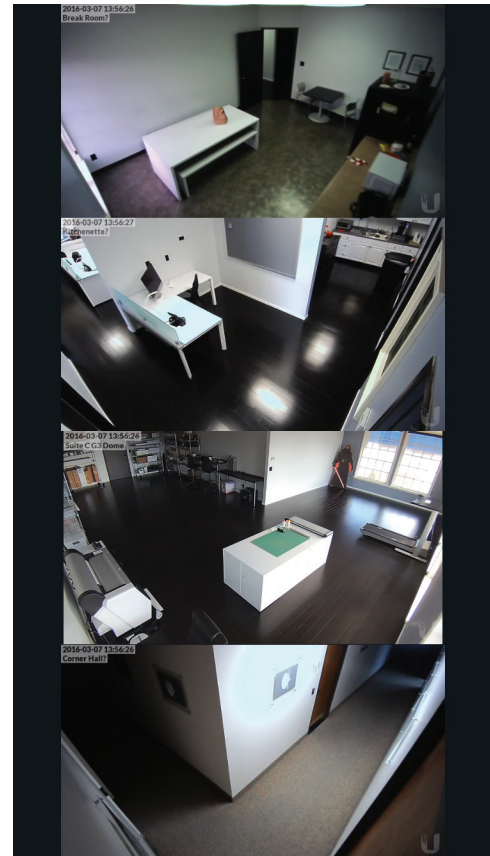

To access configuration options for a video feed, tap the video feed to display the following menu:



View Switch Fullscreen

To view a camera’s live stream:

1. Tap the video feed to display the menu.
2. Tap **View**.
3. The *Camera Detail* screen will appear. (For more information, refer to **“Camera Detail” on page 34.**)

To change a video feed to display a different camera:


1. Tap the video feed to display the menu.
2. Tap **Switch**.
3. A list of cameras will be displayed. Tap a camera to select it.
4. The *Multi-View* screen will be displayed with the new camera in the video feed.

To enlarge a video feed to full-screen display:

1. Tap the video feed to display the menu.
2. Tap **Fullscreen**.

## Recordings Screen

The *Recordings* screen displays a list of recently recorded video clips from all cameras that are known to the UniFi controller.

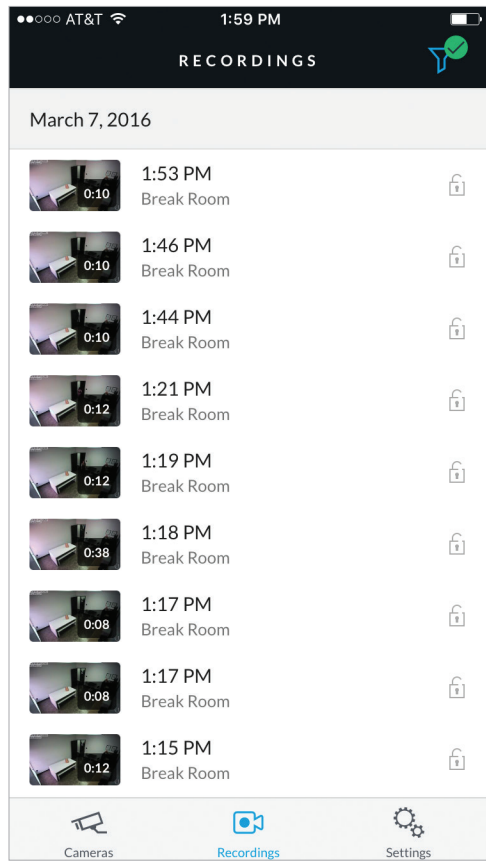


**Note:** The recording of video clips is controlled by the recording preferences defined on the *Cameras* page of the *UniFi Video* app (see **“Recording” on page 11**) and on the *Camera Detail* screen of the mobile app (see **“Camera Detail” on page 34**).

For each recording in the list, the following information is displayed:

- A thumbnail image of the recording, superimposed with the length of the recording in minutes and seconds
- The starting time of the recording
- The name of the camera which made the recording


To view a recording, tap the recording to display the *Recording Playback* screen.

Tap the filter  icon in the top-right corner of the screen to display the filtering options: *Date Range*, *Cameras*, *Type*, and *Locked*.



## Date Range

Select a specific date or range of dates to filter when listing the recent video recordings.

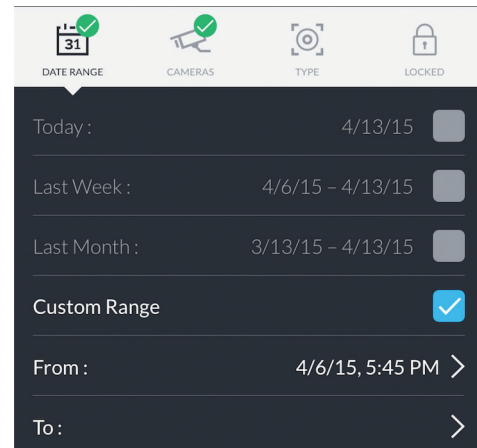

**Today** Displays a list of all recordings from today.

**Last Week** Displays a list of recordings from the last seven days.

**Last Month** Displays a list of recordings from the last month.

**Custom Range** Allows you to display a list of recordings based on a range of dates and times specified by the user.

- **From** Select the beginning date and time for your range.
- **To** Select the ending date and time for your range.

## Cameras

Select specific cameras to view in the list of recent recordings. If no specific cameras are selected, then all cameras managed by the NVR will appear in the list.

## Type

Allows you to select specific cameras based on their recording mode.

**Record on Motion** Include cameras that record on motion only.

**Always Record** Include cameras that record all the time, regardless of motion.

## Locked


**Locked** Filters the view on recent recordings for video clips that are locked and cannot be deleted.


**Unlocked** Filters the view on recent recordings for video clips that are unlocked.





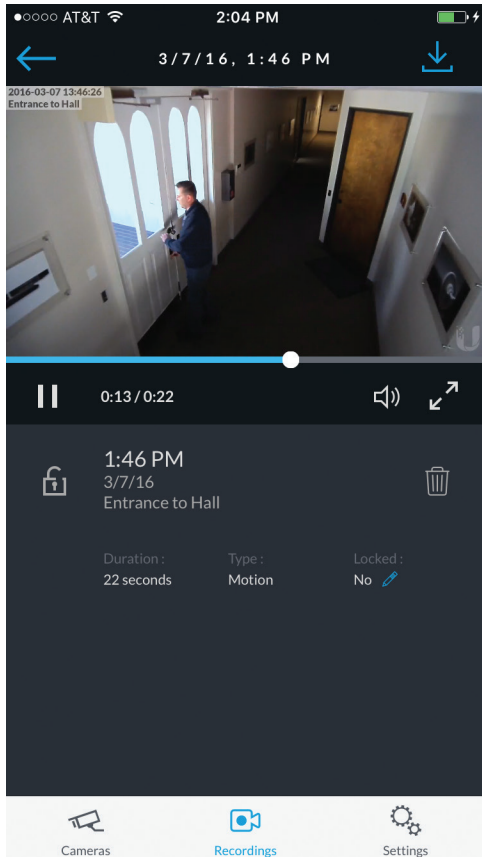

## Recording Playback Screen

To begin playback of a recently recorded video clip, tap the clip in the *Recordings* screen list.






Tap  at the top-right corner of the screen to download the video clip to *Camera Roll* on your mobile device.

Icons below the recording playback screen provide the following controls:

Icon	Name	Function
	Play	Tap to play the recording. The icon changes to the <i>Pause</i> icon.
	Pause	Tap to pause the recording. The icon changes to the <i>Play</i> icon.
	Mute	Tap to mute the recording's audio. The icon changes to the <i>Unmute</i> icon.
	Unmute	Tap to unmute the recording's audio. The icon changes to the <i>Mute</i> icon.

Icons at the bottom of the recording playback screen provide the following controls:

Icon	Name	Function
	Locked	Tap to unlock the video recording. The icon changes to the <i>Unlocked</i> icon.
	Unlocked	Tap to lock the video recording. The icon changes to the <i>Locked</i> icon.
	Delete	Tap and confirm to delete the video recording.

The following information is displayed below the screen:


**Duration** The duration of the video clip.


**Camera** The name of the camera that recorded the video clip.

**Type** The recording criteria: *On Motion* or *Always*.

**Locked** The lock status: *Yes* (locked) or *No* (unlocked).

## Settings Screen

To access the *Settings* screen, tap  in the tab bar.

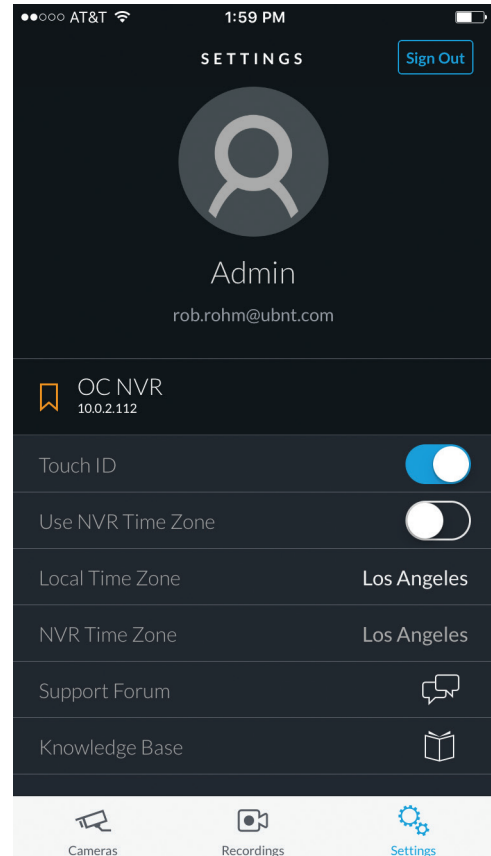

**Sign Out** Tap this option to sign out of the UniFi Video mobile app.

**Use NVR Time Zone** Select this option if you want the mobile app to use the NVR's time zone. This does not affect the NVR's time zone.

**Local Time Zone** This displays the local time zone of your mobile device.

**NVR Time Zone** This displays the time zone of the NVR.

**Support Forum** Tap this option to open the UniFi Video Support Forum in a web browser.


**Knowledge Base** Tap this option to open the UniFi Video Knowledge Base in a web browser.

## UniFi Video App for Android

1. If you have not connected your Ubiquiti account to the NVR, do so now as described in [“UniFi Video Cloud” on page 29](#).
2. On your smartphone or tablet, download the free *UniFi Video* mobile app for Android from the Google Play™ Store.



3. Open the *UniFi Video* mobile app. The *Sign In* screen appears:

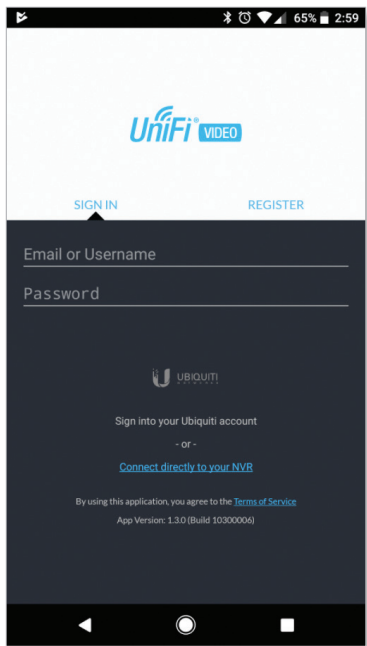


4. To sign in using your Ubiquiti user account, enter your *E-mail* address or *Username* and *Password*, and then tap **Sign In**. Go to step 7.




**Note:** If you do not have a Ubiquiti account, tap **Register**, enter all requested info, and tap **Register**. Then connect the account to your NVR as described in [“UniFi Video Cloud” on page 29](#) before continuing.

5. To connect directly to an NVR without signing into your Ubiquiti account, tap **Connect directly to your NVR**.

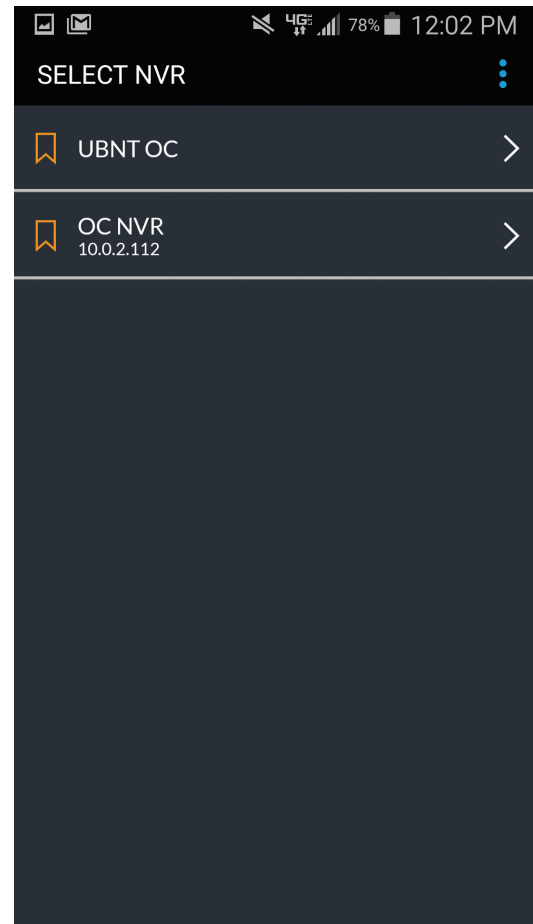

6. The *Select NVR* screen appears. Select the desired NVR from the list.



If the NVR you want is not displayed in the list, you can add it as follows:

- a. In the overflow menu , tap **Add New NVR**.
- b. Enter the NVR's *IP address* and your *Username* and *Password*. Then tap **Sign In**.


If you don't know the NVRs IP address, use the search function as follows:

- a. In the overflow menu , tap **Search for NVR**.
- b. Newly discovered NVRs will be displayed with  next to the name.





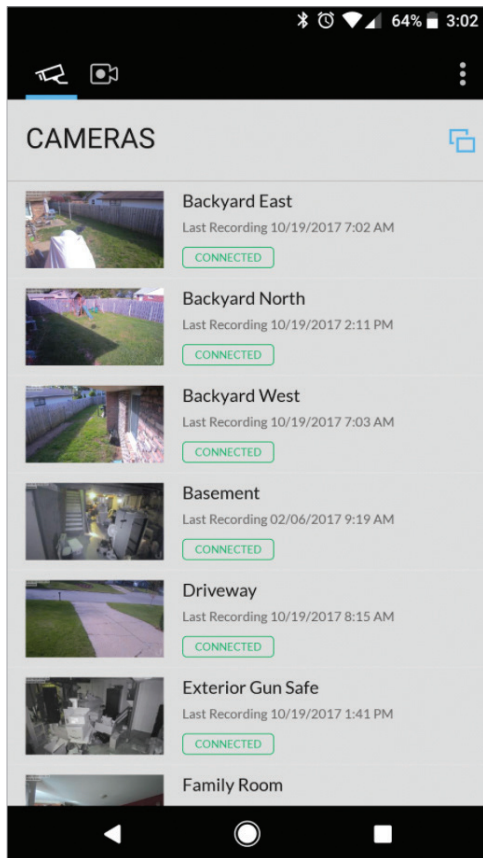

7. The app opens. By default, the *Cameras* screen appears:



The menu bar at the top of the screen has icons used to navigate between the main screens:

- Tap  to display the *Cameras* screen (already selected by default).
- Tap  to display the *Recordings* screen.

The overflow menu at the top right of the screen has the following options:

- **Settings** Tap **Settings** to display the *Settings* screen. Refer to **“Settings Screen” on page 44** for detailed information on the *Settings* screen.
- **Switch NVR** Tap **Switch NVR** to display the *Select NVR* screen and select a different NVR.
- **Sign Out** Tap **Sign Out** to sign out of the UniFi Video mobile app.


## Cameras Screen

The *Cameras* screen displays a list of cameras that are known to the UniFi controller. For each camera in the list, the following information is displayed:

- A thumbnail image of the camera’s view (image is faded if the camera is offline).
- The name of the camera.


- Date and time of two different events, depending on the connection status:
  - **Connected:** The date and time of the last recording, or N/A if no recordings are available.
  - **Not connected:** The date and time when the camera was last seen by the UniFi Video controller.
- The camera’s connection status: *Connected* or *Disconnected*.

On the *Cameras* screen, you have the following options:

- Select a camera from the list to open the *Camera Detail* screen which contains a live video feed from the camera as well as information on the camera.
- At the top right of the *Cameras* screen, tap the  icon to open the *Multi-View* screen, which displays live feeds from four cameras.

## Camera Detail


The *Camera Detail* screen displays a live video feed from the selected camera, as well as specific details on the camera, including its name, status, IP address, and software version.

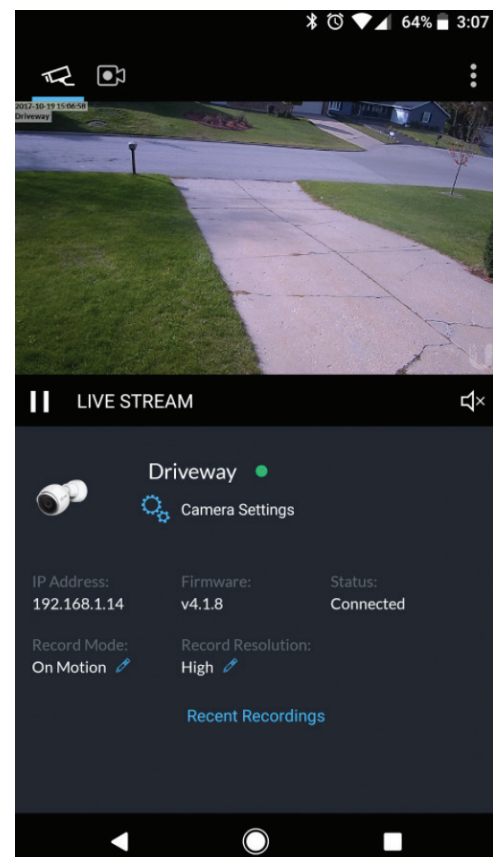

Icons below the *Camera Detail* screen provide the following controls:

Icon	Name	Function
	Pause	Tap to pause the live video stream. The icon changes to the <i>Play</i> icon.
▶	Play	Tap to resume the live video stream. The icon changes to the <i>Pause</i> icon.
🔇	Mute	Tap to mute the camera's audio. The icon changes to the <i>Unmute</i> icon.
🔊	Unmute	Tap to unmute the camera's audio. The icon changes to the <i>Mute</i> icon.
🎤	Microphone	Two-way communication available on select cameras (UVC-Micro and UVC-G3-Micro).

The following control is located above the video screen:

**Enhance**  (Available only on select G3 cameras. The G3 Pro will not support Magic Zoom). This feature lets you set a camera's view to a specific part of its full field of view. After zooming in (pinch to zoom), tap this icon and then tap **Continue** to make the zoomed-in view persist. To disable the zoomed-in view and restore the camera's full field of view, tap the icon again.

**Note:** When *Enhance* is selected, the new view will apply to the following:

- All live video from the camera.
- All recorded video from the camera.
- All motion zones for the camera.

Below the icon bar, the following information is displayed:

**Camera Name** Displays the name of the camera.


**Camera Settings** Tap **Camera Settings** to access camera settings:


- **Motion Alert Sound** (Available on UVC-Micro and UVC-Pro only) Set to *On* to enable the camera's motion alert sound, or set to *Off* to disable the motion alert sound.
- **Camera LED** (Available on UVC-Micro only) Set to *On* to enable the camera's LED, or set to *Off* to disable the LED.
- **Image Settings** Tap **Image Settings** to access the *Image Settings* screen.

**IP Address** Displays the IP address of the camera on the local network.

**Firmware** Displays the firmware version installed on the camera.

**Status** Displays *Connected* or *Disconnected*.


**Record Mode** Displays the recording mode: *Off*, *On Motion*, or *Always*. To change the setting, tap the  icon and select the new setting.

**Record Resolution** Displays the recording resolution: *High*, *Medium*, or *Low*. To change the setting, tap the  icon and select the new setting.


**Recent Recordings** Tap **Recent Recordings** to open a *Recordings* screen that lists recordings for the selected camera only.


## Image Settings


The *Image Settings* screen lets you change the image settings for the live feed you are currently viewing. To access this screen from the *Camera Detail* screen, tap **Camera Settings** and then tap **Image Settings**.

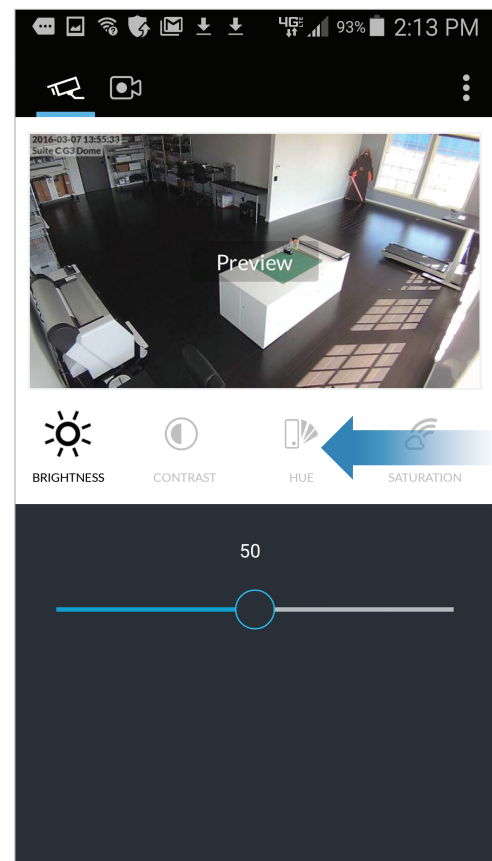



Use the adjustment slider to modify each image property. The *Image Settings* window includes a live preview that updates as adjustments are made. Swipe the *Image Settings* menu horizontally to see additional image settings. The image settings include the following:

  **Brightness** Change the image brightness by moving the slider control left or right, from 0 (darkest) to 100 (brightest).



  **Contrast** Change the image contrast by moving the slider control left or right, from 0 (least contrast) to 100 (greatest contrast).




 **Hue** Change the image hue by moving the slider control left or right, from 0 (red end of spectrum) to 100 (purple end of spectrum).






 
**Saturation** Change the image saturation by moving the slider control left or right, from 0 (least saturated) to 100 (most saturated).



 **Sharpness** Change the image sharpness by moving the slider control left or right, from 0 (least sharp) to 100 (sharpest).



 **Denoise** Change the amount of image noise (“graininess”) by moving the slider control left or right, from 0 (most noise) to 100 (least noise).



**Orientation** Change the orientation of the live feed window by selecting **Flip Horizontally** for a mirror image of the display or **Flip Vertically** for an upside-down image of the display. Select both options to flip the image horizontally and vertically at the same time.



**Infrared** Adjust the infrared setting for the live feed image by selecting **Auto**, **On**, or **Off** on the menu bar.



**Auto Exposure** Adjust the exposure setting for your live feed image by selecting **Auto**, **50 Hz**, or **60 Hz** on the menu bar.



**WDR** Adjust the WDR sensitivity level by selecting **Lowest**, **Low**, **Mid**, or **High** on the menu bar.




**Reset** Resets all of the *Image Settings* to their default values.



## Multi-View Screen

The *Multi-View* screen displays live video feeds from four cameras. By default, the first four cameras listed in the *Cameras* screen are displayed.

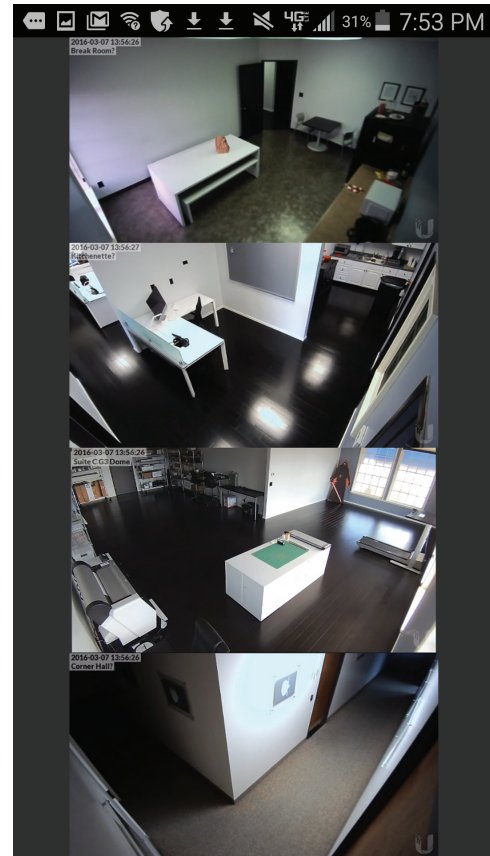

To access configuration options for a video feed, tap the video feed to display the following menu:



To view a camera’s live stream:

1. Tap the video feed to display the menu.
2. Tap **View**.
3. The *Camera Detail* screen will appear. (For more information, refer to **“Camera Detail” on page 40.**)

To change a video feed to display a different camera:


1. Tap the video feed to display the menu.
2. Tap **Switch**.
3. A list of cameras will be displayed. Tap a camera to select it.
4. The *Multi-View* screen will be displayed with the new camera in the video feed.

To enlarge a video feed to full-screen display:

1. Tap the video feed to display the menu.
2. Tap **Fullscreen**.

## Recordings Screen

The *Recordings* screen displays a list of recently recorded video clips from all cameras that are known to the UniFi controller.

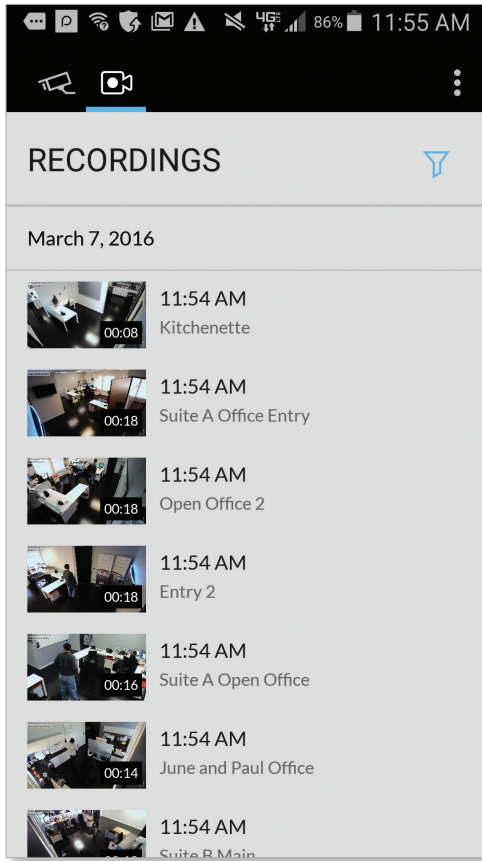


**Note:** The recording of video clips is controlled by the recording preferences defined on the *Cameras* page of the *UniFi Video* app (see **“Recording” on page 11**) and on the *Camera Detail* screen of the mobile app (see **“Camera Detail” on page 40**).

For each recording in the list, the following information is displayed:

- A thumbnail image of the recording, superimposed with the length of the recording in minutes and seconds
- The starting time of the recording
- The name of the camera which made the recording


To view a recording, tap the recording to display the *Recording Playback* screen.

You can also filter the list of recent recordings by date range, camera, camera type, and recording status (locked or unlocked). Select the filter  icon in the top-right corner of the screen to display the filtering options: *Date Range*, *Cameras*, *Type*, and *Locked*.



## Date Range

Select a specific date or range of dates to filter when listing the recent video recordings.

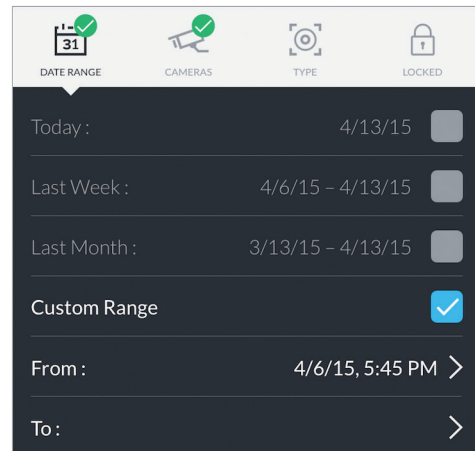

**Today** Displays a list of all recordings from today.

**Last Week** Displays a list of recordings from the last seven days.

**Last Month** Displays a list of recordings from the last month.

**Custom Range** Allows you to display a list of recordings based on a range of dates and times specified by the user.

- **From** Select the beginning date and time for your range.
- **To** Select the ending date and time for your range.

## Cameras

Select specific cameras to view in the list of recent recordings. If no specific cameras are selected, then all cameras managed by the NVR will appear in the list.

## Type

Allows you to select specific cameras based on their recording mode.

**Record on Motion** Include cameras that record on motion only.

**Always Record** Include cameras that record all the time, regardless of motion.

## Locked


**Locked** Filters the view on recent recordings for video clips that are locked and cannot be deleted.


**Unlocked** Filters the view on recent recordings for video clips that are unlocked.





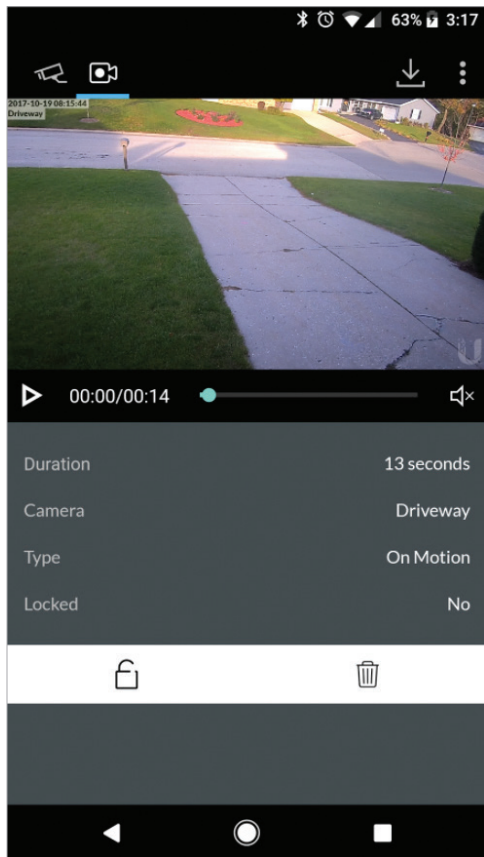

## Recording Playback Screen

 To begin playback of a recently recorded video clip, tap the clip in the *Recordings* screen list.






Tap  at the top-right corner of the screen to download the video clip to *Photos* on your mobile device.

Icons below the recording playback screen provide the following controls:

Icon	Name	Function
	Play	Tap to play the recording. The icon changes to the <i>Pause</i> icon.
	Pause	Tap to pause the recording. The icon changes to the <i>Play</i> icon.
	Mute	Tap to mute the recording's audio. The icon changes to the <i>Unmute</i> icon.
	Unmute	Tap to unmute the recording's audio. The icon changes to the <i>Mute</i> icon.

Icons at the bottom of the recording playback screen provide the following controls:

Icon	Name	Function
	Locked	Tap to unlock the video recording. The icon changes to the <i>Unlocked</i> icon.
	Unlocked	Tap to lock the video recording. The icon changes to the <i>Locked</i> icon.
	Delete	Tap and confirm to delete the video recording.

The following information is displayed below the screen:

**Duration** The duration of the video clip.


**Camera** The name of the camera that recorded the video clip.

**Type** The recording criteria: *On Motion* or *Always*.

**Locked** The lock status: *Yes* (locked) or *No* (unlocked).

## Settings Screen

To access the *Settings* screen, tap **Settings** in the overflow menu.

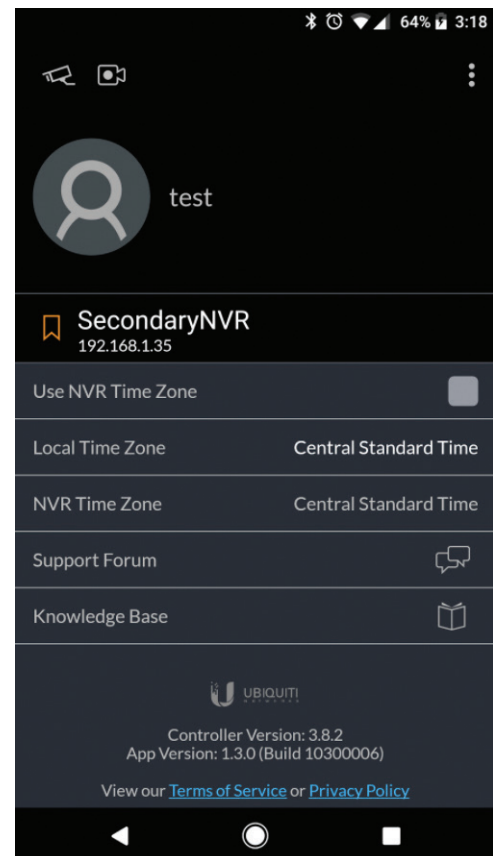

**Disconnect from my Ubiquiti Account** Tap this option to remove the NVR from your Ubiquiti account. Tap **Yes** to confirm the deletion.

**Notifications** Tap this option to enable or disable notifications. The default is enabled.

**Use NVR Time Zone** Select this option if you want the mobile app to use the NVR's time zone. This does not affect the NVR's time zone.

**Local Time Zone** This displays the local time zone of your mobile device.

**NVR Time Zone** This displays the time zone of the NVR.


**Support Forum** Tap this option to open the UniFi Video Support Forum in a web browser.

**Knowledge Base** Tap this option to open the UniFi Video Knowledge Base in a web browser.

## Appendix B: Standalone Mode


Standalone mode lets you directly access a UniFi Video camera via a web browser, without using the UniFi Video software. Use standalone mode to set up a camera right of the box, and to view a live video feed via RTSP streaming.

### Using Standalone Mode


 **Note:** To use standalone mode on a UniFi Video camera, the camera's firmware must be updated to version 3.9. To download the latest firmware for the UniFi Video camera, go to [downloads.ubnt.com/](https://downloads.ubnt.com/)

To use standalone mode on a UniFi Video camera:

1. Enter **https://<camera\_IP>** in your browser's address field (where *camera\_IP* is the IP address of the camera you want to access). Press **Enter** (PC) or **Return** (Mac).
2. The camera's login screen will appear. Enter your *Username* and *Password* (**ubnt** for both if this is the initial login to the camera). Then click **Login**.

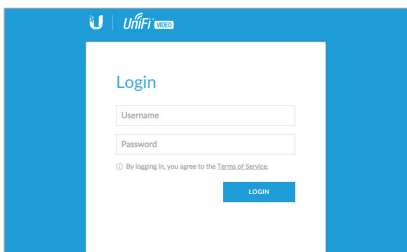


3. If you want to set up the camera, click **Continue** and follow the prompts. Otherwise, click **Skip**.
4. The camera's standalone mode window will appear, displaying a live video feed and camera information.

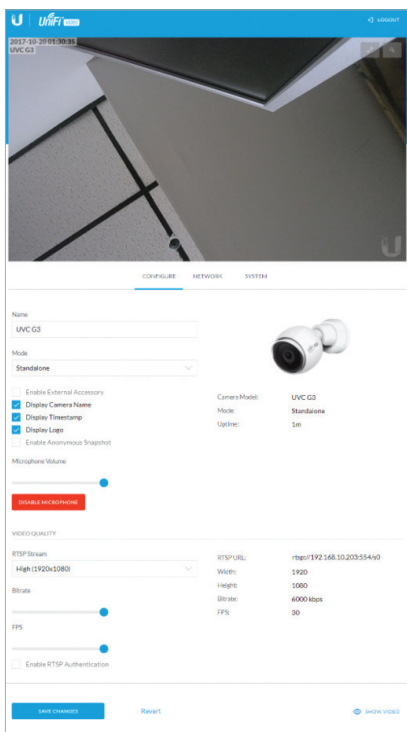

Below the live video display, the window has three tabs: *Configure*, *Network*, and *System*. Edit the settings on each tab as needed.

### Configure Tab

The *Configure* tab displays basic camera settings and allows you to configure certain settings. The top section of the *Configure* tab provides the following information:

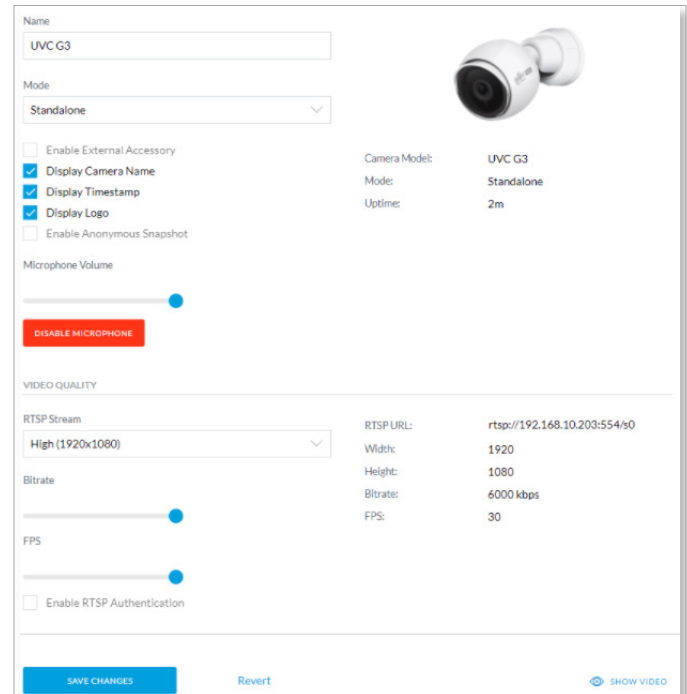

**Name** Displays the local device name and a thumbnail image of the camera.

**Mode** The mode of the camera: *UniFi Video* or *Standalone*. The *UniFi Video* setting indicates that the camera is being managed by UniFi Video. To go into standalone mode, select *Standalone* and click **Save Changes**. (If you are prompted to unmanage the camera, do so as described in **“Unmanaging a Camera” on page 49.**)

**UniFi Video Server** (Available in UniFi Video mode only.) Displays the IP address of the UniFi video server.


**Display Camera Name** Used to enable or disable the camera name display in the video feed. Default is *Disabled*.

**Display Timestamp** Used to enable or disable the timestamp in the video feed. Default is *Enabled*.

**Display Logo** Used to enable or disable the logo display in the video feed. Default is *Enabled*.

**Microphone Volume** Move the slider left or right to adjust the microphone volume for recording audio.

**Disable Microphone** To disable the microphone, click **Disable Microphone** and then click **Continue** to confirm.

 **Note:** To re-enable the microphone, you will have to manually reset the camera to factory defaults by pressing its reset button.

**Camera Model** Displays the model of the camera.

**Mode** Displays the camera mode: *UniFi Video* or *Standalone*.

**Connected To** Displays the IP address of the server to which the camera is connected.

**Uptime** Displays the camera's total uptime in days, hours, and minutes.

## Video Quality

The *Video Quality* section is available in Standalone mode only. This section of the *Configure* tab provides the following information:

**RTSP Stream** Displays the current video resolution of the RTSP stream: *High* ( $n \times n$ ), *Medium* ( $n \times n$ ), or *Low* ( $n \times n$ ).



**Note:** The displayed resolution for *High*, *Medium*, and *Low* is hardware-dependent. The first number indicates the vertical image height in pixels.

**Bitrate** Drag the slider control left or right to adjust the RTSP streaming bitrate.

**FPS** Drag the slider control left or right to adjust the frames per second.

**Enable RTSP Authentication** Use this option to require a user to authenticate before allowing the user to view an RTSP live stream from the camera. Check the box to enable this option, then enter the *Username* and *Password* that will be used for authentication.

**RTSP URL** Displays the current URL for RTSP streaming.

**Width** Displays the current width of the RTSP video feed.

**Height** Displays the current height of the RTSP video feed.

**Bitrate** Displays the current bitrate of the RTSP video feed.

**FPS** Displays the current frame rate of the RTSP video feed.

## Bottom of Window

The controls displayed at the bottom of the *Configure* tab are used as follows:

**Save Changes** Click this button to save changes you have made.

**Revert** Click this button to cancel any changes you have made and restore the original settings.

**Show Video** Click this to scroll the window up to the live video feed.

## Network Tab

The *Network* tab displays network-related settings for the camera.

**Configuration Mode** Used to set the camera's IP address configuration mode to *Static* or *DHCP*.

**DHCP Fallback IP Address** Use this to specify the IP address to fall back to if *Configuration Mode* is set to *DHCP* and no DHCP server is available.

**DHCP Fallback Netmask** Use this to specify the IP net mask if *Configuration Mode* is set to *DHCP* and no DHCP server is available.

**Camera IP Address** Displays the camera's IP address.

**MAC Address** Displays the camera's MAC address.

**Netmask** Displays the camera's IP net mask.

**Gateway** Displays the gateway IP address.

**Primary DNS** Displays the DNS server IP address.

**Secondary DNS** Displays the secondary DNS server IP address.

**Received** Displays how much data (in Kb) the camera has received.

**Transmitted** Displays how much data (in Mb) the camera has sent.

**Save Changes** Click this button to save changes you have made.

**Revert** Click this button to cancel any changes you have made and restore the original settings.

**Show Video** Click this to scroll the window up to the live video feed.



## System Tab

The *System* tab displays system-related information for the camera.

### Account

The *Account* section of the *System* tab provides the following information:

**Administrator Username** Displays the username for the current user.

**Old Password** Displays the current password.

**New Password** To change the password, enter the new password in this field. (Click **Show** to display the password.)

**Verify New Password** Re-enter the new password in this field to verify it. (Click **Show** to display the password.)

**Save Changes** Click this button to save changes you have made.

**Revert** Click this button to cancel any changes you have made and restore the original settings.

### Language

The *Language* section of the *System* tab provides the following information:

**Language** To change the language used by the UI, click the drop-down menu and select an available language: *English, Français, Español, Español (América Latina), Português Brasileiro, Русский, فارسی, 中文 (简体), or 繁體中文*. The default is *English*.

**Save Changes** Click this button to save any changes you have made.

**Revert** Click this button to cancel any changes you have made and restore the original settings.

### Time and Date

This section is available in Standalone mode only.

**NTP Server** Displays the IP address or URL of the Network Time Protocol (NTP) server from which the camera obtains its system time.

**Timezone** Displays the camera's time zone.

### Firmware

The *Firmware* section of the *System* tab contains the following options and information:

**Upload Firmware File** Displays the name of the firmware file that you have selected for upload.

**Choose** Click this button to select a firmware file for upload to the camera.

**Firmware Version** Displays the version of the firmware that is currently installed in the camera.

### Maintenance

The *Maintenance* section of the *System* tab provides the following information:

**View Camera Log** Click this to display the camera log. When you are finished viewing, click **Cancel** to close the window or **Save** to save a local copy.

```

VIEW CAMERA LOG
2016-02-24 15:12:12 502415,712 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 36)
2016-02-24 15:12:12 502415,719 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 36)
2016-02-24 15:12:42 502445,726 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 36)
2016-02-24 15:12:42 502445,736 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 36)
2016-02-24 15:13:12 502475,719 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:13:12 502475,722 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:13:42 502505,704 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:13:42 502505,710 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:14:12 502535,708 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:14:12 502535,715 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:14:20 502544,018 P6 analytics[943]: Sending event (113) start, triggers: [0-2]
2016-02-24 15:14:28 502552,151 P6 analytics[943]: Sending event (113) stop, triggers: [0-2]
2016-02-24 15:14:42 502565,707 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:14:42 502565,713 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:15:12 502595,713 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:15:12 502595,717 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:15:42 502625,731 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:15:42 502625,735 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:16:12 502655,712 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:16:12 502655,729 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:16:42 502685,765 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:16:42 502685,794 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:17:12 502715,729 P7 netd[948]: Enqueuing task 'NetworkStatus' (type: 0, id: 37)
2016-02-24 15:17:12 502715,736 P7 netd[948]: onTaskFinished(): 'NetworkStatus' (type: 0, id: 37)
  
```

**Download Support File** Click this to download the support file.



**Reset To Defaults** Click this to reset the camera to its factory default settings.









**Reboot** Click this to reboot the camera.






**Show Video** Click this to scroll back up to the top the window to display the live video feed.

## Configuring the Camera

When the camera is in standalone mode, the top right corner of the live video feed display has two icons:

-  Click this icon to toggle the live video screen between normal size and full-screen display.
-  Click this icon to display the drop-down menu that allows you to perform the following camera functions:

- **Brightness**  Adjust the brightness of the live view image by dragging the slider control to the left or right.
- **Contrast**  Adjust the contrast of the live view image by dragging the slider control to the left or right.
- **Hue**  Adjust the hue of the live view image by dragging the slider control to the left or right.
- **Saturation**  Adjust the saturation of the live view image by dragging the slider control to the left or right.
- **Denoise**  Adjust the noise level of the live view image by dragging the slider control to the left or right.
- **Sharpness**  Adjust the sharpness of the live view image by dragging the slider control to the left or right.
- **WDR**  Adjust the WDR (Wide Dynamic Range) sensitivity of the live view image by dragging the slider control to the left or right. WDR helps create better image and video detail in frames that contain both light and dark areas that would otherwise be over- or underexposed.
- **AE Mode**  Choose AE (*Auto Exposure*) mode for the live view images by selecting **Normal**, **Anti-Flicker for 60 Hz light**, or **Anti-Flicker for 50 Hz light** from the drop-down menu. The default is *Normal*.

- **Flip**  Reverse the image vertically (flip upside down) by selecting **Flip** from the drop-down menu, or restore the normal view by selecting **Normal** from the drop-down menu. The default is *Normal*.
- **Mirror**  Reverse the image horizontally (mirror image) by selecting **Mirror** from the drop-down menu, or restore the normal view by selecting **Normal** from the drop-down menu. The default is *Normal*.
- **IR Mode**  The infrared filter can be changed for the live view image by selecting *On* or *Off* from the drop-down menu. The default setting is *Auto*.
- **Zoom**  Adjust the optical zoom (if equipped) from 1x up to 3x.
- **Focus**  Adjust the focus mechanism (if equipped).

## Standalone Mode from UniFi Video

You can also enter standalone mode on a camera from within the UniFi Video software.


### Entering Standalone Mode

To enter standalone mode on a camera within UniFi Video:


1. On the *Cameras* tab, click the camera's IP address in the *Host* column.

	NAME	HOST	MAC ADDRESS	LAST RECORDING	LINK STATE
	Micro Rob	10.0.2.183	44:D9:87:05:0B:53	n/a	Disconnected 

2. The camera's login screen will appear. Enter your *Username* and *Password*. Then click **Login**.

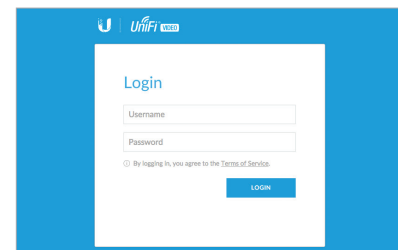

3. If you want to set up the camera, click **Continue** and follow the prompts. Otherwise, click **Skip**.
4. The camera's standalone mode window will appear, displaying a live video feed and camera information.

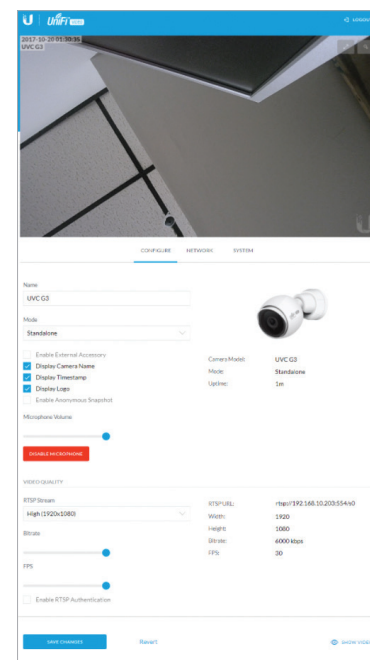

5. If the *Mode* field is set to *UniFi Video*, click **Standalone** and click **Save Changes**. (If you are prompted to unmanage the camera, do so as described in **“Unmanaging a Camera” on page 49.**)

You will now have direct access to the camera through standalone mode.

## Unmanaging a Camera

To access a camera from UniFi Video using standalone mode, the camera must be unmanaged.

To check if a camera is managed or unmanaged:

1. Go to the *Cameras* tab.
2. Click *Managed* to display the list of managed cameras.
3. If the camera appears in the list, the camera is managed. If not, the camera is unmanaged.

To unmanage a managed camera:

1. Go to the *Cameras* tab.
2. Click *Managed* to display the list of managed cameras.
3. Select the camera from the list to display its details window.
4. Select the **Manage** tab on the details window.
5. Click **Unmanage**.
6. If you want to keep the camera's recordings, click **Keep My Recordings**. To delete the camera's recordings (except locked recordings), click **Remove Everything**.



## Appendix C: Contact Information

---

### Ubiquiti Networks Support

Ubiquiti Support Engineers are located around the world and are dedicated to helping customers resolve software, hardware compatibility, or field issues as quickly as possible. We strive to respond to support inquiries within a 24-hour period.

Ubiquiti Networks, Inc.  
685 Third Avenue, 27th Floor  
New York, NY 10017  
USA

### Online Resources

Website: [www.ubnt.com](http://www.ubnt.com)

Support: [ubnt.link/UniFi-Video-Support](http://ubnt.link/UniFi-Video-Support)

Community: [https://community.ubnt.com/t5/UniFi-Video/bd-p/airVision board](https://community.ubnt.com/t5/UniFi-Video/bd-p/airVision-board)

Downloads: [www.ubnt.com/download/unifi-video](http://www.ubnt.com/download/unifi-video)



[www.ubnt.com](http://www.ubnt.com)