

 











KEYBOARD + MOUSE

CKU200
CKW200
KU200

Quick Installation Guide
Schnellinstallationsanleitung
Guide d'installation rapide
Guía de instalación rápida
Guida all'installazione rapida
Verkorte installatiegids

F-Keys



FN + F1= 	FN + F5= 	FN + F9= 
FN + F2= 	FN + F6= 	FN + F10= 
FN + F3= 	FN + F7= 	FN + F11= 
FN + F4= 	FN + F8= 	FN + F12= 

LED Lights


CKU200 + KU200




CKW200




CKW200 Only

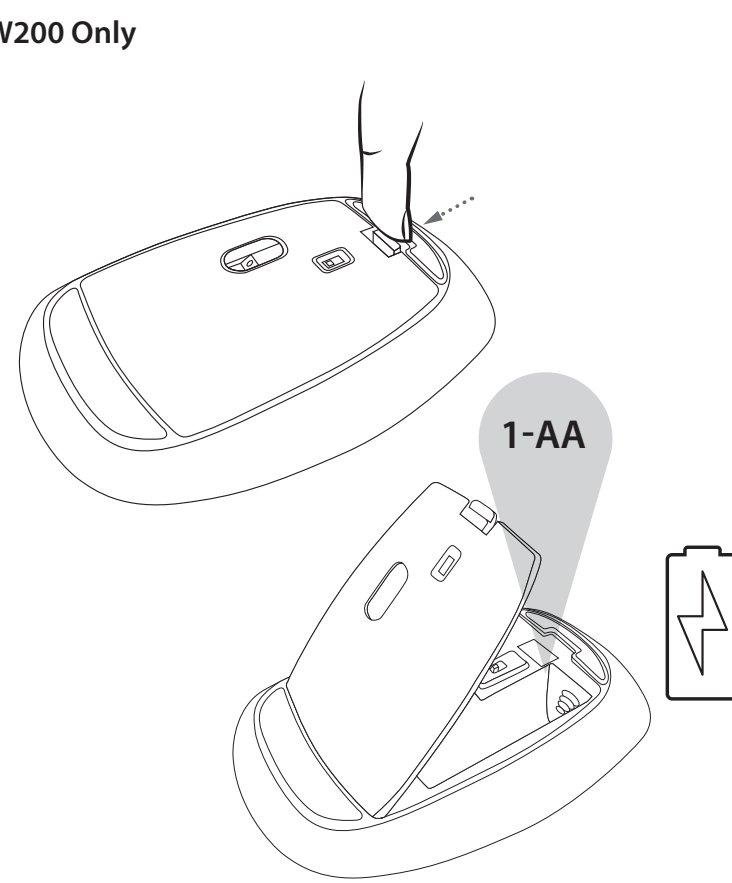

1

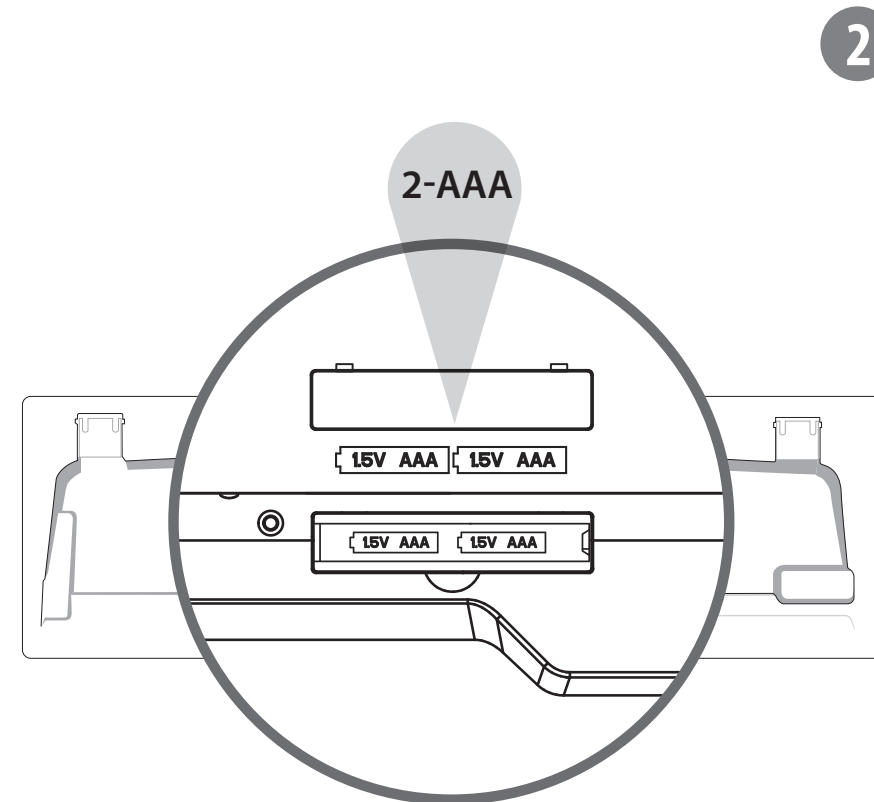

2

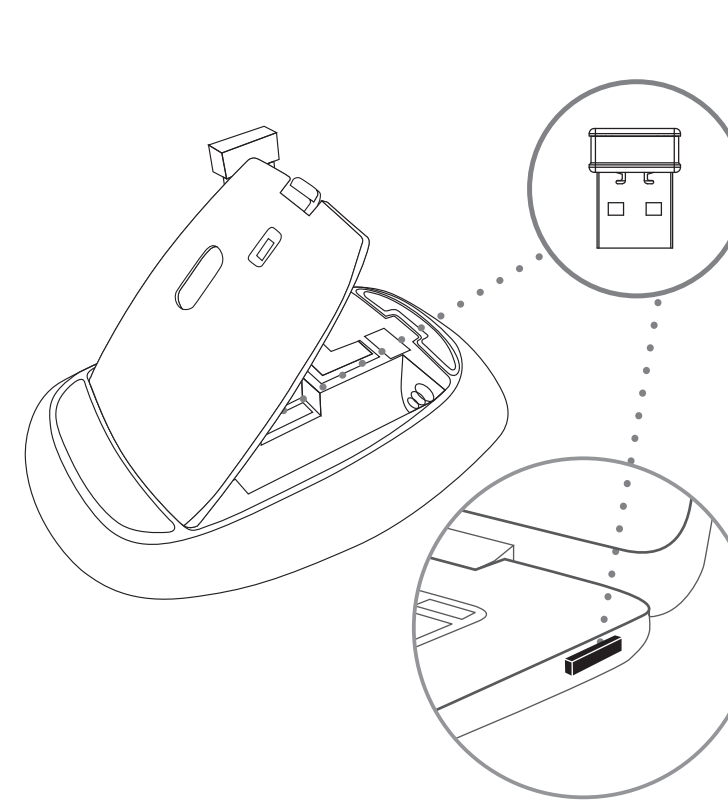

3

Reset • Zurückstellen • Réinitialiser • Reiniciar • Reset • Resetten

