

# DAILY REFERENCE GUIDE

 **THANK YOU FOR PURCHASING A WHIRLPOOL PRODUCT**  
To receive more comprehensive help and support, please register your product at [www.whirlpool.eu/register](http://www.whirlpool.eu/register)




You can download the Safety Instructions and the Use and Care Guide by visiting our website [docs.whirlpool.eu](http://docs.whirlpool.eu) and following the instructions on the back of this booklet.




Before using the appliance carefully read the Health and Safety guide.

## PRODUCT DESCRIPTION

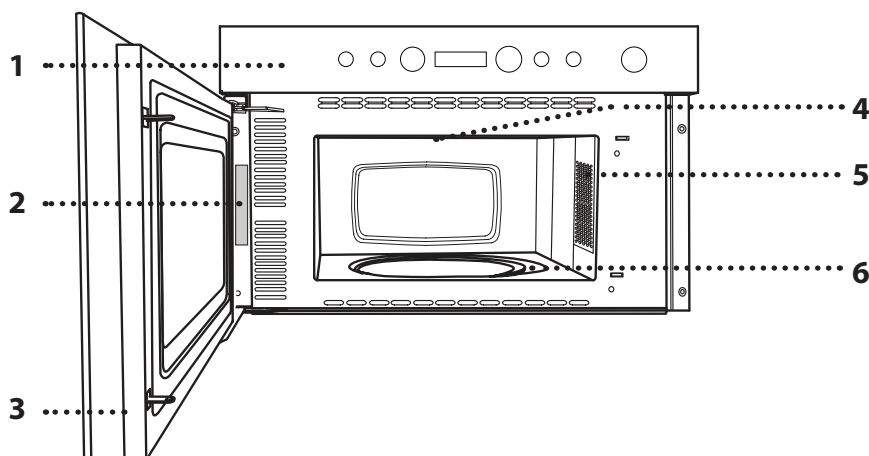

1. Control panel
2. Identification plate (do not remove)
3. Door
4. Grill
5. Light
6. Turntable

## CONTROL PANEL DESCRIPTION

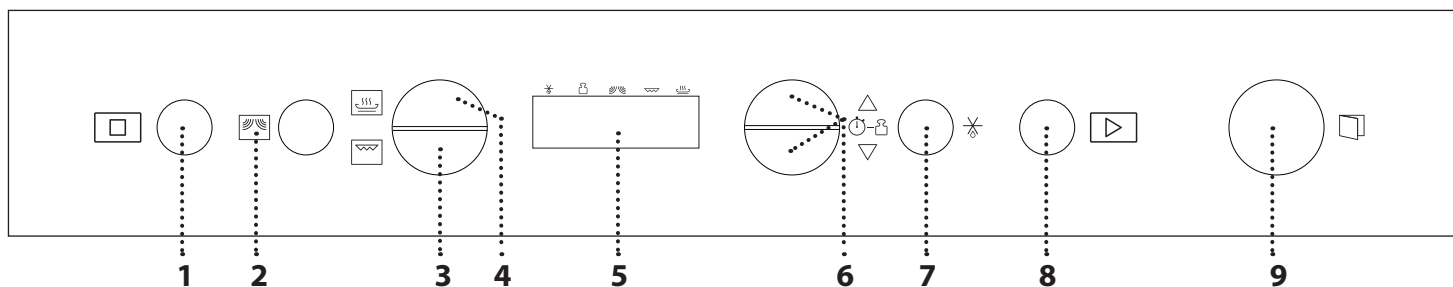

### 1. STOP

For stopping a function or an audible signal, cancelling the settings and switching off the oven.

### 2. MICROWAVE FUNCTION/POWER

For selecting the microwave function and setting the required power level.

### 3. GRILL FUNCTION

### 4. CRISP FUNCTION

### 5. DISPLAY

### 6. + / - BUTTONS

For adjusting the settings of a function (e.g. length, weight).

### 7. JET DEFROST FUNCTION

### 8. START

For starting a function.

### 9. DOOR OPENING BUTTON

# ACCESSORIES


## TURNTABLE



Placed on its support, the glass turntable can be used with all cooking methods.

The turntable must always be used as a base for other containers or accessories.


## TURNTABLE SUPPORT

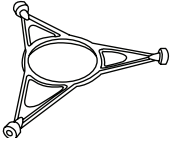

Only use the support for the glass turntable.

Do not rest other accessories on the support.

## WIRE RACK

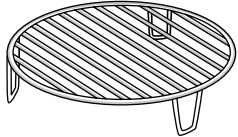


This allows you to place food closer to the grill, for perfectly browning your dish. Place the wire rack on the turntable, making sure that it does not come into contact with other surfaces.

The number and the type of accessories may vary depending on which model is purchased.

**There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.**

**Metallic containers for food or drink should never be used during microwave cooking.**


## CRISP PLATE

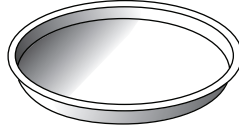

Only for use with the designated functions. The Crisp plate must always be placed in the centre of the glass turntable and can be pre-heated when empty, using the

special function for this purpose only. Place the food directly on the Crisp plate.

## HANDLE FOR CRISP PLATE

 

Useful for removing the hot Crisp plate from the oven.

Other accessories that are not supplied can be purchased separately from the After-sales Service.

**Always ensure that foods and accessories do not come into contact with the inside walls of the oven.**

**Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.**

# FUNCTIONS



## MICROWAVE

For quickly cooking and reheating food or drinks.

POWER (W)	RECOMMENDED FOR
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.
160 W	Defrosting frozen food or softening butter and cheese.
0 W	When using the minuteminder only.



## GRILL

For browning, grilling and gratins when used alone. We recommend turning the food during cooking. For best results, preheat the grill for 3-5 minutes. For quickly cooking and gratinating dishes, combines with microwaves.

### • GRILL + MW

For quickly cooking entrées (even au gratin) using both microwaves and the grill. It is useful for cooking food like lasagne, fish and potato gratins.

POWER (W)	DURATION (min)	RECOMMENDED FOR
500	14 - 18	Lasagne (400 - 500 g)
500	10 - 14	Fish (600 g)
500	40 - 50	Chicken (whole; 1-1.2 kg)
350	15 - 18	Fish gratin (600 g)
0	-	Browning only

Required accessory: Wire rack

**CRISP**

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate. This function must only be used with the special Crisp-plate provided, which must be placed at the centre of the glass turntable. It is recommended to preheat the plate for 2-3 minutes before cooking any food items that do not require long cooking times, like pizza or desserts.

DURATION (min)	RECOMMENDED FOR
3 - 4	Cookies (8- 10 pieces)
7 - 8	Frozen pizza (350 g)
7 - 9	Sponge cake (500 g)
8 - 10	Fish fingers (8 pieces)
9 - 10	Pizza (350 g)
10 - 14	French fries (200 - 300g)
13 - 15	Quiche Lorraine (500 g)

Required accessory: Crisp plate, handle for the crisp plate.

**DAILY USE****. SELECT A FUNCTION**

Simply press the button for the function you require to select it.

**. SET THE LENGTH**

 
After selecting the function you require, use  $\Delta$  or  $\nabla$  to set the length for it to run.



The time can be changed during cooking by pressing  $\Delta$  or  $\nabla$  or by increasing the length for 30 seconds each time by pressing  $\square$ .

**. SET THE POWER OF THE MICROWAVE**

Press  $\text{microwave icon}$  as many times as required to select the power level for the microwave.



To use the microwave in combination with the grill, select the "Grill" function by pressing  $\text{grill icon}$  and then use  $\text{microwave icon}$  to set the microwave power.

Please note: You can also change this setting during cooking by pressing  $\text{microwave icon}$ .

**. JET DEFROST**

Press  $\text{jet defrost icon}$ , then use  $\Delta$  or  $\nabla$  to set the weight of the food. During defrosting, the function will pause briefly to allow you to turn the food. Once the operation is complete, close the door and press  $\square$ .

**. ACTIVATE THE FUNCTION**

Once you have applied the settings you require, press  $\square$  to activate the function.

Every time the  $\square$  button is pressed again, the cooking time will be increased by a further 30 seconds.

You can press  $\square$  at any time to stop the function that is currently active.

**JET DEFROST**

For quickly defrosting various different types of food simply by specifying their weight. Food should be placed directly onto the glass turntable. Turn the food when prompted. Food should be placed directly onto the glass turntable. Turn the food when prompted. A standing time after defrosting always improves the result.

**. JET START**

When the oven is switched off, press  $\square$  to activate cooking with the microwave function set at full power (750 W) for 30 seconds.

**. PAUSE**

To pause an active function, for example to stir or turn the food, simply open the door.

To start it up again, close the door and press  $\square$ .

**. SAFETY LOCK**

This function is automatically activated to prevent the oven from being switched on accidentally. Open and close the door, then press  $\square$  to start the function.

**. SET THE TIME OF THE DAY**

Press  $\square$  until the two digits for the hour (on the left) starting flashing.

Use  $\Delta$  or  $\nabla$  to set the correct hour and press  $\square$  to confirm: The minutes will flash on the display. Use  $\Delta$  or  $\nabla$  to set the minutes and press  $\square$  to confirm.

Please note: You may need to set the time again following lengthy power outages.

**. MINUTEMINDER**

The display can be used as a timer. To activate the function and set the length of time you require, use  $\Delta$  or  $\nabla$ . Press  $\text{microwave icon}$  to set the power to 0 W, then press  $\square$  to activate the countdown.

Please note: The timer does not activate any of the cooking cycles. To stop the timer at any time, press  $\square$ .

# CLEANING

Make sure that the appliance has cooled down before carrying out any maintenance or cleaning.

Never use steam cleaning equipment.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

## INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue.
- The grill does not need to be cleaned as the intense heat burns away any dirt. Use this function on a regular basis.


## ACCESSORIES

All accessories are dishwasher safe with the exception of the crisp plate. The crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the crisp plate to cool down before cleaning.


# TROUBLESHOOTING

Problem	Possible cause	Solution
The oven is not working.	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The display is showing "Err".	Software fault.	Contact your nearest After-sales Service Centre and state the letter or number that follows "Err".

## PRODUCT FICHE

 [www](http://www.docs.whirlpool.eu) The product fiche with energy data of this appliance can be downloaded from Whirlpool website [docs.whirlpool.eu](http://docs.whirlpool.eu)

## HOW TO OBTAIN THE USE AND CARE GUIDE


>  [www](http://www.docs.whirlpool.eu) Download the Use and Care Guide from our website [docs.whirlpool.eu](http://docs.whirlpool.eu) (you can use this QR Code), specifying the product's commercial code.



> Alternatively, contact our Client After-sales Service.

## CONTACTING OUR AFTER-SALES SERVICE

You can find our contact details in the warranty manual. When contacting our Client After-sales Service, please state the codes provided on your product's identification plate.

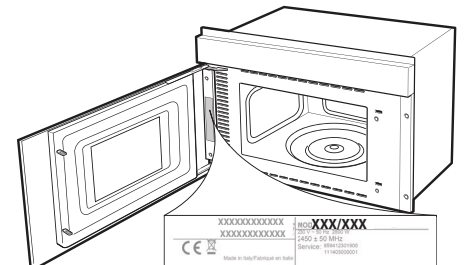

**40001161329**

Printed in Italy