

# Canon

## Mini Photo Printer User Manual



# Zoemini

# CONTENTS

## SAFETY INFORMATION

## PRINTER OVERVIEW

## PRINTER SETUP

- A) Charge Printer
- B) Power On
- C) Load Paper

## INSTALLING APP

## PAIRING DEVICE & PRINTER

## USER INTERFACE

- Home Screen / Main Menu
  - Camera Mode
  - Photo Gallery
  - Print Photos
  - Edit Photos
  - Using Tile Print
  - Using Collage Print
  - Share Photos
  - Save Photos
  - Send to Mini Print

## SPECIFICATIONS



# SAFETY INFORMATION

## READ BEFORE USE

Please read the following instructions and safety precautions before using the Printer.

For regulatory and additional safety information, refer to the Regulation and Safety Information sheet included in your printer package contents.

## ABOUT SYMBOLS



### CAUTION

Indicates information that if ignored, could result in accidental injury caused by improper use of the equipment. These must be observed for safe operation.



### NOTE

Instructions or content are important and must be followed accordingly.



### NOTE

---

- Do not use or leave the product under direct sunlight. Also avoid areas subject to rapid temperature changes, high humidity, dust and dirt.
- When operating in extreme weather, the printer might not print. Let the printer temperature adjust to recommended operating temperature of 15° to 32°C, before attempting to print again.
- When charging, please charge the printer in an environment with the recommended temperature of 15° to 32°C.




### CAUTION

---


- In areas with low humidity, the printer may build up a static electric charge. Take precautions before handling the printer.
- Keep the printer away from liquids or containers of liquids.
- Keep the ventilation openings clear of any objects that could block them.
- Do not under any circumstances dismantle the printer. If the product is not functioning properly, please contact the dealer you purchased this product from or Canon Service & Support at [www.canon-europe.com/Support](http://www.canon-europe.com/Support).
- Do not improperly dispose of the product as it may cause personal injury or harm. Please dispose of the product in accordance with local regulations.
- Do not handle near Medical Electrical Equipment. Weak magnetism is emitted by this product. Do not stand near implanted electronic devices, such as a cardiac pacemaker. Please see your doctor if the printer does come close to such a device.
- Disassembling the battery may cause leakage, explosion, damage or personal injury.
- Do not use the printer if the battery or product has swelled.
- Never expose the battery to high temperature, direct heat, or dispose by incineration.

# PRINTER OVERVIEW


## SUPPLIED ITEMS

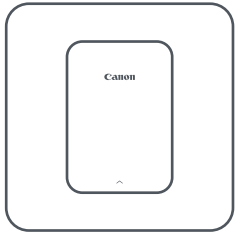


Mini Photo Printer

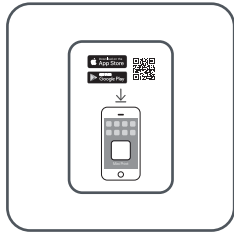


Quick Start Guide

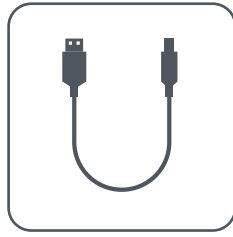

USB Cable

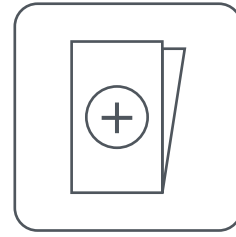


Regulation and Safety Information sheet

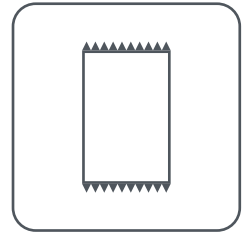


CANON ZINK™ Photo Paper (10 sheets)


## PRODUCT FEATURES

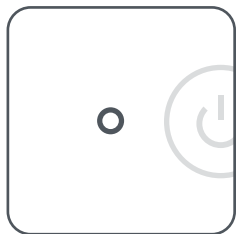


① Power LED light

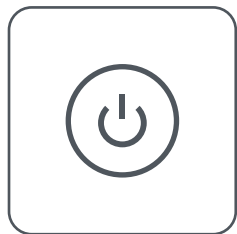


② Power button

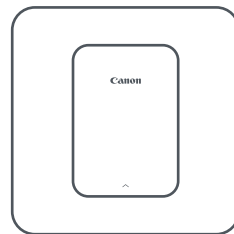


③ Top cover

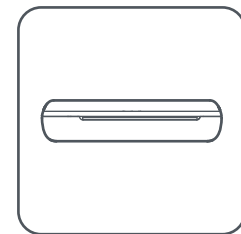


④ Paper output slot

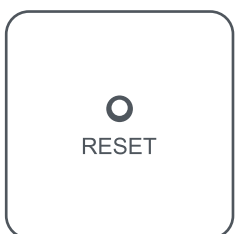


⑤ Reset button

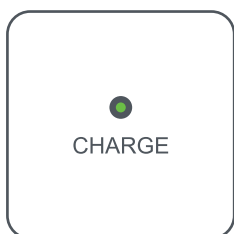


⑥ Charging LED light

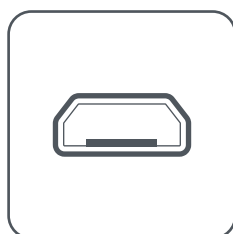

⑦ USB port (for charging)

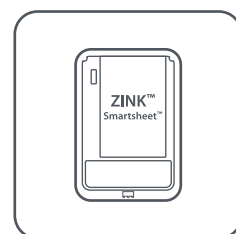


⑧ Paper tray (visible with top cover open)

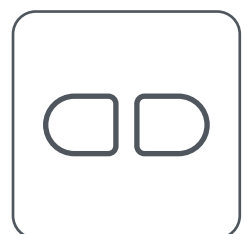

⑨ Wristband eyelet




## POWER & CHARGING - LED Indicator Lights

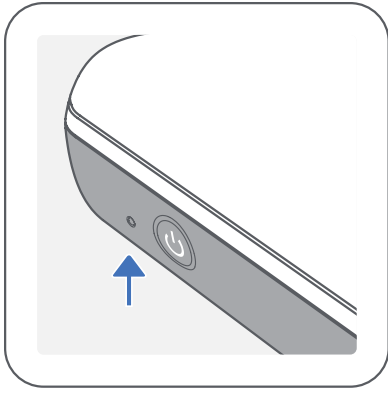

### POWER

- White – Printer is powered on
- ☀ White flashing – Printing / Processing / Cooling
- ☀ Red flashing – No paper / Cover open / Paper jam / Low battery / storage full / other errors
- Red - Firmware updating

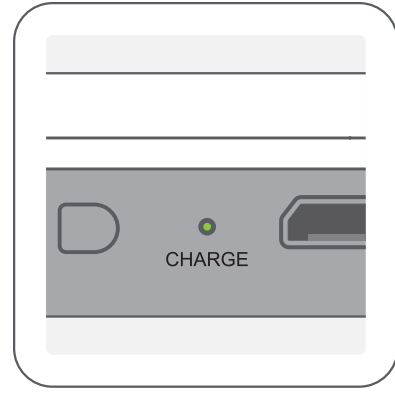

### CHARGING

- Red - Charging
- Green - Charge completed
- ☀ Red & Green flashing alternatively - Charging error



## NOTE


---

### MAINTAINING YOUR CANON MINI PRINTER

- Use a soft, dry cloth to clean the product. Do not clean with a damp cloth or volatile liquids such as paint thinner.
- Keep the top cover closed to avoid dust and other particles from entering the inside of your printer.
- Use and keep your printer in the recommended environment of 15° to 32° C and 40-55% relative humidity.
- Keep your printer firmware up-to-date. To check if your firmware needs to be upgraded, open the Canon Mini Print app, go to the Main Menu > Printer Settings > Select the connected printer > then tap "Firmware Upgrade".
  - Make sure your mobile device has a Internet connection before checking. If you need to upgrade/update the firmware, your printer must be charged to 50% or higher or connected to a power source.
- Make sure you're using the latest Canon Mini Print app version. If your apps don't automatically update, go to your app store to check if you need to update.

# PRINTER SETUP

## A) CHARGE PRINTER

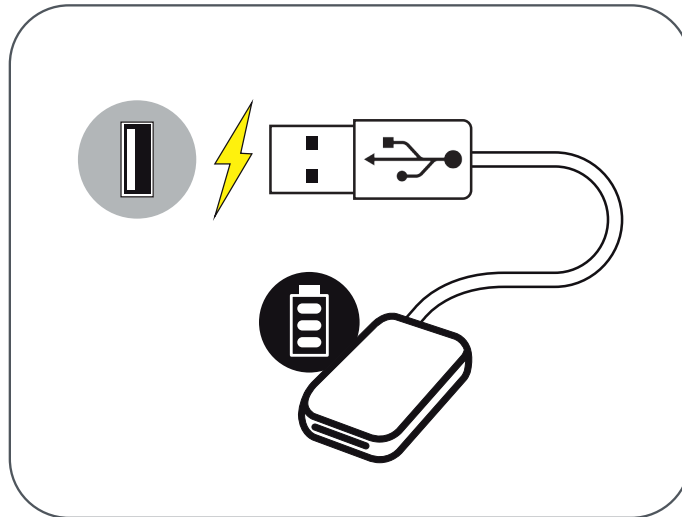

Printer uses a built-in battery. Before using the printer, fully charge the battery using the USB cable provided.

- ① Insert the smaller end of the supplied USB cable into the Printer and the other end into a chargeable USB adapter.
- ② The charging LED light will turn red to indicate charging.
- ③ Once fully charged, the charging LED will turn green.

-- Operating time may vary depending on the battery status, operational status and environment conditions.

## ! NOTE

### Battery Status Icon (shown in App)




### About USB Cable

#### HANDLE THE USB CABLE WITH CARE WHILE CHARGING



- Do not place any heavy objects on top of the cable.
- Do not place the USB cable near heat.
- Do not scratch, damage, twist or pull hard on the cable.
- Do not plug or unplug the cable with wet hands.
- Avoid too high/too low temperature or humid condition.
- Please unplug the USB cable from power source after charging.
- Please use supplied USB cable for charging.

## B) POWER ON

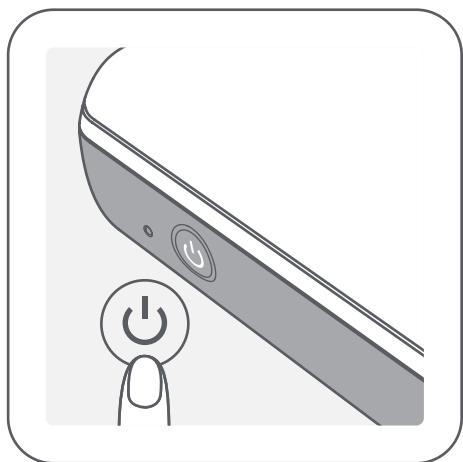


- ① Press and hold the Power button (⏻) until the LED indicator light turns on.  
-- The LED indicator will flash as the printer is powering on.
- ② When the LED indicator turns to a steady white light, the printer is ready to print.

## C) LOAD PAPER

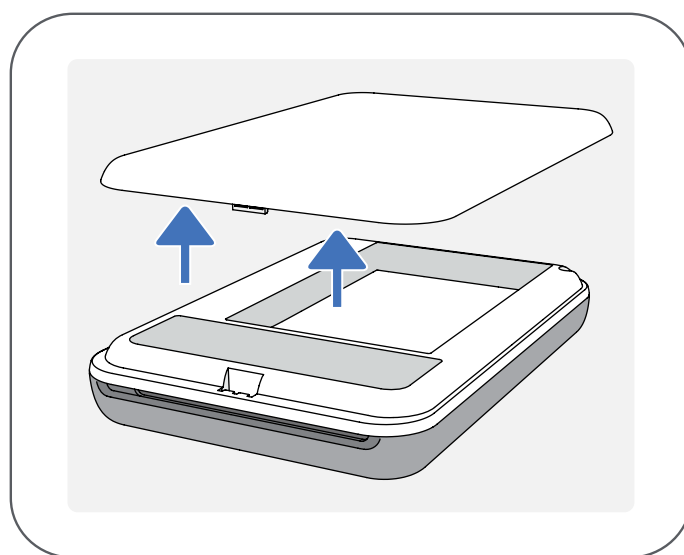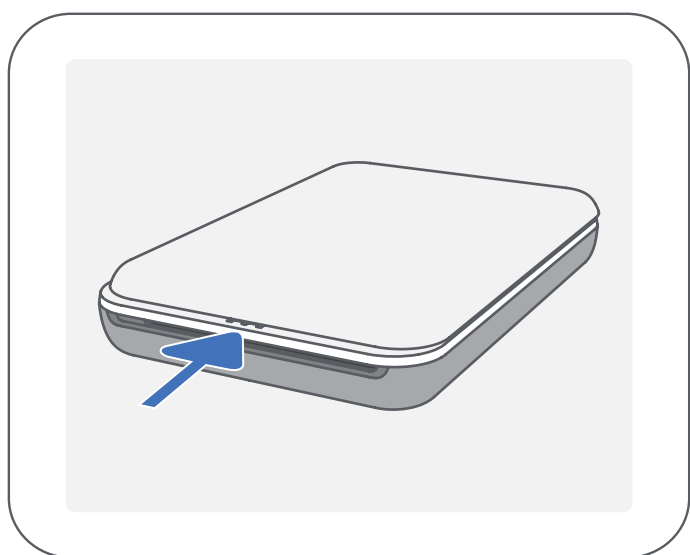

- ① Remove the top cover by sliding it forward in the direction of the arrow.
- ② Open a single pouch of photo paper (10 sheets + blue SMART SHEET™).

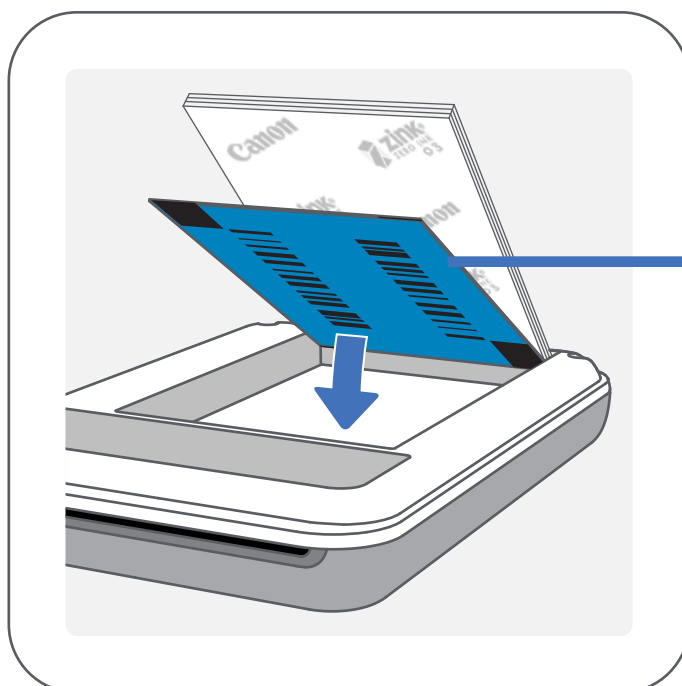

Blue SMART SHEET™  
on bottom with photo  
papers on top.  
All logos facing down.

- ③ Place all 10 photo paper sheets and the one SMART SHEET™ into the photo paper compartment.  
-- Stack the photo paper on top of the blue SMART SHEET™, making sure the blue barcode and the photo paper logos are facing down.
- ④ Place the top cover back onto the printer. It should click into place when closed properly.  
-- The blue SMART SHEET™ will be sent through the printer automatically before the first print.



## NOTE

---

### WHEN USING PAPER

- Only load 10 ZINK™ photo paper sheets and 1 SMART SHEET™. Do not load more as it can result in paper jams or printing errors.
- For optimal print results, use ZINK™ photo paper for Canon Zoemini printers.  
--You may purchase additional photo paper within the Canon Mini Print App by tapping "Buy Paper" in the main menu.
- If there is a paper jam, simply turn the printer OFF and ON to automatically clear the paper jam. Don't try to pull the paper out.
- While the printer is printing, don't pull or tug on the photo paper.
- Handle photo paper carefully to avoid damage or bending.
- Keep the paper clean when loading. If paper is dirty or damaged it may result in a paper jam or print error.
- Don't open a new pouch of paper until you are ready to load it into your printer.
- Don't expose photo paper to direct sunlight or moisture.
- Don't leave your photo paper in an area where the temperature or humidity is out of the suggested conditions indicated on the pouch. It may reduce the quality of the printed photo.

### ABOUT THE SMART SHEET™



- Each pouch of photo paper contains 10 sheets of photo paper and 1 blue SMART SHEET™.
- Load the SMART SHEET™ and photo paper from within the same pouch for optimal print quality. Each SMART SHEET™ is specifically tuned for the pouch of paper it is contained in.
- The SMART SHEET™ will be sent through the printer automatically before the first print to clean the printer and optimize print quality for that specific paper pouch (10 sheets).
- Keep the SMART SHEET™ and only discard after you have printed all 10 sheets of photo paper in the pouch. If print quality is not as expected, you can reuse the SMART SHEET™ if the paper is still from the same pouch. Simply slide the SMART SHEET™ with its barcode-side down underneath the remaining photo paper.
- Using a SMART SHEET™ from another pouch may result in reduced print quality.

# INSTALLING APP


## OPTION ①


### SEARCH FOR "Canon Mini Print" IN APP STORES

For Android™ - from Google Play™

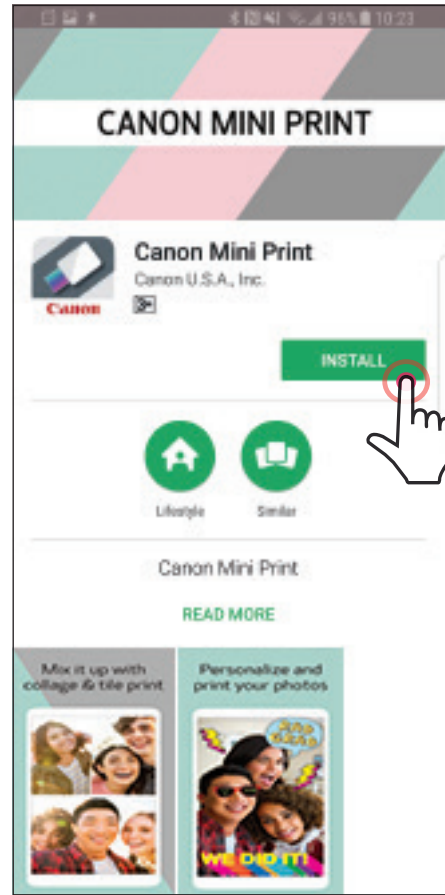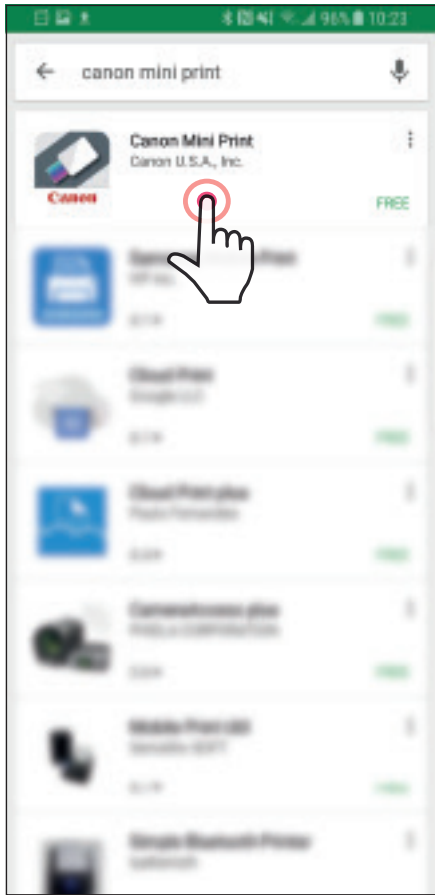

For iOS® - from the App Store®

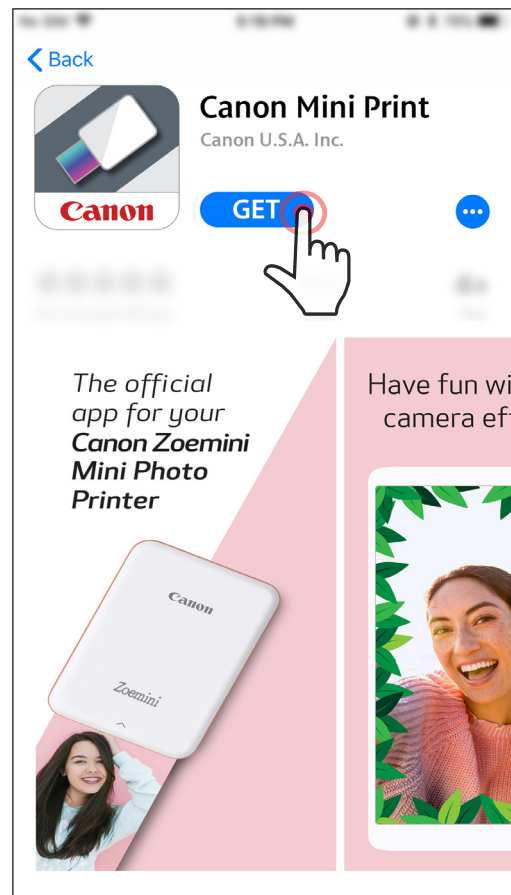


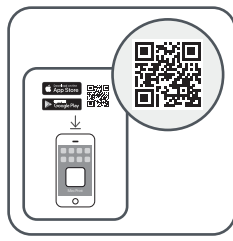


## OPTION ②

USING QR CODE - SCAN THE QR CODE ON THE "Quick Start Guide"

For Android

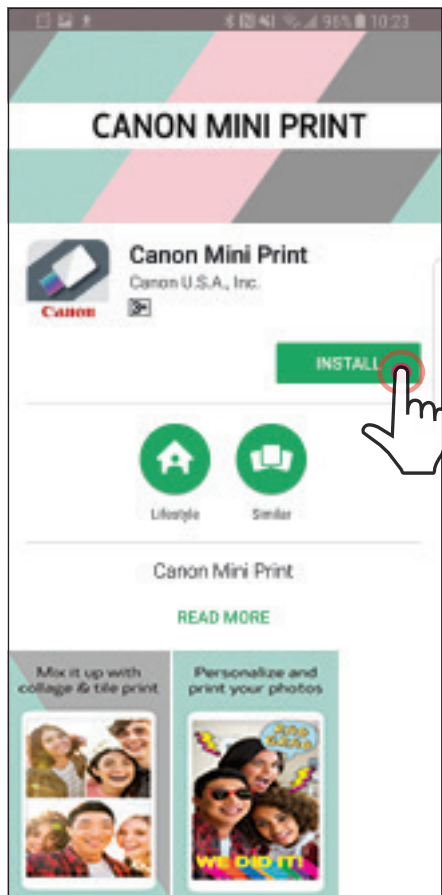

For iOS


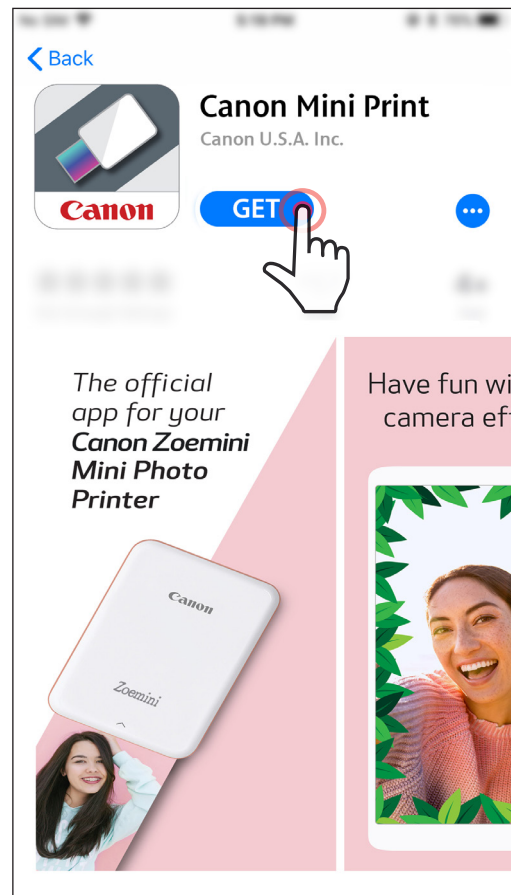


## OPTION ③

In your device browser GO TO <https://app.canonminiprint.com/>

## OPTION ④


USING NFC For Android

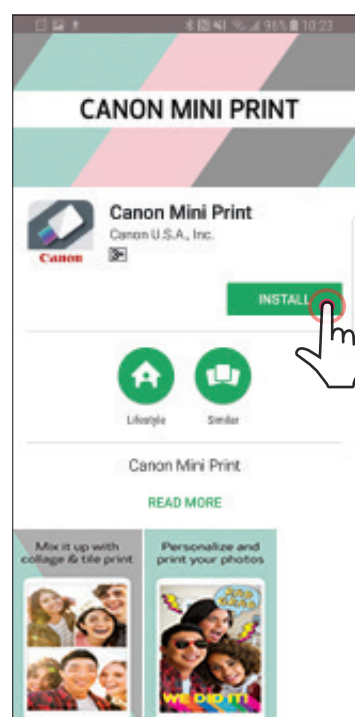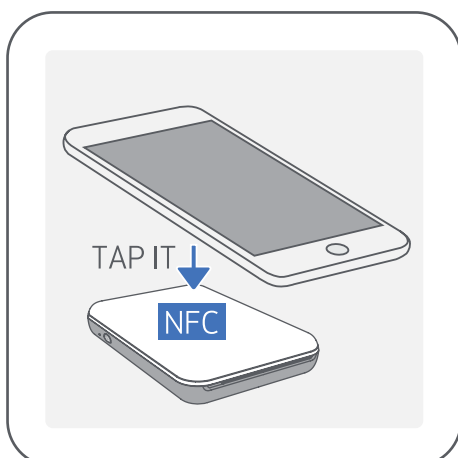


# PAIRING MOBILE DEVICE & CANON MINI PRINTER

## Android Pairing

- ① Turn on the printer by pressing and holding the Power button until the LED indicator light turns on.
- ② Open mobile device "Settings" to enable Bluetooth and pair it with the printer.

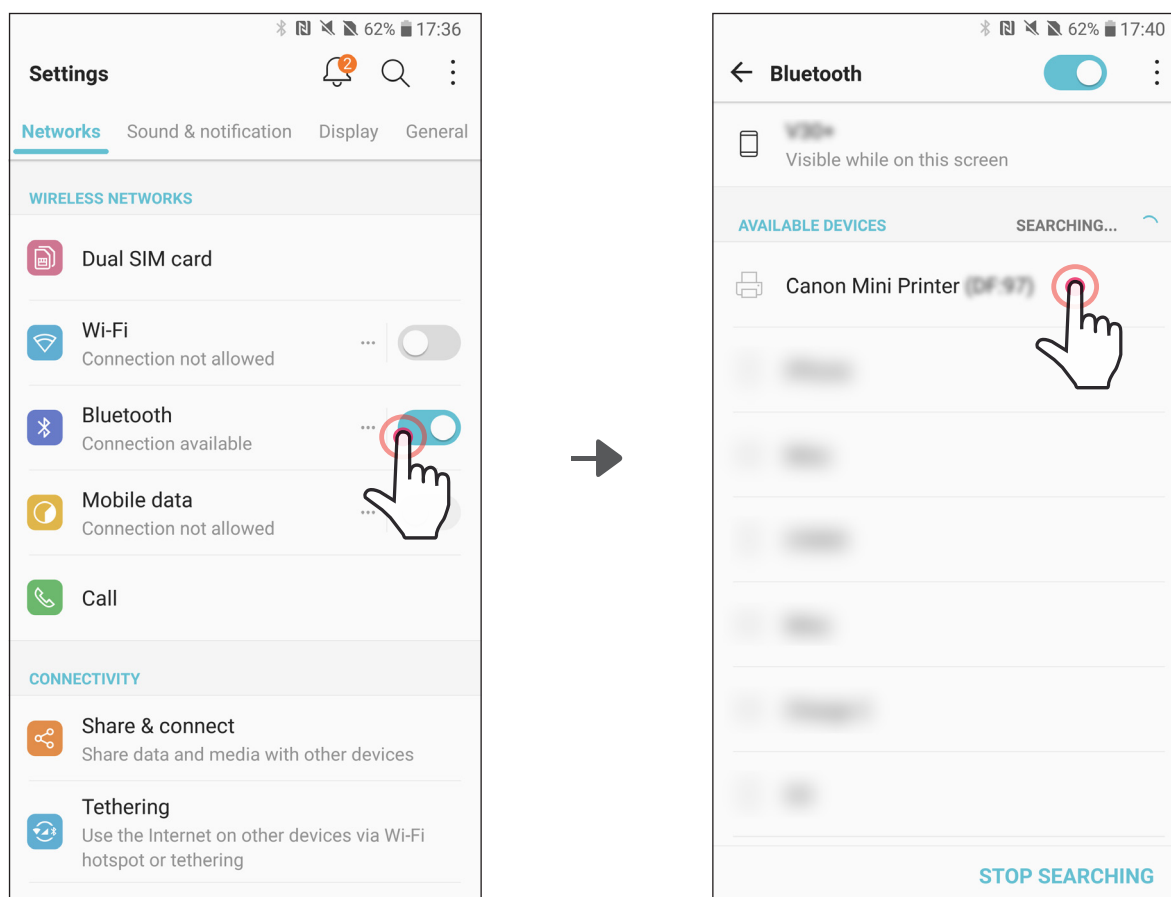

- ③ OPTION A - Add the printer to the app. Tap on the icon on the top right and choose your printer. The icon will change to indicate battery level when connected.

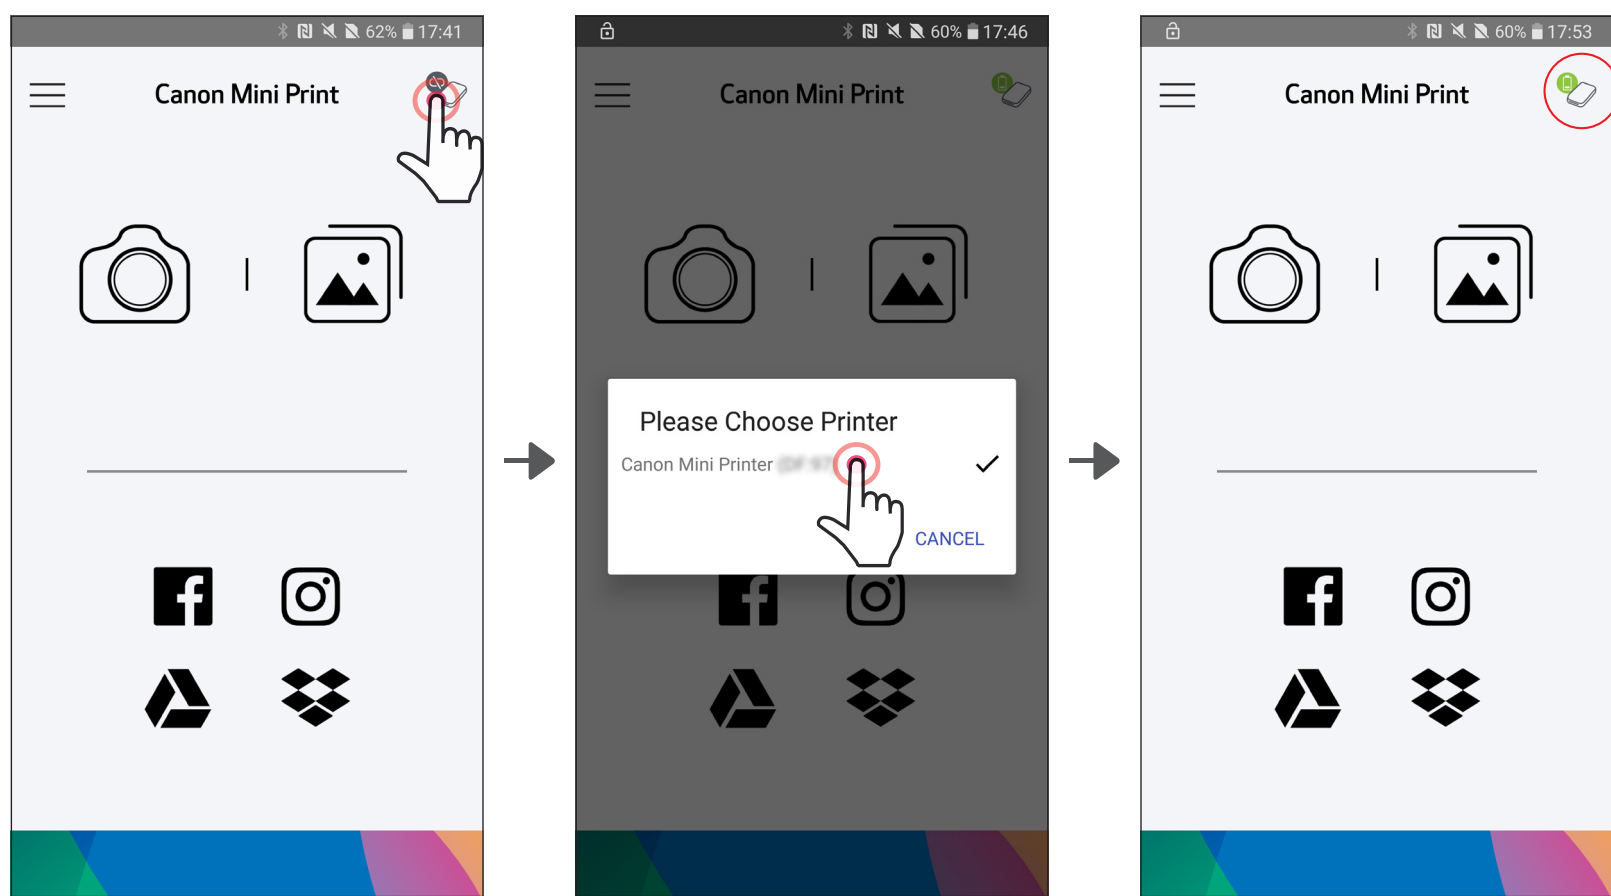




—OR—




- ③ OPTION B - Add the printer to the app. Go to "Printer Settings" in the main menu, tap "Add Printer" and choose your printer.

Your printer will appear in the "Printers" list and the icon will change to indicate battery level when connected.

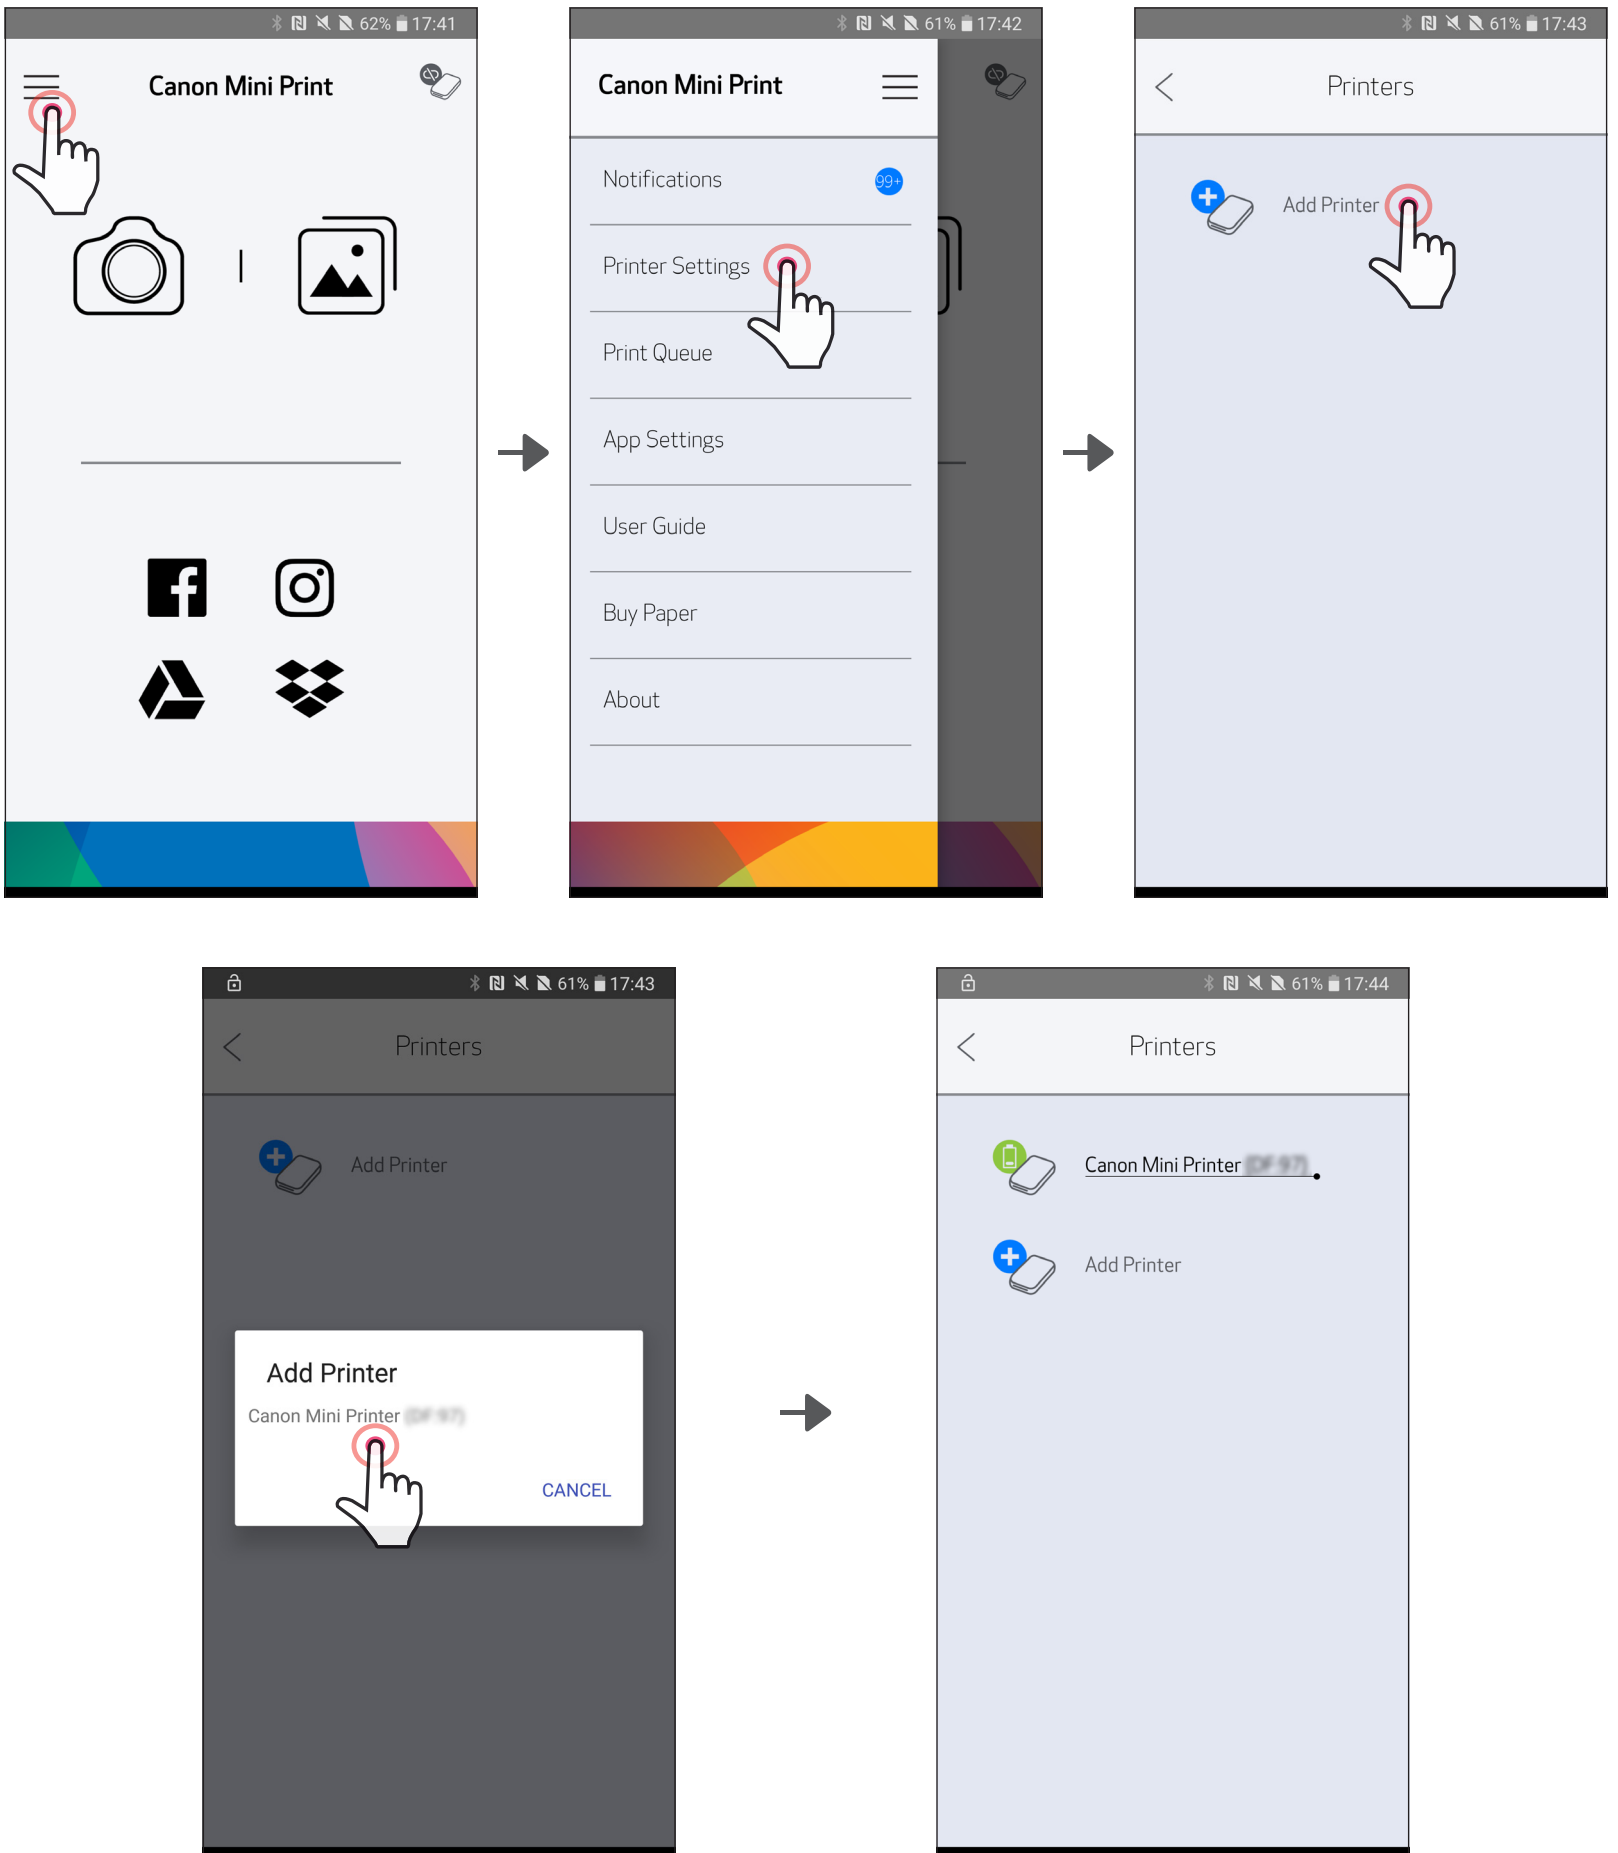


# iOS Pairing

- ① Turn on the printer by pressing and holding the Power button until the LED indicator light turns on.
- ② Open mobile device "Settings" to enable Bluetooth and pair it with the printer.

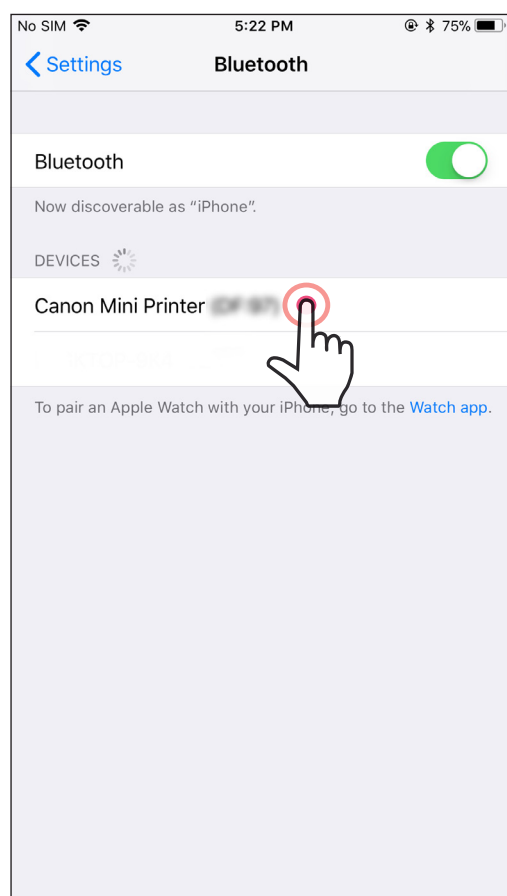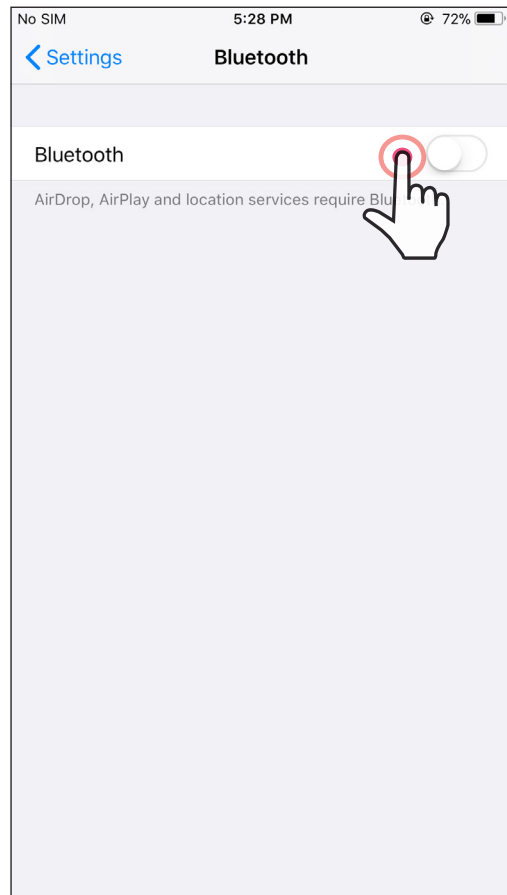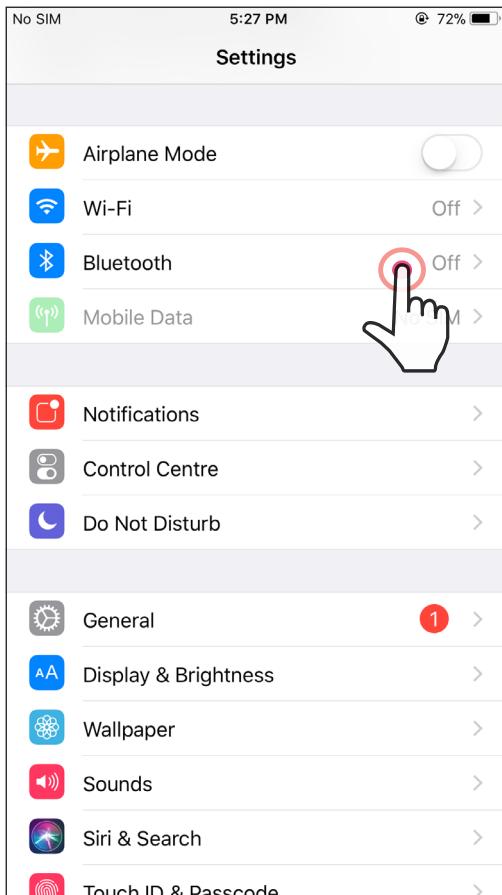


- ③ OPTION A - Add the printer to the app. Tap on the icon on the top right and choose your printer.  
The icon will change to indicate battery level when connected.

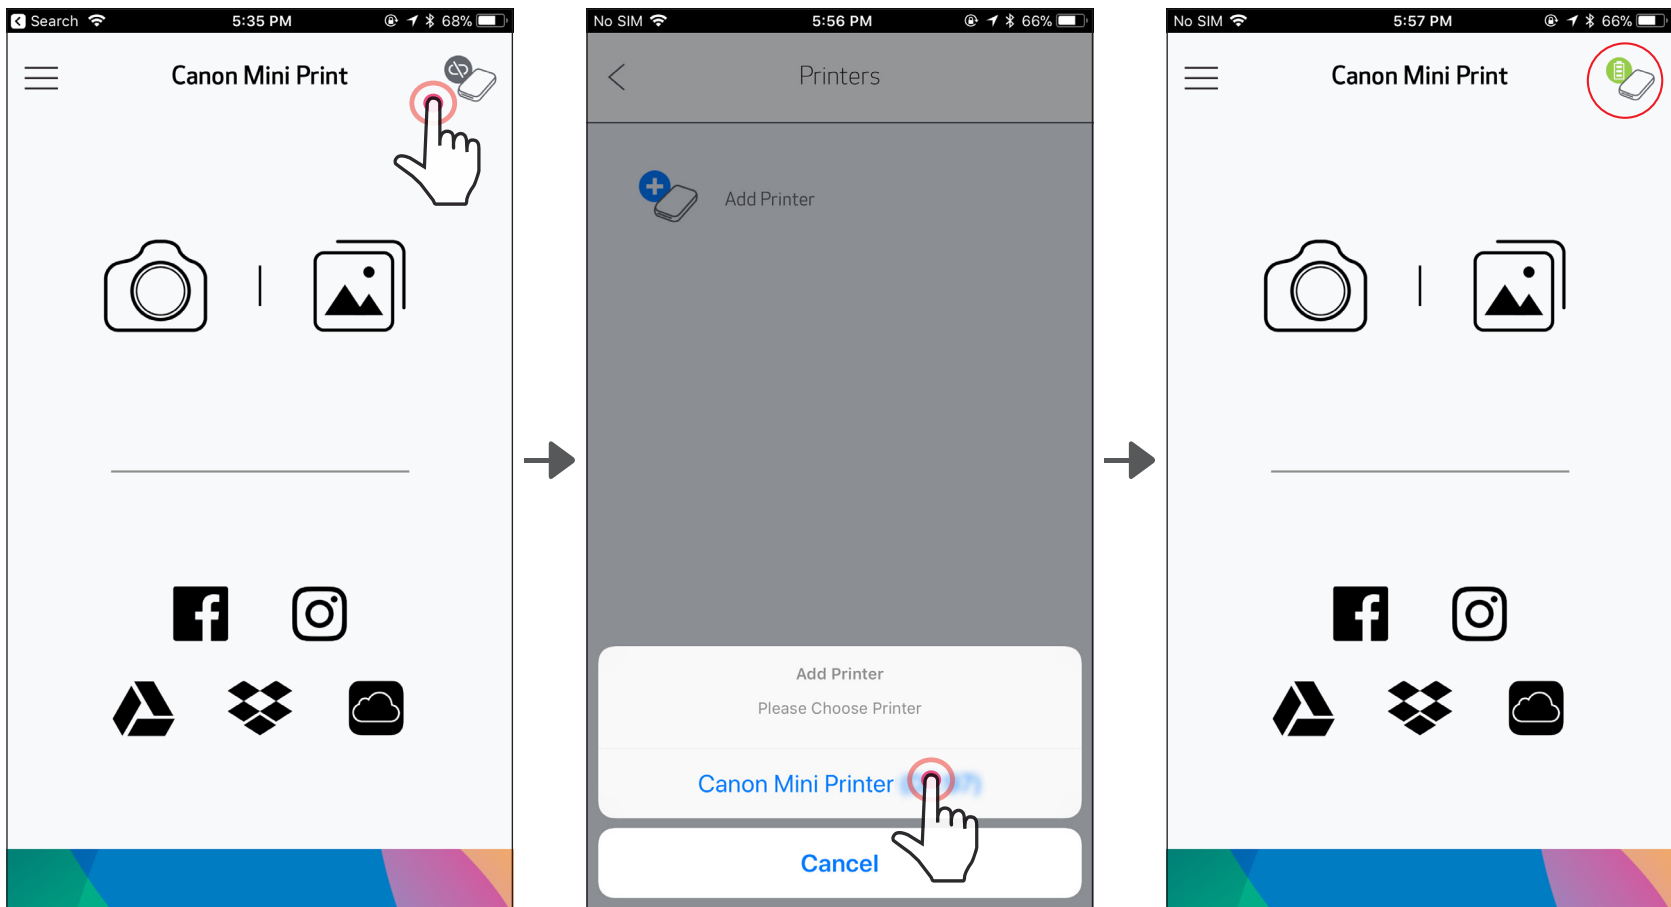

— OR —



- ③ OPTION B - Add the printer to the app. Go to "Printer Settings" in the main menu, tap "Add Printer" and choose your printer.

Your printer will appear in the "Printers" list and the icon will change to indicate battery level when connected.

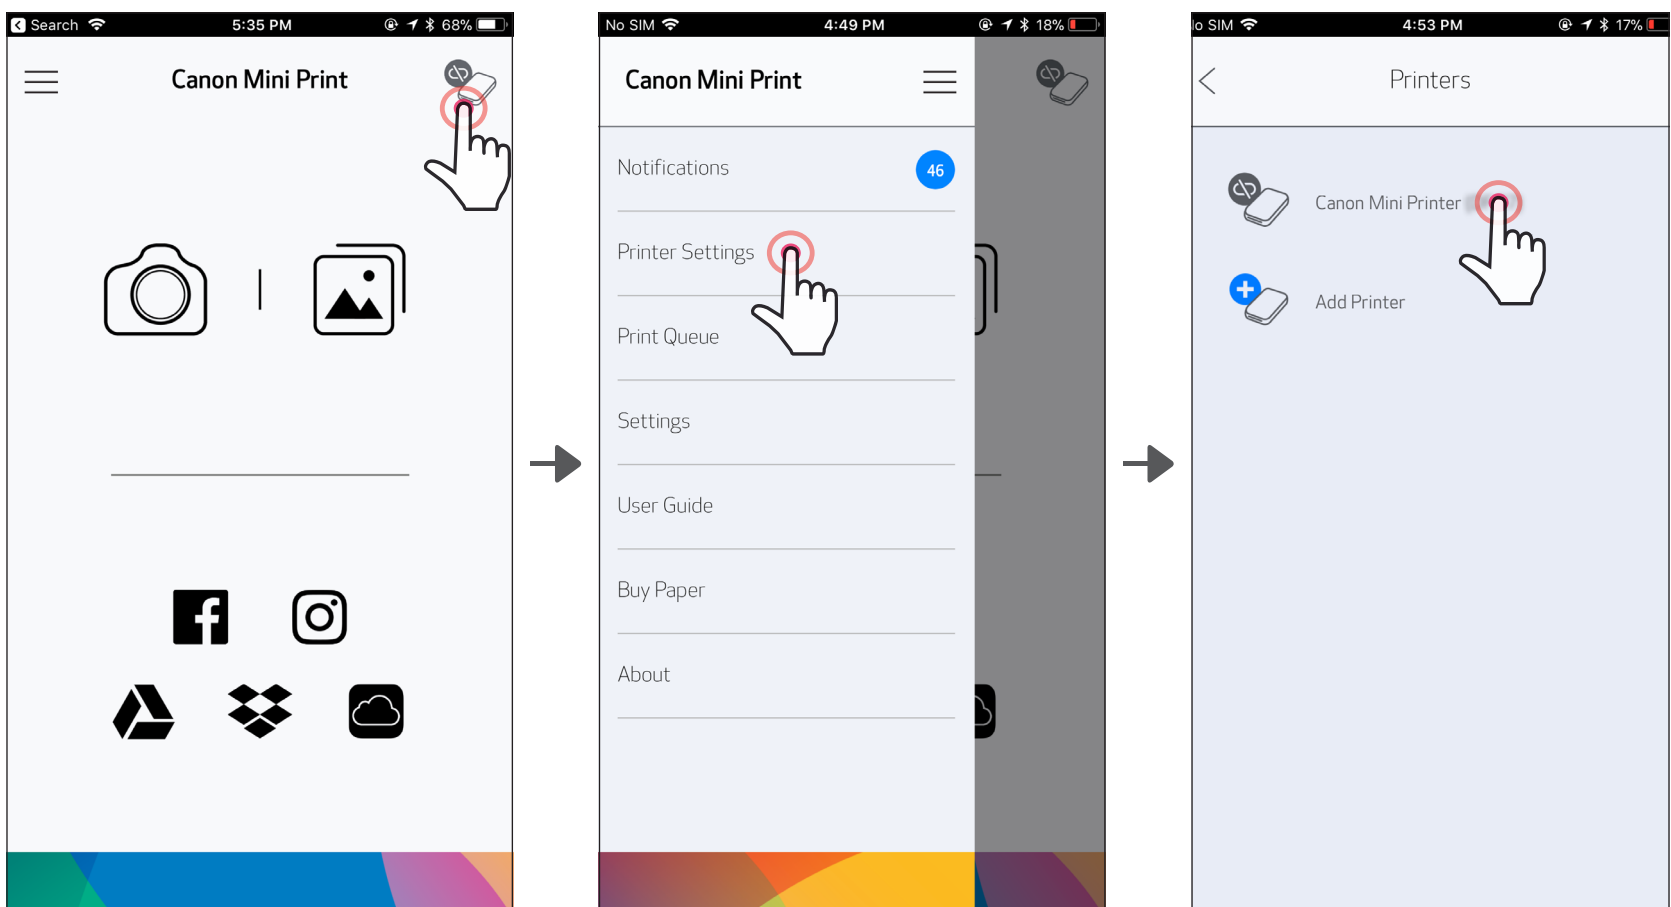

## Android Pairing (with NFC)

- ① On your mobile device, ensure that NFC and Bluetooth are enabled.
- ② Open the Canon Mini Print app.
- ③ Place your mobile device on top of the printer.
- ④ The printer will pair automatically with the mobile device.

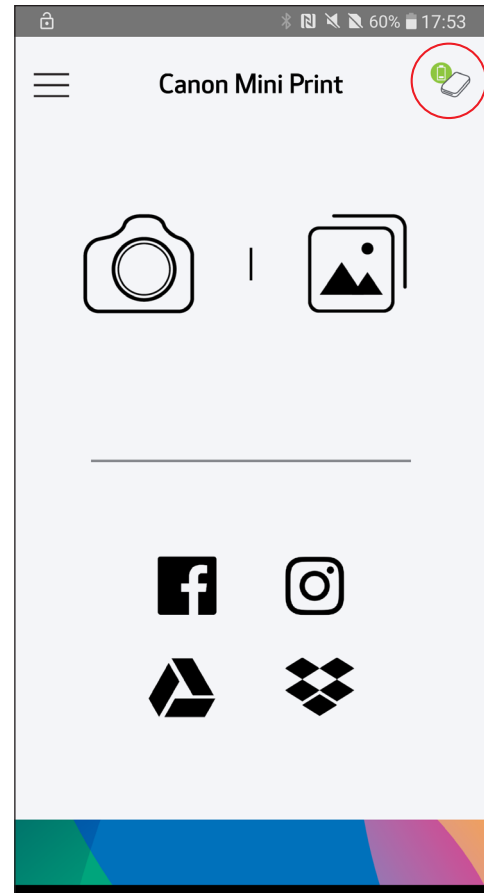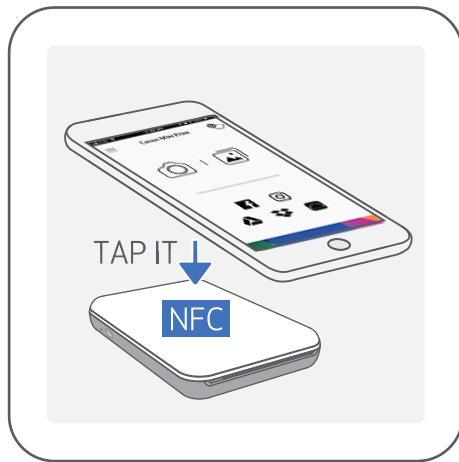

### NOTE

#### Printer Status Icon (shown in App)



Add new printer





Printer not connected



Printer connected (battery status shown)


#### About Pairing

- One printer can be paired with only one iOS/Android device.
- One iOS/Android device can be connected to multiple printers.  
*To pair an additional printer, go to Printer Settings in the Main Menu and tap "Add Printer"*
- Search for and pair a printer named "Canon Mini Printer (xx:xx)". Match the last 4 digits of the MACnumber (xx:xx) on the label inside the printer.
- Bluetooth searching and transferring may fail depending on the environment. Check the Bluetooth condition on your mobile device and try again.

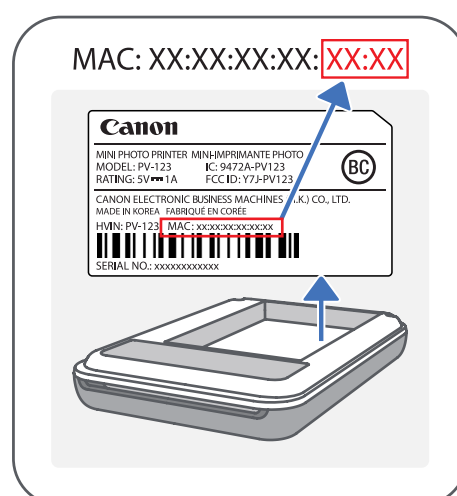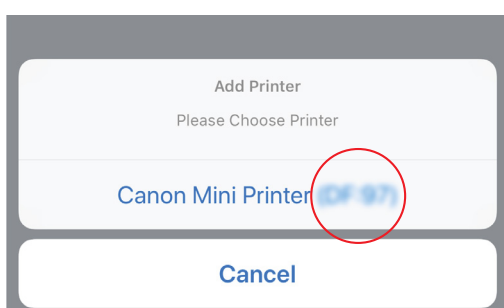


# USER INTERFACE

## HOME SCREEN

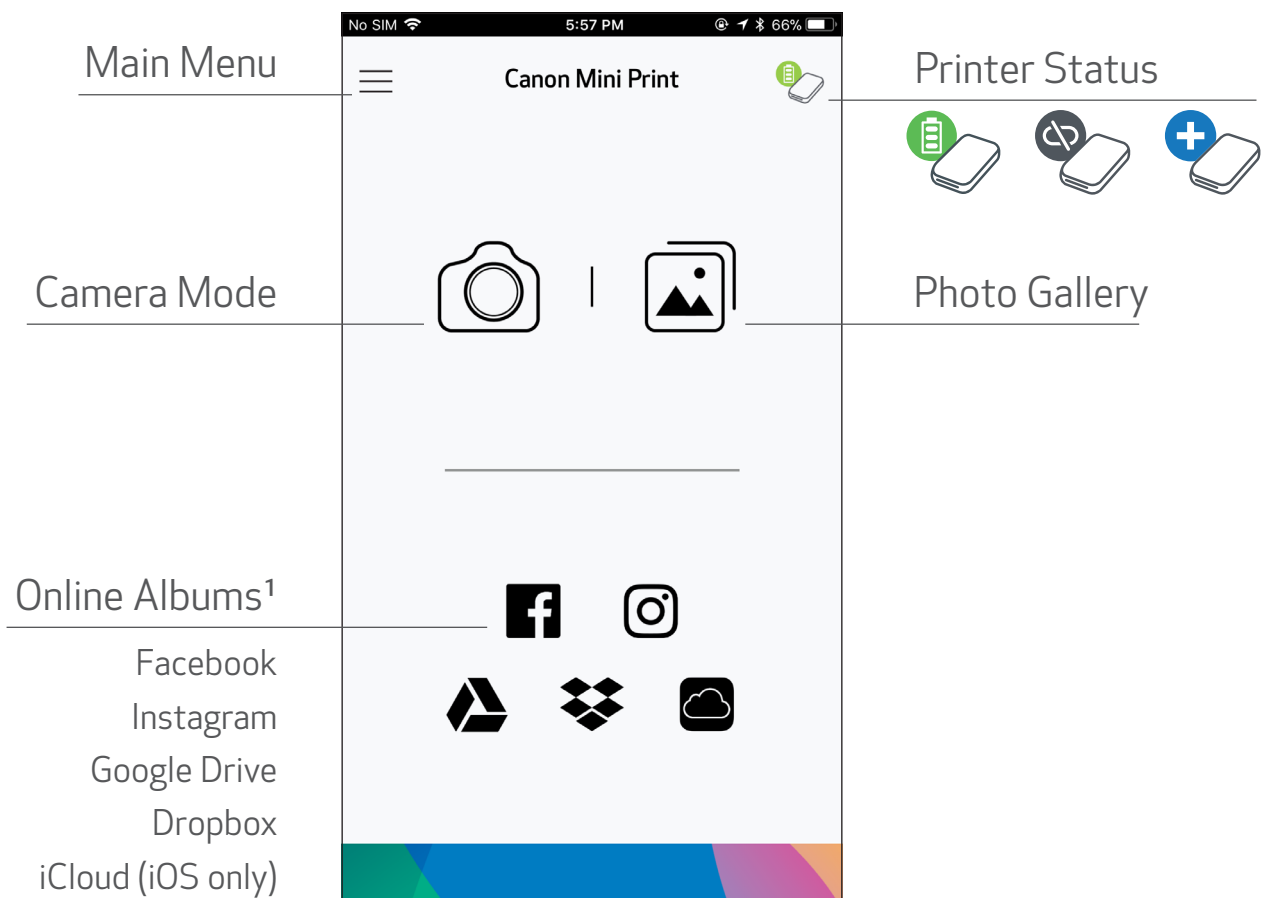

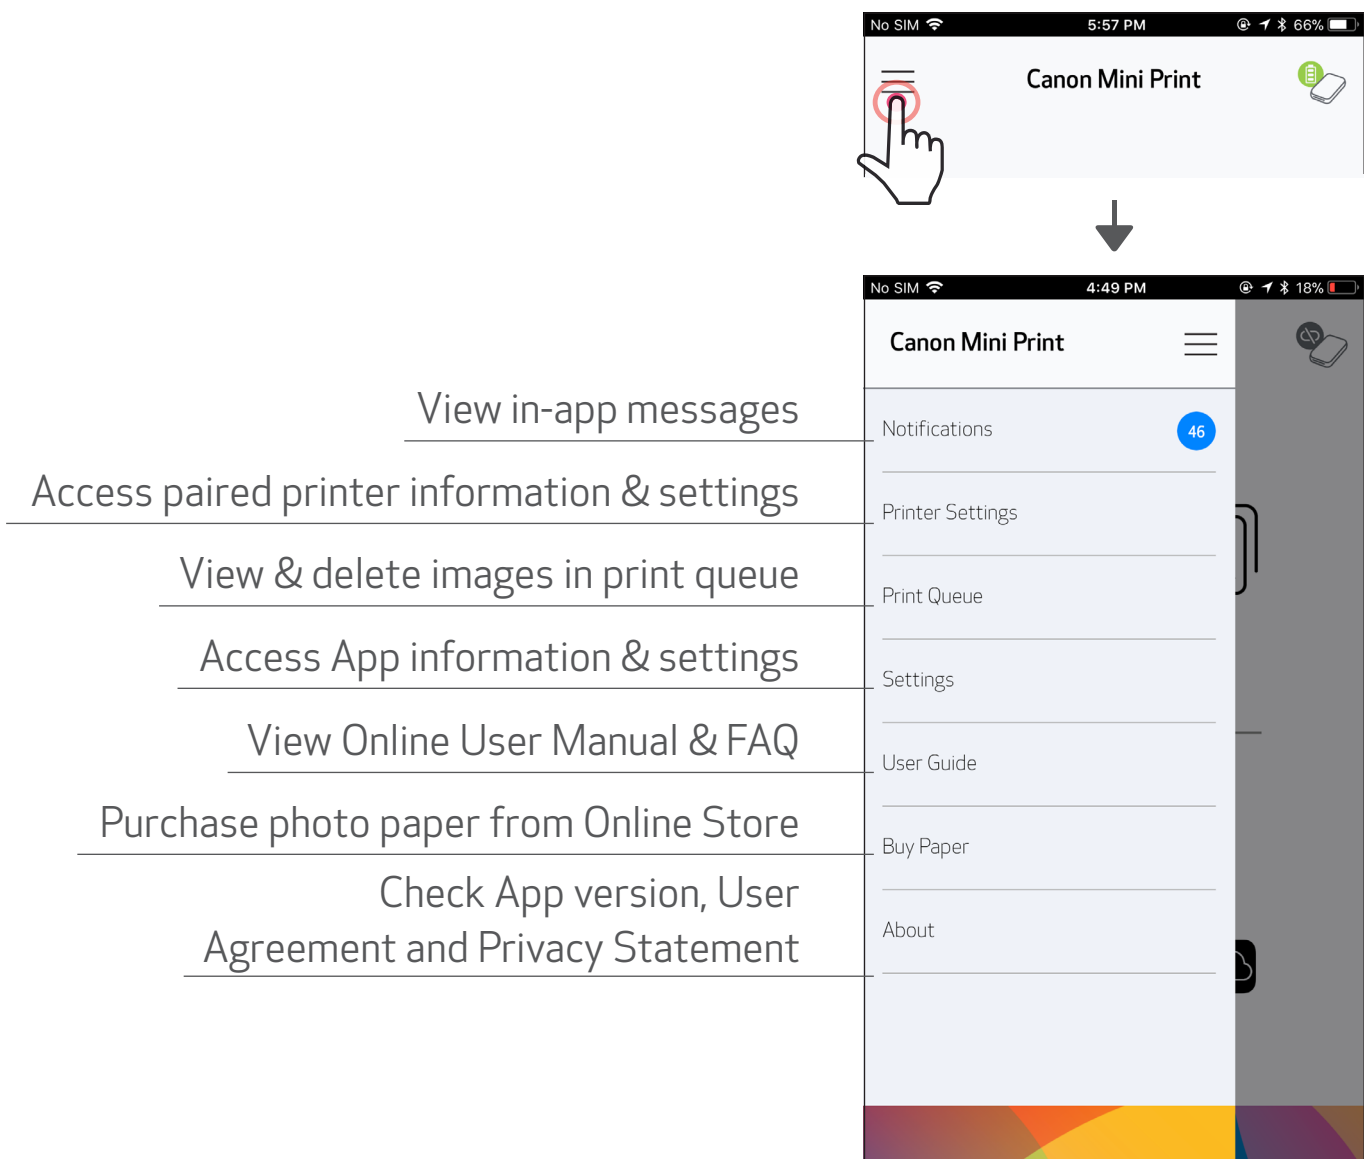

## MAIN MENU




App experience, features, and available Online Albums may vary depending on your device and region.

1) Internet Connection Required. Requires active social media or Cloud account(s) to use.



## CAMERA MODE


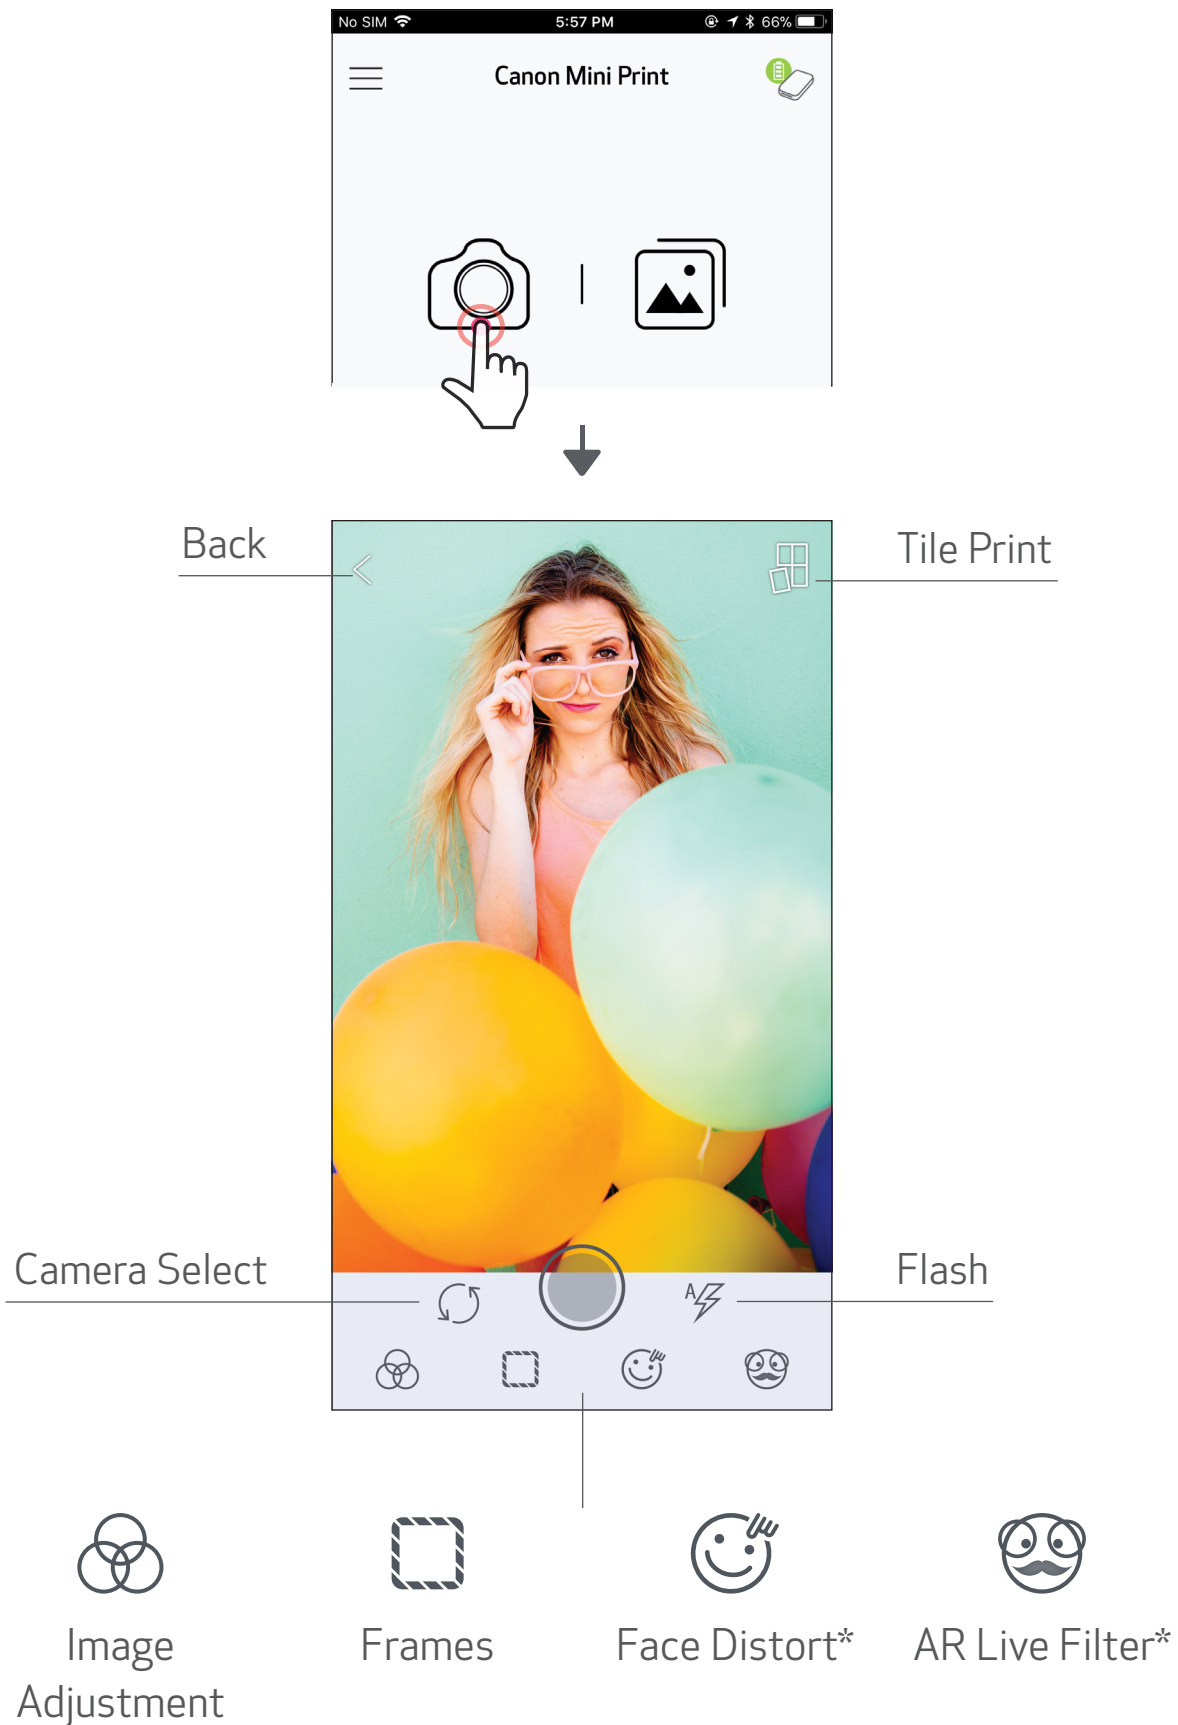
- ① On the Home Screen, tap [  ] to take a photo. (Optional, tap on the icons at the bottom to take a photo with effects.)
- ② Once you've taken a photo, you can Print, Edit, Share, or Save.
- ③ To print, tap [  ].




# PHOTO GALLERY

In the Photo Gallery you can browse photos in gallery view, by folders, or by calendar.


- ① On the Home Screen, tap [  ] to view the Photo Gallery.
- ② Once you've selected a photo, you can Print, Edit, Share, or Save.
- ③ To print, tap [  ].

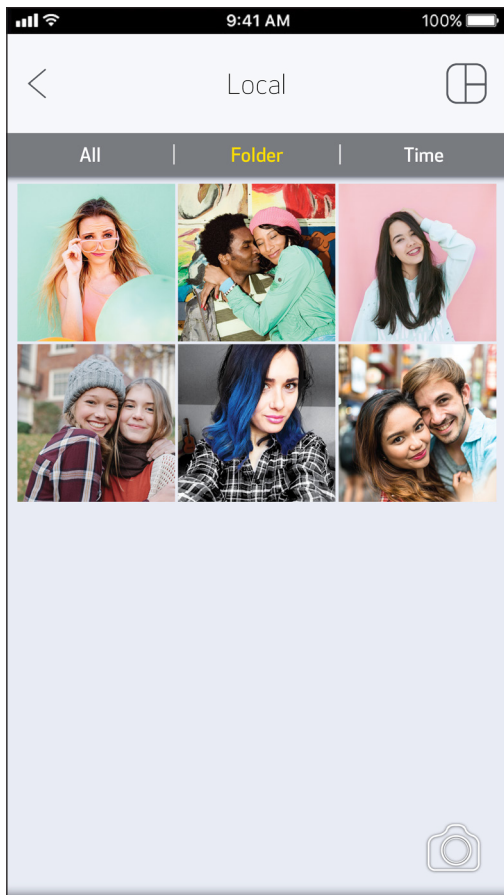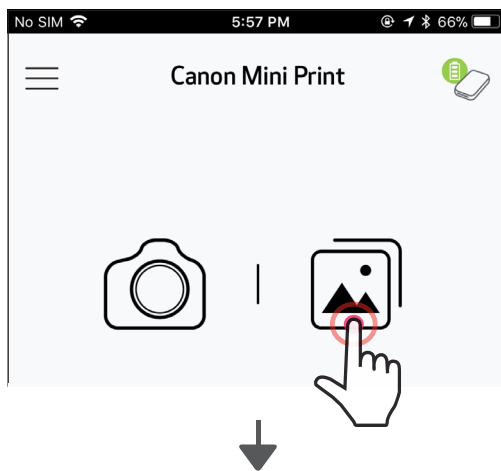

All Photos - Gallery

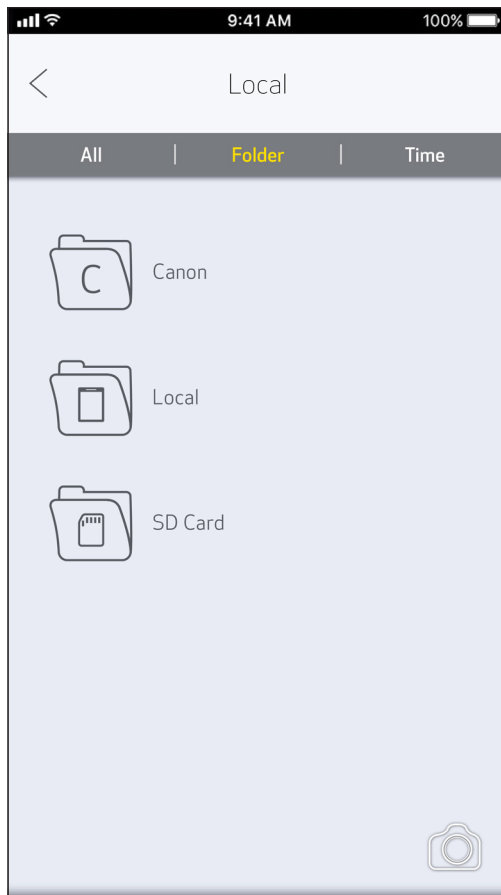


Folder View

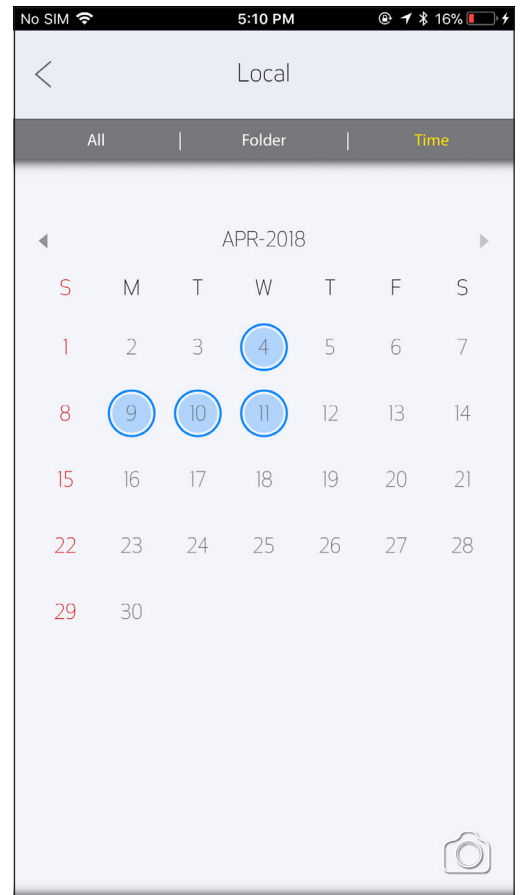


Calendar View



# PRINT PHOTOS

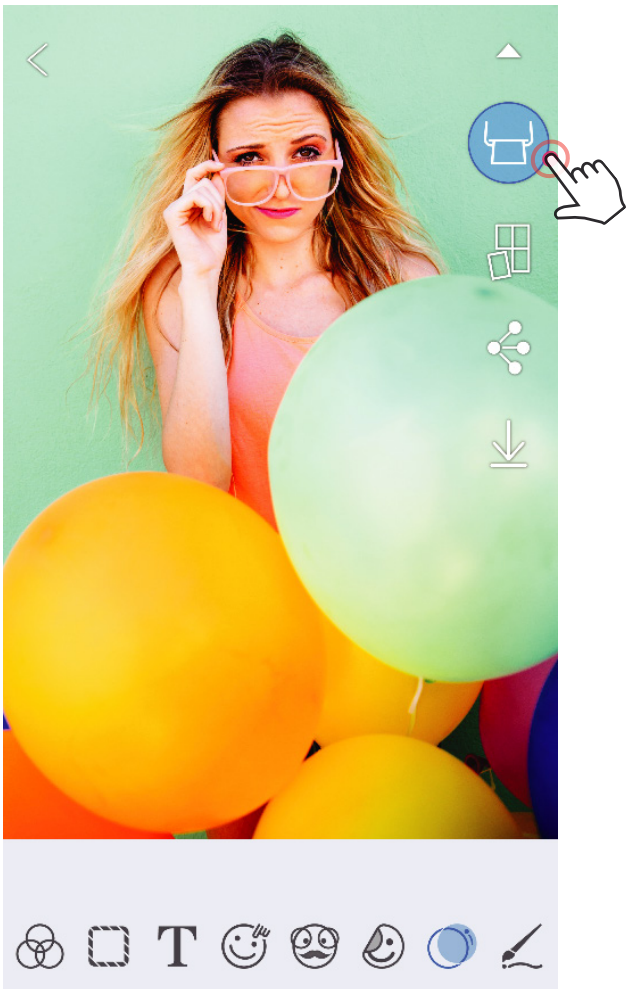

① When you are ready, tap [  ] to print your photo.

*Make sure that the printer is on and paired/connected.*

② A progress screen will appear to show that your image is Sending to Printer and Printing.

*The Power LED Light will flash white, don't exit or close the app until your print is complete.*

**Note about Print Queue:** Your image will be stored in the Print Queue if your printer is not on and connected when you send a print. To release the print, simply turn your printer on and reconnect, you will be asked if you want to print the images in your queue. To view or delete images in the queue, go to the Main Menu > Print Queue.



Sending to Printer



Printing



## NOTE

- The printed image may differ from the original image because the "screen technology" used to display color on a mobile device is different than the "print technology" used to print color on paper (thermal transfer printing).
- Do not pull the paper out by force during printing or paper jam.
- Do not open the top cover during printing. It may affect print quality.
- If the printer is vibrated or shaken, photo print quality may be affected.

# EDIT PHOTOS

You can customize your image with edits like filters, stickers, text, and more.

- ① Tap the icons on the bottom bar of your screen
- ② Customize as you wish!
- ③ Don't forget to Save, Share, or Print your changes before you exit the screen.

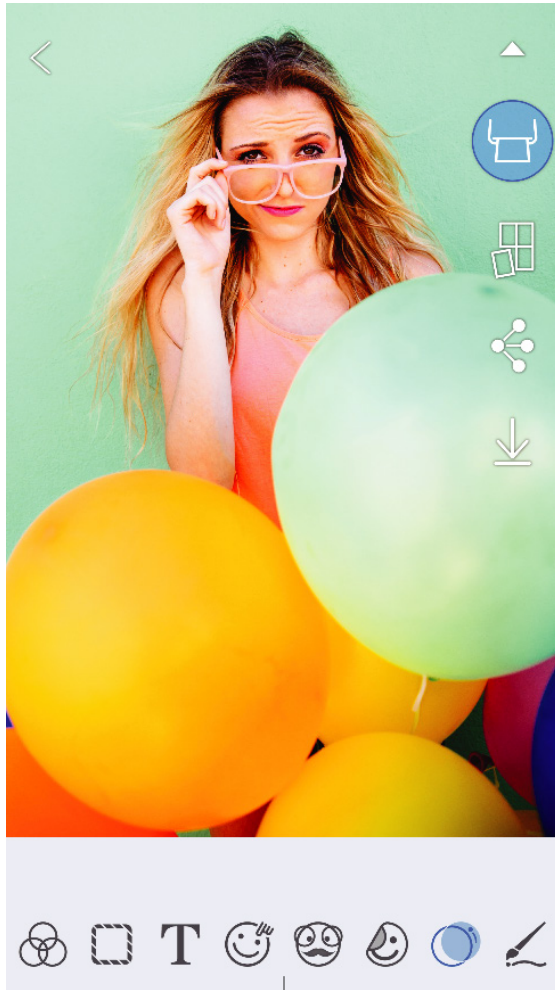



  
Image  
Adjustment

  
Frames

  
Text

  
Face Distort\*

  
AR Filter\*

  
Stickers

  
Image Filter


  
Drawing

  
Brightness

  
Contrast

  
Saturation

  
RGB

  
Flip  
(vertical)



  
Flip  
(horizontal)


  
Rotate

\* Face detection in image required.

## USING TILE PRINT

Use the Tile Print function to print a single photo onto multiple sheets so you can create a larger tiled print.

- ① When you're ready to print, tap [  ] and tap the tiled choice of 2 x 2 or 3 x 3 prints. (*Lines will appear to show how your image will be split.*)
- ② Tap [  ] to print your tiles and then put them together to create a larger tiled print.

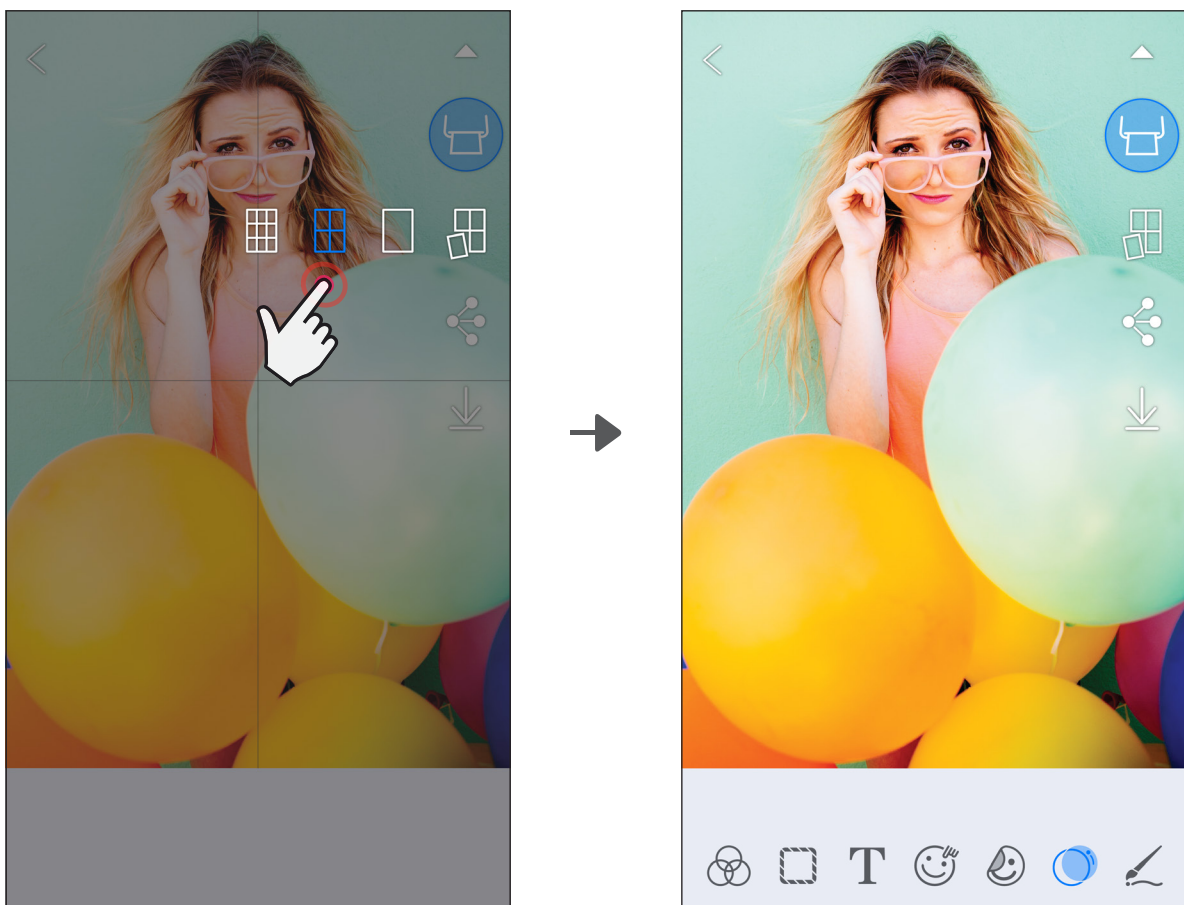





SMART SHEET, the ZINK Technology and ZINK Trademarks are owned by ZINK Holdings LLC. Used under license. Apple, the Apple logo, iPad, iPad Air, iPad Pro, and iPhone are trademarks of Apple Inc., registered in the United States and other countries. App Store is a service mark of Apple Inc. iOS is a trademark or registered trademark of Cisco in the United States and other countries and is used under license. Android, Google Play and the Google Play logo are trademarks of Google LLC. Bluetooth is a registered trademark of Bluetooth SIG. Wi-Fi is a registered trademark of the Wi-Fi Alliance. All other third-party product names, brand names and logos are trademarks of their respective owners.



## USING COLLAGE PRINT


Use the Collage function to print up to 4 photos on one 2x3 sheet.

- ① Open your photos in the Photo Gallery or from Online Albums
- ② Tap [🖼️] to view the collage template choices and select one you want to use (you can choose from 2, 3, or 4 photos in a template)
- ③ Check off the number of photos needed for the template and tap "Select"
- ④ Adjust the images in your collage as you'd like and then tap [🖨️] or share/save.

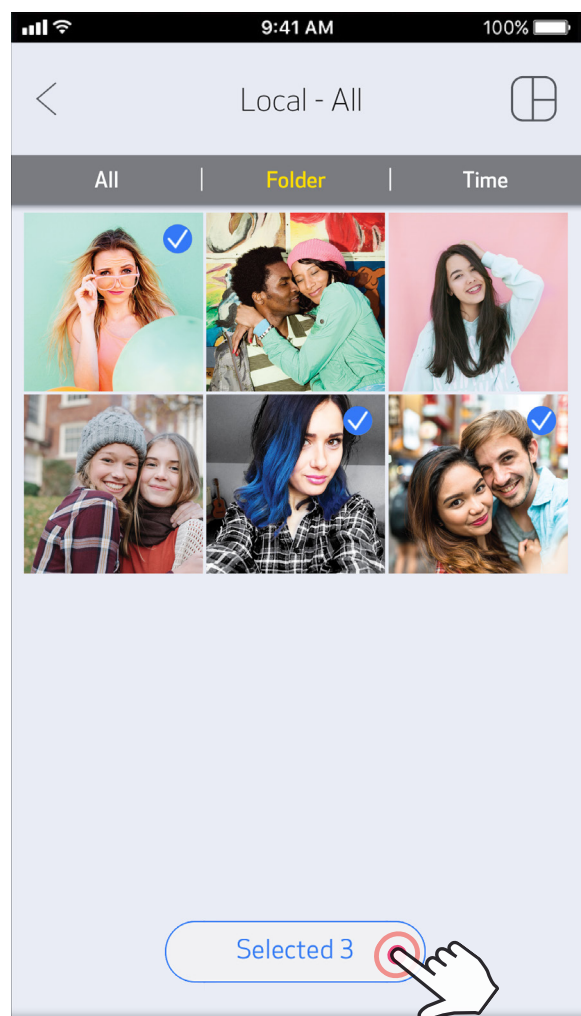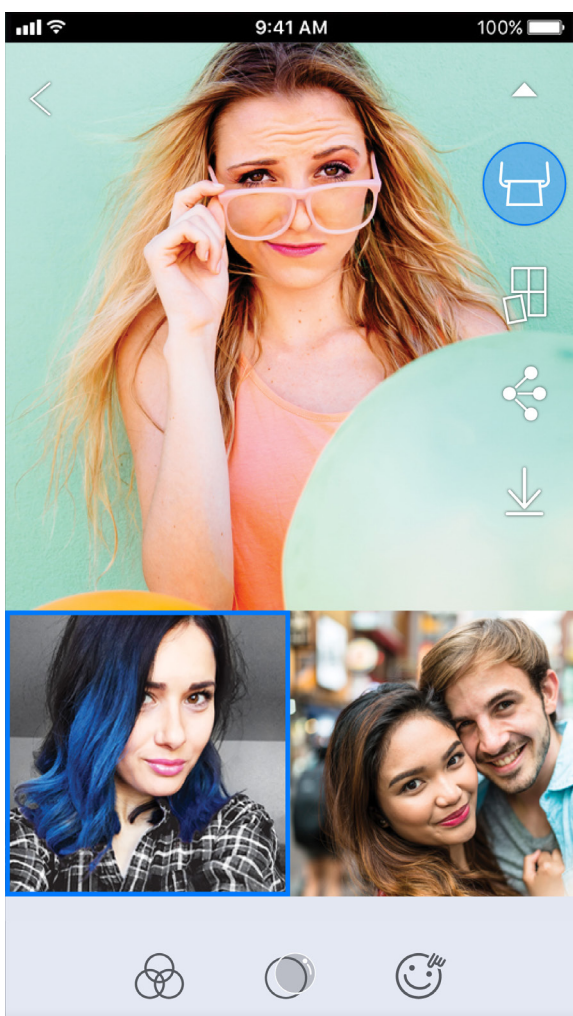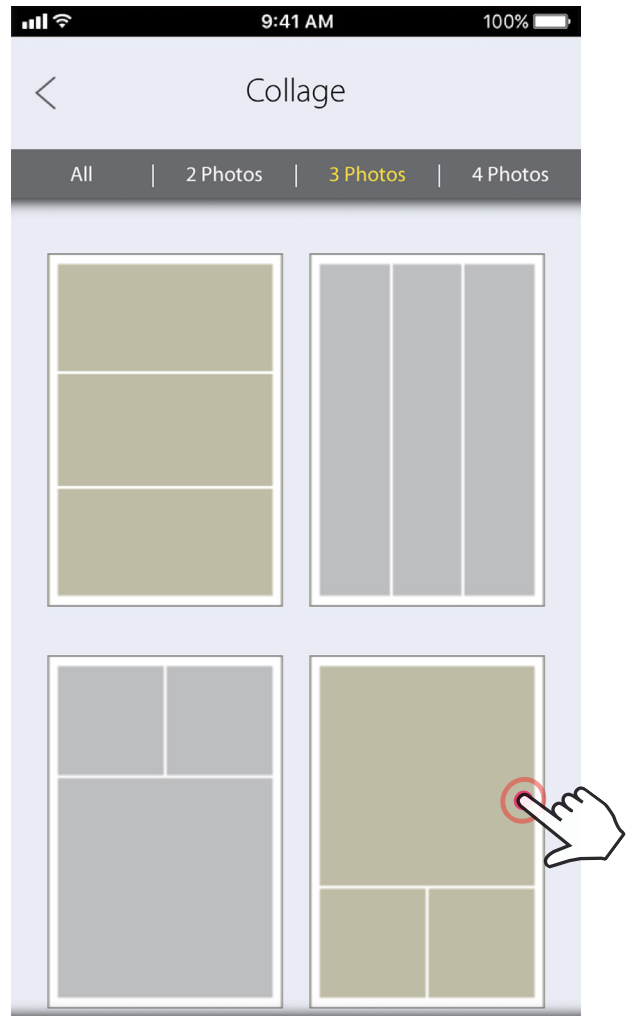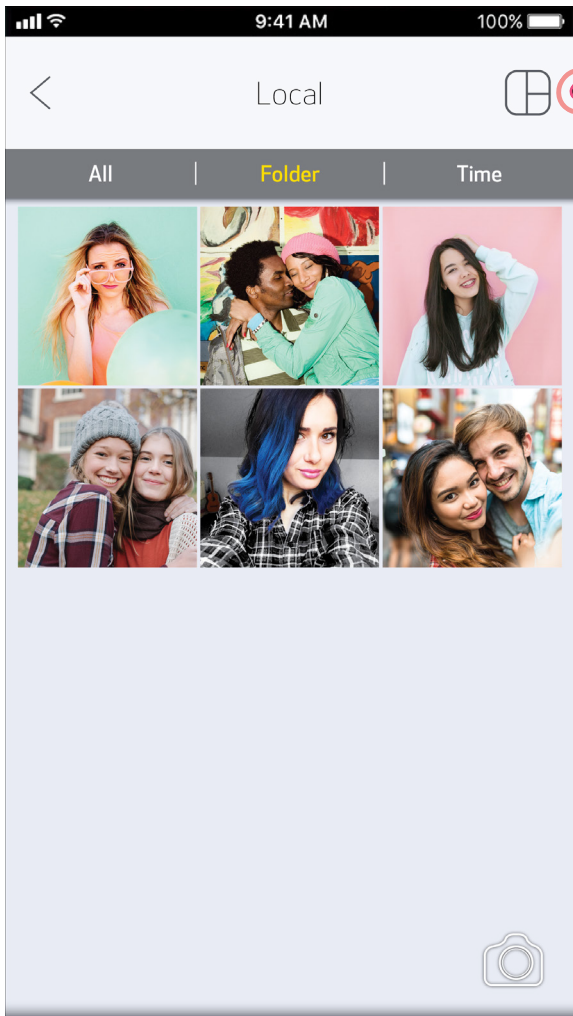

# SHARE PHOTOS



You can easily share or save your images and edits.

- ① When you're ready, tap [  ] to open the options on your device
- ② Share with a listed app, or save to your device's photo storage.



Android


iOS

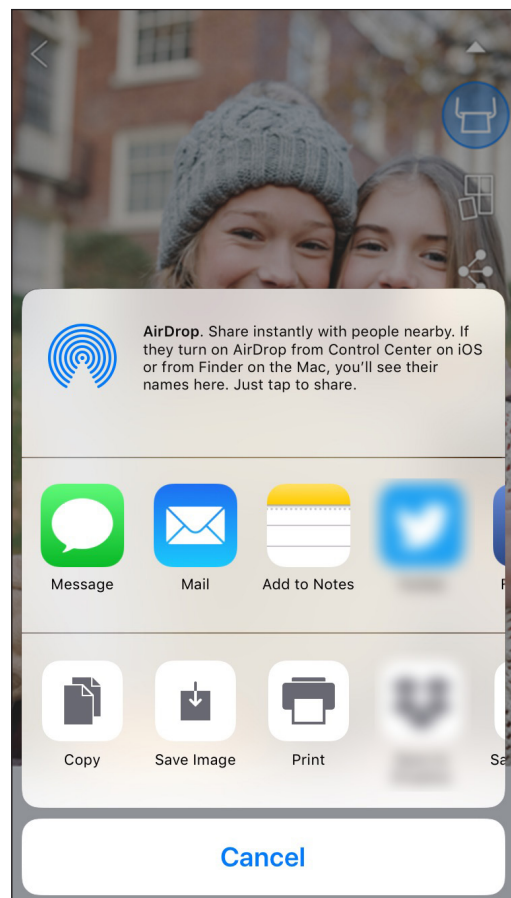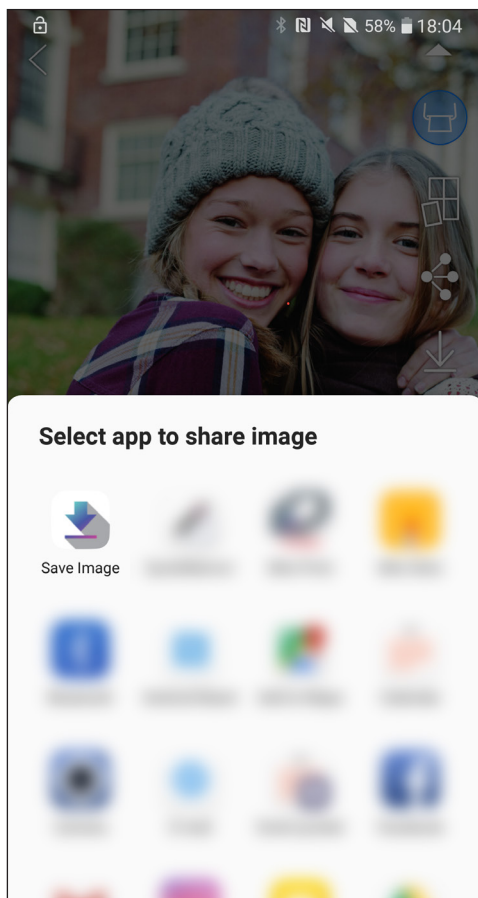




# SAVE PHOTOS

You can easily save your images to the Canon folder in the app.

- ① When you're ready, tap [↓] save your image.
- ② To view your saved images, tap [🖼️], then tap "Folder", and then "Local - Canon"

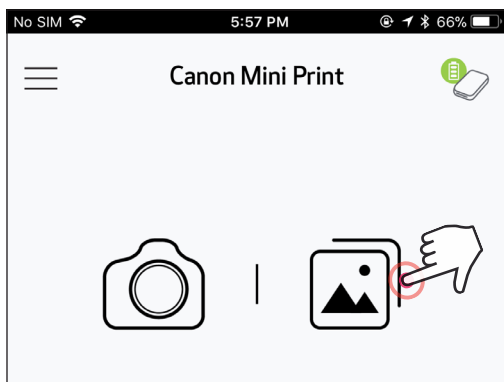

- ① To delete a photo from the Canon Folder in the app, tap [🖼️] to view the Photo Gallery
- ② Tap "Folder", then "Local - Canon"
- ③ Tap the trashcan, then select the photo(s) you wish to delete permanently.

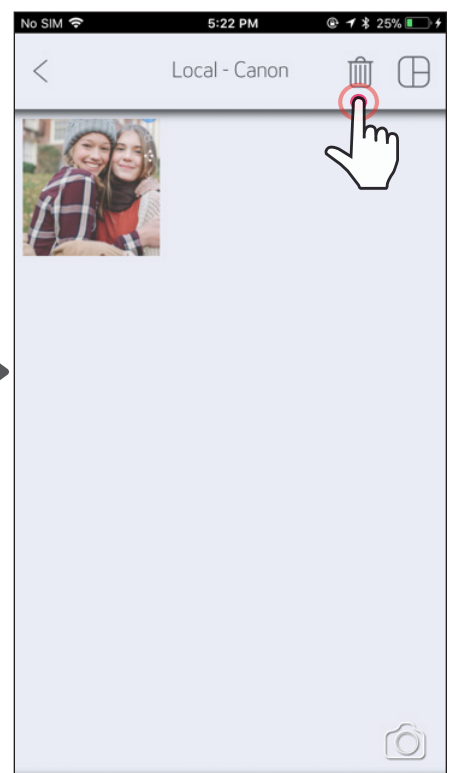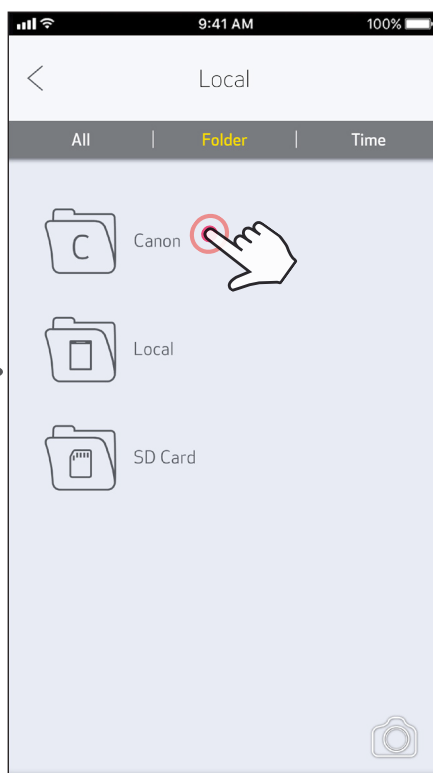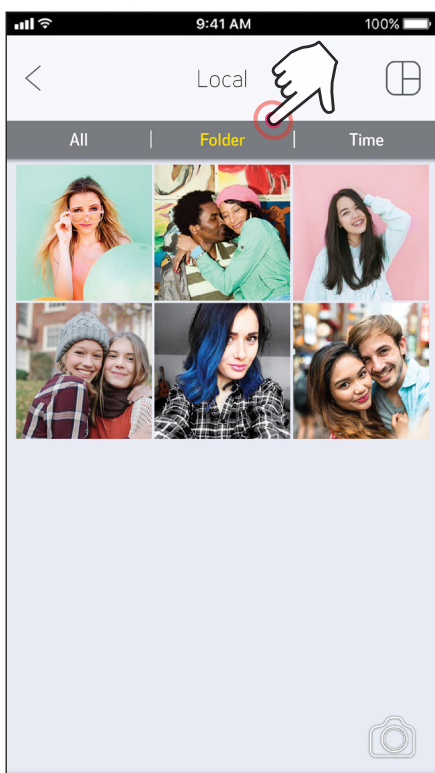




# SEND TO MINI PRINT

Send a photo in your device's photo gallery or camera roll to the Canon Mini Print app.

## For Android

- ① Find a photo in your device Gallery and tap the share button
- ② Tap the Mini Print Icon to send the photo to the app so you can edit and print.

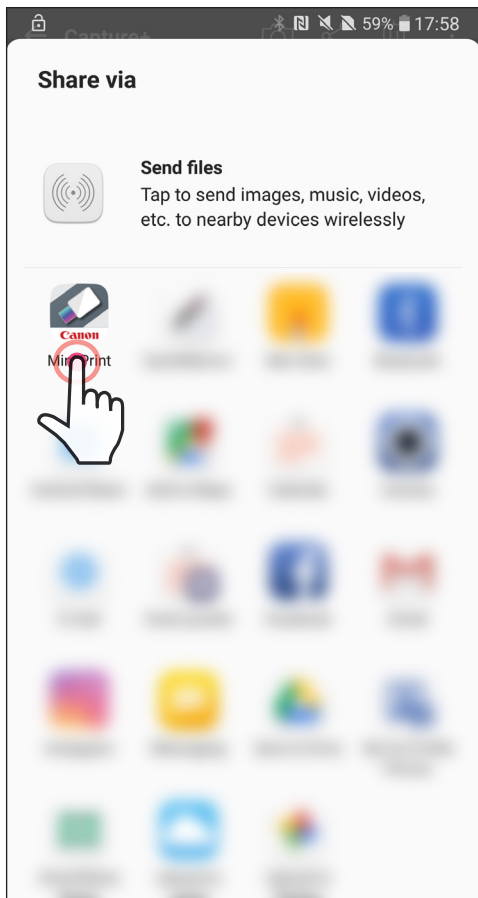


## For iOS

- ① Find a photo in your device Gallery and tap the share button
- ② OPTION A - Tap "Open in Mini Print" to send the photo to the app editing screen where you can edit and print.
- ② OPTION B - Tap the "Print to Canon" to send the photo directly to the print queue.



Editing Screen

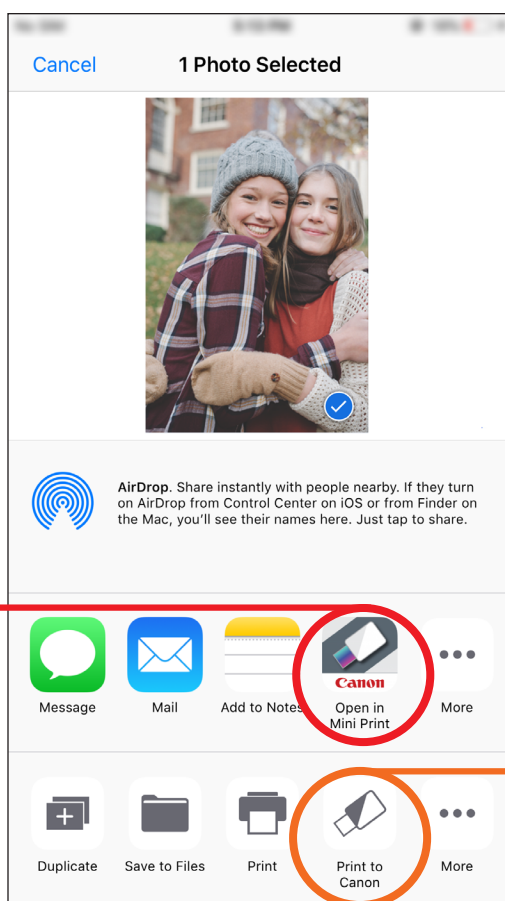

Print Queue




# SPECIFICATIONS

Power Source	Internal rechargeable battery 500 mAh Li-Polymer 7.4 V	
Charging Speed	Approximately 90 minutes (Full Charge)	
Dimension	118.3 mm (L) x 82.4 mm (W) x 18.7 mm (H)	
Weight	160 g	
Connectivity	Bluetooth 4.0	
Compatible OS	iOS 9.0 or above & Android 4.4 or above	
Print Technology	ZINK™	
Print Resolution	314 x 400 dpi (dots per inch)	
Borderless Printing	Yes	
Compatible Paper	Canon ZINK™ Photo Paper: ZP-2030-20 (20 sheets) ZP-2030-50 (50 sheets) 2" x 3" / Peel-and-stick back / Smudge-free / Water & tear resistant	
Paper Capacity	Up to 10 sheets of ZINK™ photo paper + 1 SMART SHEET™	
Memory	512Mb	
Environmental Parameters	<ul style="list-style-type: none"><li>• Recommended Printer Operating, Charging, and Storage Temperature: 15° to 32° C</li><li>• Recommended Printer Operating, Charging, and Storage Humidity: 40-55% RH</li><li>• Operating Temperature: 5° to 40°C</li><li>• Operating Humidity: &lt;70% RH</li></ul>	
Automatic Power-off	None / 3 minutes / 5 minutes / 10 minutes (selectable in-app)	
Power Adapter	Output current: 1A (min)	Voltage: 5V

\* Subject to change without notice

## Only for European Union and EEA (Norway, Iceland and Liechtenstein)

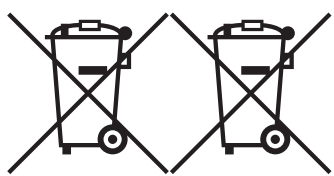

These symbols indicate that this product is not to be disposed of with your household waste, according to the WEEE Directive (2012/19/EU), the Battery Directive (2006/66/EC) and/or national legislation implementing those Directives.

■  
If a chemical symbol is printed beneath the symbol shown above, in accordance with the Battery Directive, this indicates that a heavy metal (Hg = Mercury, Cd = Cadmium, Pb = Lead) is present in this battery or accumulator at a concentration above an applicable threshold specified in the Battery Directive.

This product should be handed over to a designated collection point, e.g., on an authorized one-for-one basis when you buy a new similar product or to an authorized collection site for recycling waste electrical and electronic equipment (EEE) and batteries and accumulators. Improper handling of this type of waste could have a possible impact on the environment and human health due to potentially hazardous substances that are generally associated with EEE. Your cooperation in the correct disposal of this product will contribute to the effective usage of natural resources.

For more information about the recycling of this product, please contact your local city office, waste authority, approved scheme or your household waste disposal service or visit [www.canon-europe.com/weee](http://www.canon-europe.com/weee), or [www.canon-europe.com/battery](http://www.canon-europe.com/battery).