



# User Guide

AV1000 Gigabit Powerline ac Wi-Fi Extender  
TL-WPA7617

# Contents

About This Guide .....	1
<b>Chapter 1. Get to Know Your Powerline Extender .....</b>	<b>2</b>
1.1. Product Overview.....	3
1.2. Main Features .....	3
1.3. Product Appearance.....	3
1.3.1. LED Legend .....	3
1.3.2. Physical Interface .....	4
<b>Chapter 2. Initial Use .....</b>	<b>6</b>
2.1. To Set Up a New Secure Wireless Network .....	7
2.2. To Extend the Existing Wireless Network.....	8
<b>Chapter 3. Configuring via Web Management Interface.....</b>	<b>11</b>
3.1. Management Interface.....	12
3.1.1. Log In .....	12
3.2. Manage Powerline Network.....	13
3.2.1. Add a New Device to the Powerline Network .....	13
3.2.2. Change Powerline Network Name.....	13
3.3. Wi-Fi Move .....	14
3.4. Wi-Fi Clone .....	14
3.5. Wireless Network.....	16
3.5.1. Customize Wireless Settings .....	16
3.5.2. Wireless Clients .....	18
3.6. LED Schedules .....	18
3.7. Schedule Your Wireless Function .....	19
3.8. Parental Controls .....	21
3.9. Guest Network.....	22
3.10. MAC Filter .....	23
3.11. Administration.....	25
3.11.1. LAN IP Address.....	25
3.11.2. Set Up System Time.....	25
3.11.3. Upgrade the Firmware .....	27
3.11.4. Back Up and Restore Configuration Settings.....	27
3.11.5. Change Login Password.....	29
3.11.6. System Log .....	29

# About This Guide

This guide is a complement to Quick Installation Guide. The Quick Installation Guide provides instructions for quick Internet setup, while this guide contains details of each function and demonstrates how to configure them in typical scenarios.

When using this guide, please notice that features of the powerline adapter and extender may vary slightly depending on the model and software version you have, and on your location and language. All images, parameters and descriptions documented in this guide are used for demonstration only.

## Conventions

In this guide the following conventions are used:

Convention	Description
Powerline extender	Stands for AV1000 Powerline Wi-Fi Extender without any explanation.
<u>Teal Underlined</u>	Hyperlinks are in teal and underlined. You can click to redirect to a website or a specific section.
Teal	Key information appears in teal, including management page text such as menus, items, buttons and so on.
>	The menu structures to show the path to load the corresponding page. For example, <a href="#">Wireless</a> > <a href="#">MAC Filter</a> means the MAC Filter function page is under the Wireless menu.
■ Note:	Ignoring this type of note might result in a malfunction or damage to the device.
🔗 Tips:	Indicates important information that helps you make better use of your device.
Symbols on the web page	<ul style="list-style-type: none"><li>✎ click to edit the corresponding entry.</li><li>🗑️ click to delete the corresponding entry.</li><li>💡 click to enable or disable the corresponding entry.</li></ul>

## More Info

- The latest software, management app and utility are available from the [Download Center](#) at <https://www.tp-link.com/support/download/>.
- The Quick Installation Guide (QIG) can be found where you find this guide or inside the product packaging.
- Specifications can be found on the product page at <https://www.tp-link.com>.
- Our Technical Support contact information can be found at the [Contact Technical Support](#) page at <https://www.tp-link.com/support>.
- TP-Link Community is provided for you to discuss our products and share knowledge at <https://community.tp-link.com/>.

#### Compatibility Disclaimer

\*Compatible with all HomePlug AV and AV2 Standard Powerline adapters. This product may not be compatible with routers or gateways with firmware that has been altered, is based on open source programs, or are non-standard or outdated.

#### Wi-Fi Speed/Coverage Disclaimer

\*Maximum wireless signal rates are the physical rates derived from IEEE Standard 802.11 specifications. Actual wireless data throughput and wireless coverage are not guaranteed and will vary as a result of 1) environmental factors, including building materials, physical objects, and obstacles, 2) network conditions, including local interference, volume and density of traffic, product location, network complexity, and network overhead, and 3) client limitations, including rated performance, location, connection, quality, and client condition.

#### Powerline Speed/Coverage Disclaimer

\*Maximum Powerline signal rates are the physical rates derived from HomeplugAV/AV2 specifications. Actual Powerline data throughput and Powerline range are not guaranteed and will vary as a result of network conditions and environmental factors, including electrical interference, volume of traffic and network overhead, AFCI circuit breaker, and Powerline being located in a separate circuit.

## Chapter 1

---

# Get to Know Your Powerline Extender

---

This chapter introduces the powerline extender by detailing its main features and appearance.

It contains the following sections:

- [Product Overview](#)
- [Main Features](#)
- [Product Appearance](#)

## 1.1. Product Overview

TP-Link's Powerline Wi-Fi Extender is a combined wired/wireless network expansion device. With the help of your home's existing electrical circuitry, it can extend your Wi-Fi to wherever you want in your house.

Ethernet ports and built-in antennas enable the powerline Wi-Fi extender to provide wired and wireless access for multiple computers and mobile devices.

With an array of additional features, the powerline Wi-Fi extender is the perfect choice for your home or business network.

## 1.2. Main Features

- HomePlug AV2 Standard Compliant: Provides users with stable, high-speed data transfer rates of up to 1000 Mbps on a line length of up to 300 meters.
- One-Touch Wi-Fi Configuration: With just a tap, copy your router's wireless settings onto the extender to share the same SSID and password.
- Gigabit Ethernet for Reliable Connections: Provide warp-speed wired connections for 4K HD streaming, lag-free gaming, and more.
- Easy Setup and Management: Quickly set up a secured Powerline network with Plug & Play and easily manage it via the tpPLC app, Utility, and/or Web Interface.





## 1.3. Product Appearance

Your powerline extender may differ in appearance slightly from that depicted because of the region and product version. European version is used for demonstration in this guide.


### 1.3.1. LED Legend



LEDs indicate the powerline extender's working status. For more details, please refer to the following table.

Name	Status	Indication
 Power	On/Off	The powerline extender is on or off.
	Blinking	Quickly: Pairing is in progress. Slowly: Power-saving Mode is on.*(TL-PA7017P Only)
 Powerline	On	The powerline extender is connected to the powerline network and is in a suitable location.
	Off	The powerline extender is not connected to any powerline network.
 Ethernet	On	At least one Ethernet port is connected to a powered-on device.
	Off	No Ethernet port is connected to a powered-on device.
 Wireless	On	The wireless function is enabled.
	Off	The wireless function is disabled.
	Blinking	Slowly: The powerline extender is cloning wireless network settings from the main router. Quickly: The powerline extender is syncing wireless network settings.

### 1.3.2. Physical Interface

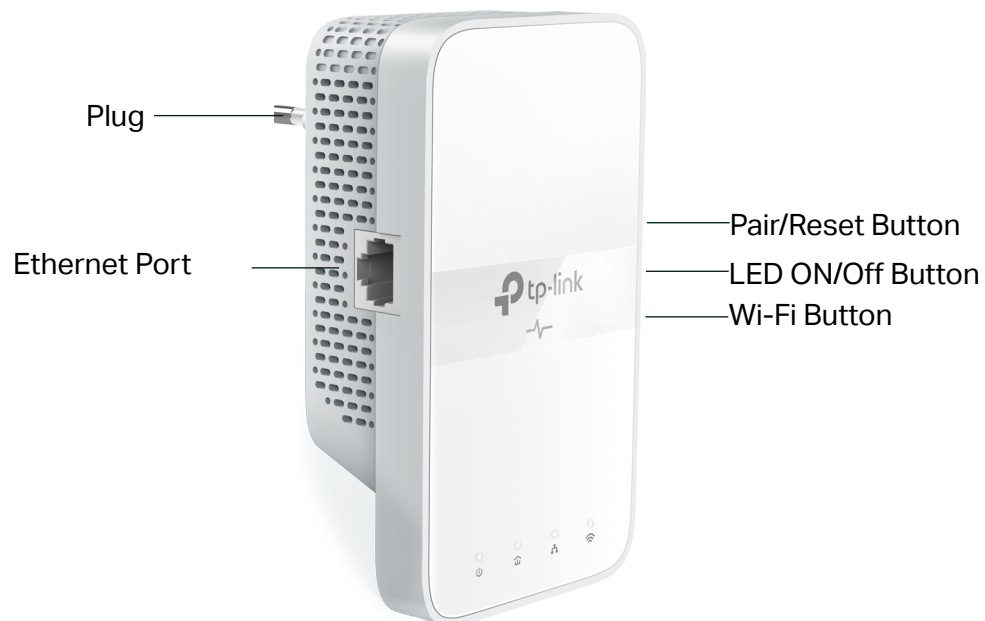

## Ethernet Port

Connect the Ethernet ports to your wired devices, such as a computer, a router or a game console, via Ethernet cables.

## Pair/Reset Button

Press and hold the button for 1 second to join a powerline network. Go to [To Set Up a New Secure Wireless Network](#) for more information.

Press and hold the Pair button for at least 6 seconds, then release the button to reset the adapter/extender to default settings.

## LED On/Off Button

Press to turn on or off the LEDs.

## Wi-Fi Button

Press and hold the button for 1 second to copy wireless settings from the main router to the extender. Go to [Wi-Fi Clone](#) for more information.


Press and hold the button for about 5 seconds to turn the wireless function on or off. The wireless function is on by default.

## Plug


The powerline adapter has a Plug that can be connected to any standard power socket.

### Note:

1. The provided plug may differ from the picture due to different regional power specifications.
2. Use the product in below directions.

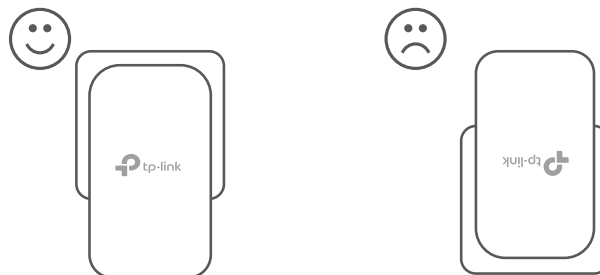

3. Plug the product directly into a wall socket instead of a power strip.

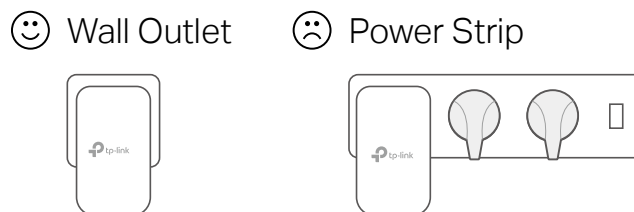



## Chapter 2

---

# Initial Use

---

This chapter guides you on how to use the powerline extender when you first open the package.

It contains the following sections:

- [To Set Up a New Secure Wireless Network](#)
- [To Extend the Existing Wireless Network](#)

## 2.1. To Set Up a New Secure Wireless Network


### I want to:

Use the Powerline Wi-Fi Kit to set up a new secure wireless network in my house.

For example, I have a wireless router in my house, but the wireless signal cannot reach every corner. So I bought a Powerline Wi-Fi Kit to extend the wireless network. The Powerline Wi-Fi Kit includes a powerline adapter and a powerline extender.

### How can I do that?


1. Connect the powerline adapter to an available LAN port of the router.
2. Plug the powerline adapter into a wall socket.
3. Plug the powerline extender into a wall socket near the adapter.

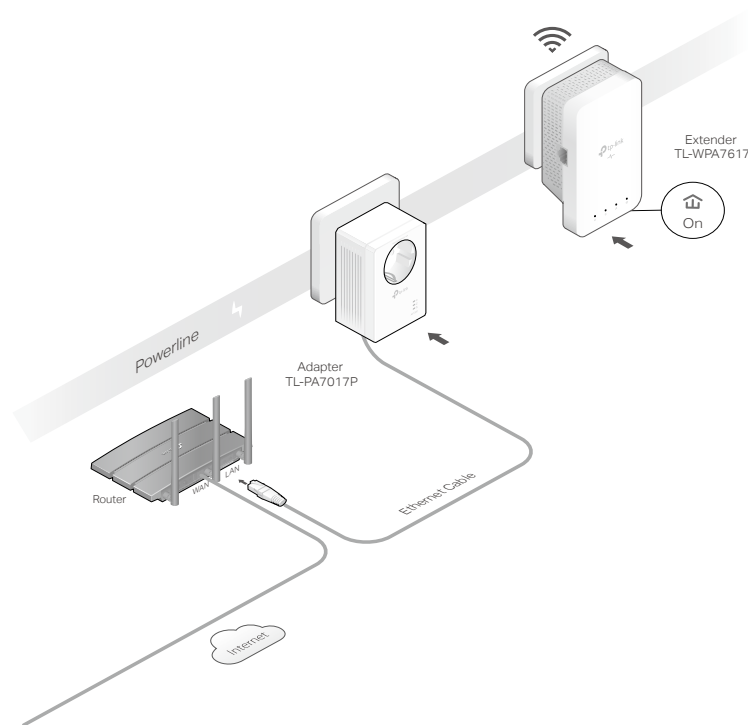

4. Pair the powerline devices.
  - a. Press the Pair button on the powerline adapter for 1 second. The Power LED starts blinking.  
Note: If the Power LED does not blink, press the Pair button again.
  - a. Within two minutes, press the Pair button on the powerline extender for 1 second. The Power LED starts blinking. When the Powerline LED turns solid on, the pairing process is complete.

5. Relocate the extender to the Wi-Fi “dead” zone. Use the SSID (network name) and password on the label at the top of the extender.

**Note:** A blinking Powerline LED indicates poor signal strength. Move the extender to another location.

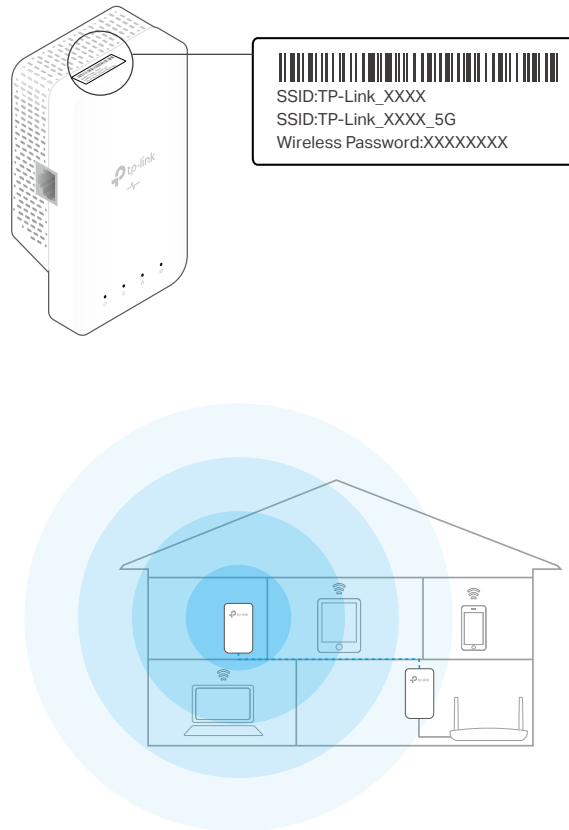

**Done!**

Now enjoy the internet!

## 2. 2. To Extend the Existing Wireless Network


**I want to:**


Extend the existing wireless network by adding a new powerline extender to the existing powerline network.


**For example,** I already set up a wireless network using powerline devices, but the wireless network is still not big enough to reach the top floor. So I bought a new powerline extender to extend the wireless network.

**How can I do that?**

1. Plug the new powerline extender into a wall socket near one of the existing powerline extender.

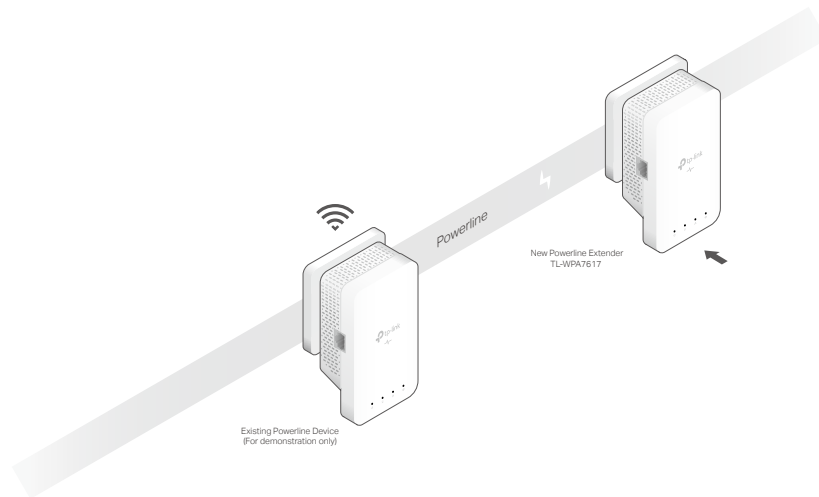


2. Check the new extender's Powerline LED . Is it on?
  - If it is on, follow Step 4 > A.
  - If it is off, follow Step 3 and Step 4 > B.
3. Add the new powerline extender to the existing powerline network by pairing two powerline devices.
  - a. Press the Pair button on the existing powerline device for 1 second. The Power LED starts blinking.
    - Note: If the Power LED does not blink, press the button again.
  - b. Within two minutes, press the Pair button on the new powerline extender for 1 second. The Power LED starts blinking. When the Powerline LED turns solid on, the pairing process is complete.

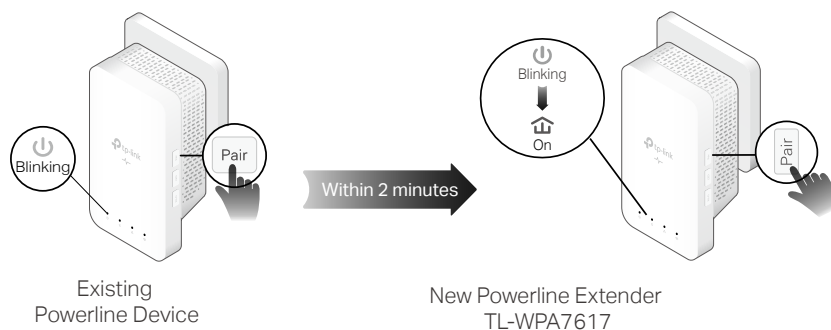

4. Relocate the new extender to the Wi-Fi "dead" zone.
  - Note: A blinking Powerline LED indicates poor signal strength. Move the extender to another location.
  - A. Use the SSID (network name) and password on the on the label at the top of the extender to connect to the internet.
  - C. If you cannot find the default SSID in your Wi-Fi network list, this may mean the Wi-Fi Move feature has automatically copied over the existing wireless settings.

In this case, use the SSID and password of your existing powerline network to connect.

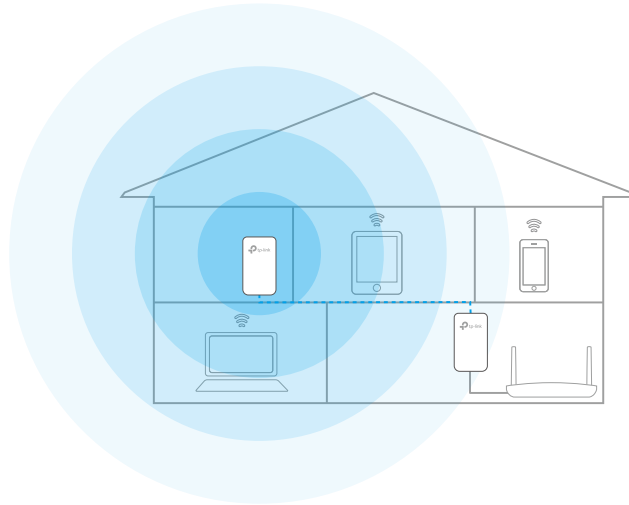

**Done!**

Enjoy the internet through your extended network!

## Chapter 3

---

# Configuring via Web Management Interface

---

The powerline extender has a management interface to configure all settings. The management interface can be opened on any device that has a web browser, such as Internet Explorer, Chrome or Firefox. This chapter is going to give detailed information on what functions the powerline extender has and how to configure them.

It contains the following sections:

- [Management Interface](#)
- [Manage Powerline Network](#)
- [Wi-Fi Move](#)
- [Wi-Fi Clone](#)
- [Wireless Network](#)
- [LED Schedules](#)
- [Schedule Your Wireless Function](#)
- [Parental Controls](#)
- [Guest Network](#)
- [MAC Filter](#)
- [Administration](#)

## 3. 1. Management Interface


### 3. 1. 1. Log In

There are two methods to log in to the management interface.


#### Method 1: Via web browser

Follow the steps below:

1. Connect your device to the powerline extender wirelessly.
2. Launch a web browser and type in <http://tplinkplc.net> to open the management interface.




3. Create a password to log in.

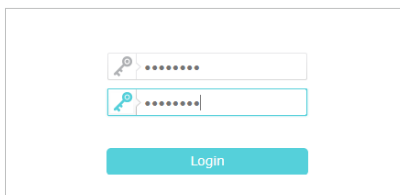

4. Click [Login](#).

#### Method 2: Via tpPLC utility

Follow the steps below:

1. Connect your computer to the powerline extender via an Ethernet cable or wirelessly.
2. Obtain and install the tpPLC Utility from the product's Support page at <https://www.tp-link.com/support>.
3. Open the utility, move your mouse over your powerline extender, and click the  icon that appears beside it.
4. Create a password to log in.

#### Method 3: Via tpPLC app

1. Connect your computer to the powerline extender wirelessly.
2. Obtain and install the tpPLC app from App Store or Google Play, or simply scan the QR code.




3. Connect your phone to the wireless network of the extender. Then launch the app and you can see the extender you added on [Device](#) list.
4. Create a password to log in.

## 3. 2. Manage Powerline Network


A powerline network is formed of powerline devices, including adapters and extenders. Powerline devices in the same powerline network share the same powerline network name.

### 3. 2. 1. Add a New Device to the Powerline Network

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the password you set for the extender.
2. Go to the [Status](#) page and click the [Powerline Network](#) icon to open the Powerline Device List.

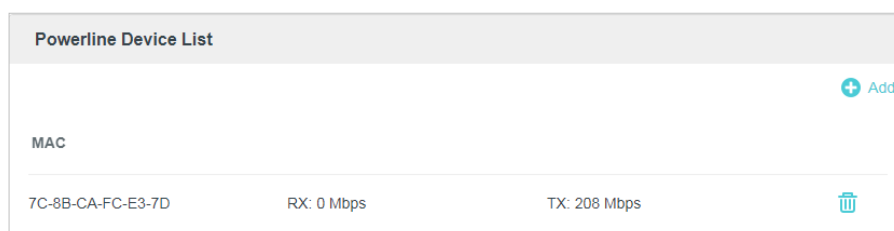

3. Click the [add](#) icon [+](#) and enter the [Powerline Key](#) of the device you want to add. The Powerline Key contains 16 capital letters, formed like XXXX-XXXX-XXXX-XXXX. It is printed on the back of the powerline device.

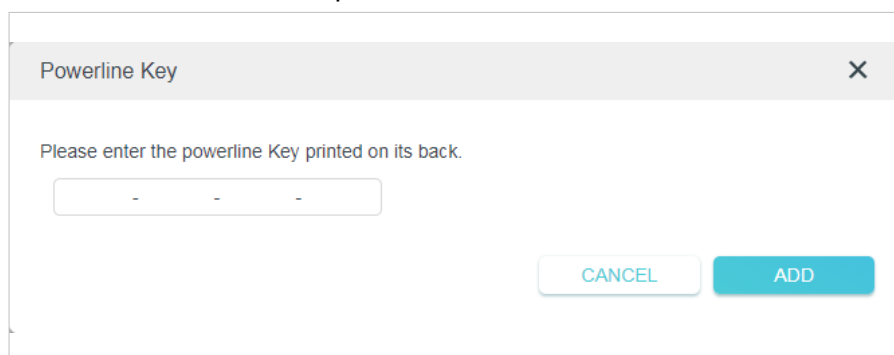

4. Click [ADD](#) to add the device.


### 3. 2. 2. Change Powerline Network Name

You can change the extender's powerline network name to add it to or remove it from a powerline network.

Follow the steps below to change the name.



1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to **Basic > Powerline**.

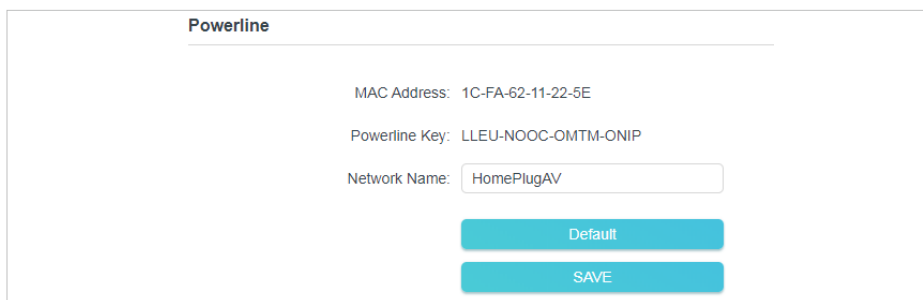

Powerline

MAC Address: 1C-FA-62-11-22-5E

Powerline Key: LLEU-NOOC-OMTM-ONIP

Network Name:

Default

SAVE


3. Change the **Network Name**. You can also click **Default** to use the default network name, e.g. HomePlugAV. However, if the default name is used, the Wi-Fi Move function will be automatically disabled.
4. Click **Save** to make the settings effective.

### 3.3. Wi-Fi Move

Wi-Fi Move is enabled by default. With the feature enabled, any changes made to the Wi-Fi settings and LED schedules of one powerline extender will be automatically synchronized to other powerline extenders whose Wi-Fi Move feature is also enabled on the same powerline network .

Follow the steps below to enable the Wi-Fi Move feature:

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to **Advanced > Wireless > Wi-Fi Move**.
3. Toggle on **WiFi Move** to enable the feature.

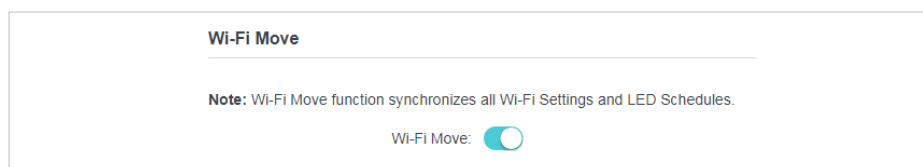

Wi-Fi Move

**Note:** Wi-Fi Move function synchronizes all Wi-Fi Settings and LED Schedules.

Wi-Fi Move:

#### Note:

When Wi-Fi Move is enabled, the following features will be synced: Wireless SSID & Password, Wireless Security, Wireless Mode, Wireless Radio Status, Wi-Fi Schedules, LED Schedules, Wi-Fi Clone Settings, MAC Filter Settings, Parental Controls, and Guest Network.


### 3.4. Wi-Fi Clone

**I want to:**

Copy wireless settings from my router to my extender, so I can use the same SSID and password to access the internet in my house.


### How can I do that?

1. Before cloning, make sure your router supports the same band as your extender. If you do not know how to check this, go to your router's User Guide for more information.
2. Plug your extender near your router.
3. Press the WPS button on your router.

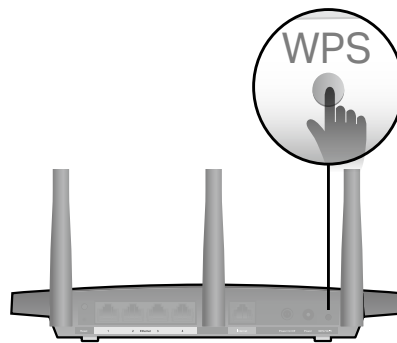

Wireless Router

5. Within two minutes, press the Wi-Fi button on the front panel of the extender for 1 second. The Wi-Fi LED starts blinking.

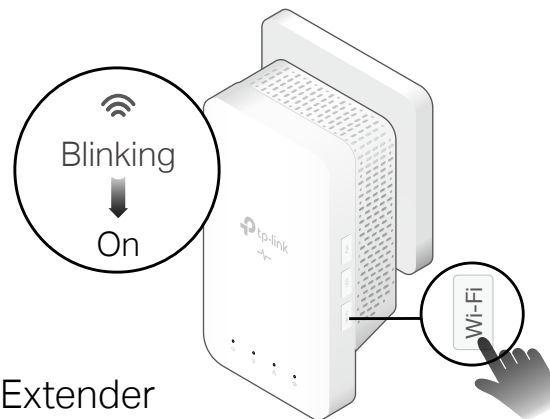


Extender

### Done!

When the Wi-Fi LED blinks quickly for 3 seconds and then stays on, the Wi-Fi Clone process is complete.

**Note:** By default, both band settings will be copied, but if you just want to copy one band settings, go to [Advanced](#) > [Wireless](#) > [Wi-Fi Clone](#), and select the band you want to copy then follow the steps above.

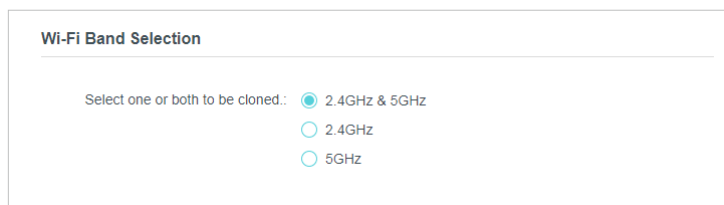

Wi-Fi Band Selection

Select one or both to be cloned.:  2.4GHz & 5GHz  
 2.4GHz  
 5GHz

## 3. 5. Wireless Network

### 3. 5. 1. Customize Wireless Settings


The powerline extender's wireless network name (SSID), password, and security option are preset in the factory. The preset SSID and password can be found on the product label. You can customize the wireless settings according to your needs.

Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.

Go to **Basic > Wireless Settings** page.

#### To enable or disable the wireless function:

Select the box to enable the wireless function. Deselect the box to disable wireless function. If disabled, all wireless settings will be ineffective.

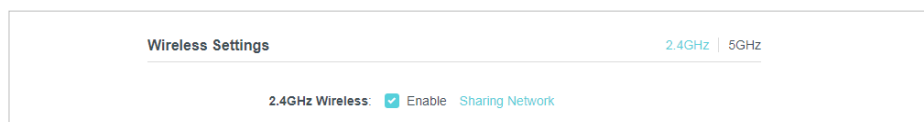

Wireless Settings 2.4GHz | 5GHz

2.4GHz Wireless:  Enable [Sharing Network](#)


#### To change the wireless network name (SSID) or hide SSID :

The default SSIDs are TP-Link\_XXXX and TP-Link\_XXXX\_5G, and the default password is printed on the product label. You can change the default ones by directly entering new ones in the field. SSID is up to 32 characters, and the value in both SSID and password is case-sensitive.

Select Hide SSID, and your SSID will not be broadcasted. It won't display when you scan for local wireless network list on your wireless device and you need to manually join the network.

#### **Note:**

Remember to write down the new SSIDs, for you will be disconnected when new settings are effective.



2.4GHz Wireless:  Enable [Sharing Network](#)

SSID:   Hide SSID

## To customize more advanced settings

The screenshot shows a configuration interface with the following fields and options:

- Security: WPA/WPA2-Personal(Recommended) (dropdown)
- Version: Auto (dropdown)
- Encryption: AES (dropdown)
- Password: 08773487 (text input)
- Channel: Auto (dropdown)
- Mode: 802.11b/g/n mixed (dropdown)
- Channel Width: Auto (dropdown)
- Transmit Power:  High  Middle  Low (radio buttons)

**Security:** Select an option from the Security drop-down list. The extender provides three options, No Security, WPA/WPA2 Personal (Recommended), and WEP. WPA2 uses the newest standard and the security level is the highest. Don't change the default settings unless necessary.

**Version:** You can select one of following versions.

- **Auto** (Recommended) - Select WPA-Personal or WPA2-Personal automatically based on the wireless station's capability and request.
- **WPA-PSK** - Pre-shared key of WPA.

**Encryption:** You can select either Automatic(Recommended), TKIP or AES

**Password:** Set the password of the Wi-Fi network.

**Channel:** Select the channel you want to use from the drop-down list. This field determines which operating frequency will be used. It is not necessary to change the wireless channel unless you notice interference problems with another nearby access point.

**Mode:** Select the desired mode.

- **802.11n only:** Select only if all of your wireless clients are 802.11n devices.
- **802.11g/n mixed:** Select if you are using both 802.11g and 802.11n wireless clients.
- **802.11b/g/n mixed:** Select if you are using a mix of 802.11b, 11g, and 11n wireless clients.

**Note:** When 802.11n only mode is selected, only 802.11n wireless clients can connect to the extender. It is strongly recommended that you select 802.11b/g/n mixed, so that all of 802.11b, 802.11g, and 802.11n wireless clients can connect to the extender.

**Channel Width:** Select the channel width. The default setting is Auto, which can adjust the channel width for your clients automatically.

**Transmit Power:** Select the level of transmit power. We recommend you choose **High** to have the best signal strength.

### 3.5.2. Wireless Clients

Follow the steps below to view detailed information of all wireless clients connected to the extender.


1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to [Wireless > Clients](#) page.



The screenshot shows the 'Online Wireless Clients' interface. At the top, it says 'Total Clients: 1' and has a 'Refresh' button. Below is a table with the following data:

Device Type	Name	IP Address	MAC	Connection Info
	android-ff6939bcf59cec63	192.168.0.100	F0-6D-78-8A-B2-CB	2.4G

3. Now you can view the detailed information, including device name, MAC address, connected wireless band, and IP address.

 **Tips:** You can also see the wireless details by clicking the wireless clients icon on the [Status > Wireless Clients](#) page.

## 3.6. LED Schedules

### I want to:

Automatically turn off LEDs at times when I do not want light in my room.

*For example,* I want to turn LEDs off from 21:00 to 08:00 every weekday.

### How can I do that?

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net> and log in with the username and password you set for the extender.
2. Go to [Wireless > Device Settings > LED Control](#).
3. Enable [LED Status](#) to turn on the extender's LEDs.

**LED Control**

Turn the extender's LEDs on or off.

LED Status:

---

**LED Schedule**

LED Schedule:

**Notes:** Before enabling LED Schedule, please make sure the [Time Settings](#) is correct.

Current Time: 01/01/2020 01:10:51

[+ Add](#)

LED Off Time	Repeat	Status	Modify
No Entries in this table.			

4. Enable [LED Schedule](#).
5. Click [Add](#) and choose [LED Off Time](#) from 21:00 to 08:00 (next day).  
■ **Note:** Please make sure that the system time is correct before using this function.

Add ×

LED Off Time: From  ▼

To  ▼ (next day)

Repeat:  S  M  T  W  T  F  S

6. Click [SAVE](#).

## Done!

Now your LEDs will be turned off automatically at 21:00 and turned on at 8:00am the next morning.

## 3. 7. Schedule Your Wireless Function

### I want to:

Automatically turn off my wireless network at times when I do not need the wireless connection.

[For example](#), I want to turn them off from 21:00 to 09:00 every weekday.

## How can I do that?

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net> and log in with the username and password you set for the extender.
2. Go to [Advanced](#) > [Wireless](#) > [WiFi Schedule](#).

3. Toggle on the [WiFi Schedule](#).

Note: If you check the box of [Do not turn off Wi-Fi while clients are connected to it](#), the WiFi schedule are not enabled when any clients are connected to your extender.

4. Click [Add](#) to add an entry.
5. Choose [WiFi Off Time](#) from 21:00 to 09:00, and then check all boxes from Monday to Friday.

**Note:** Please make sure that the system time is correct before using this function.

6. Click [SAVE](#) to save the settings.

### WiFi Schedule

Schedule when to automatically turn off your extender.

WiFi Schedule:

Do not turn off WiFi while clients are connected to it

**Notes:** Before enabling WiFi Schedule, please make sure the [Time Settings](#) is correct.

Current Time: 01/01/2020 00:10:52

[+ Add](#)

WiFi Off Time	Repeat	Status	Modify
21:00 - 09:00 (next day)	Mon,Tue,Wed,Thu,Fri	<input checked="" type="checkbox"/>	<a href="#">✎</a> <a href="#">🗑</a>

## Done!

Now your Wi-Fi will be automatically turned off at 00:00 and turned on at 7:00am the next morning.

📌 **Note:** The Wi-Fi LED will turn off if the wireless network is disabled.

## 3.8. Parental Controls

### I want to:

Control when my children's wireless devices can access the internet.

*For example,* I want to allow my children's wireless devices to access only from 18:00 (6PM) to 22:00 (10PM) on weekdays and not other times.

### How can I do that?

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to [Advanced](#) > [Parental Controls](#).

### Parental Controls

**Note:** Make sure [Time Settings](#) are correct before using this function.

Parental Controls:

#### Devices Under Parental Controls

[+ Add](#)

ID	MAC Address	Internet Access Time	Description	Status	Modify
No Entries in this table.					



3. Toggle on **Parental Controls**.
4. Click **Add**.
5. Click **Select from Device List** and select the device to be controlled. Or select **Add Manually** and enter the MAC address manually.
6. Choose **Internet Access Time** from 18:00 to 22:00, and then check all boxes from Sunday to Saturday.
7. Give a description to the device to be controlled.
8. Click **SAVE** to save the settings.

■ **Note:** Please make sure that the system time is correct before using this function.

## Done!

Now the controlled device can access only from 18:00 (6PM) to 22:00 (10PM) on weekdays and not other times.


## 3.9. Guest Network

### I want to:

Create a network for my guests, providing internet access for them while at the same time limit the network authorities for guests to ensure network security and privacy.

### How can I do that?

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the password you set for the extender.
2. Go to **Advanced > Guest Network**.

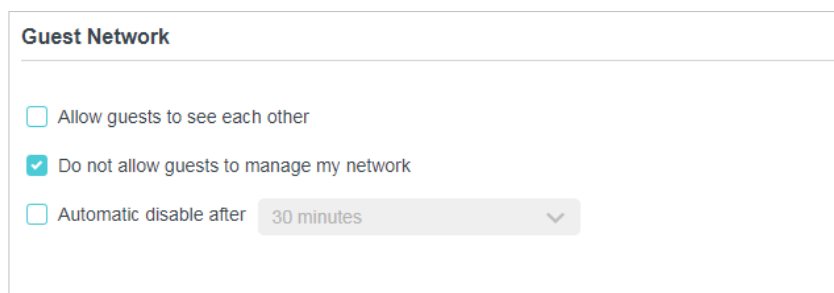


**Guest Network**

Allow guests to see each other

Do not allow guests to manage my network

Automatic disable after

3. Check the box of relative entry to limit network authorities.
4. Select **2.4GHz** or **5GHz** and configure the following settings.

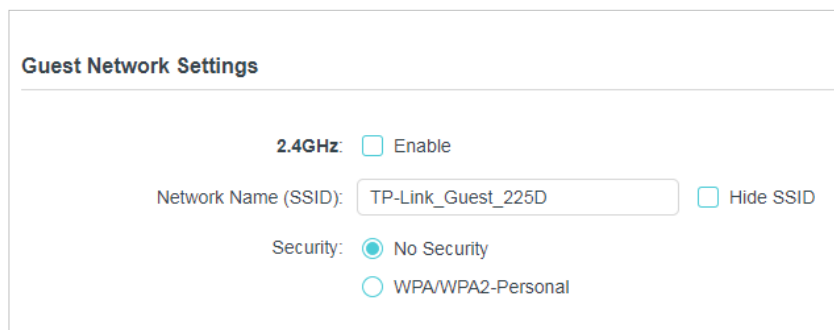

**Guest Network Settings**

2.4GHz:  Enable

Network Name (SSID):   Hide SSID

Security:  No Security  
 WPA/WPA2-Personal

#### To enable or disable the guest network function:

Select the box [2.4GHz](#) or [5GHz](#) to enable the guest network function. Deselect the box to disable guest network function. If disabled, all guest network settings of the corresponding band will be ineffective.

#### To change the guest network name (SSID) and password:

The default SSIDs are TP-Link\_Guest\_XXXX and TP-Link\_Guest\_XXXX\_5G, and the default password is printed on the product label. You can change the default ones by directly entering new ones in the field. SSID is up to 32 characters, and the value in both SSID and password is case-sensitive.

#### Done!

Now you can tell your guests to connect to the guest network you created.

## 3. 10. MAC Filter

This function exploits the uniqueness of the MAC (Medium Access Control) address, a unique 12-digit hexadecimal address (for example, D8-5D-4C-B4-46-EA) of every network device, to determine if the device can or cannot access your wireless network.

#### I want to:


Prevent unauthorized users from accessing my wireless network by utilizing the network device's MAC address.

[For example](#), I have a computer that is connected to my wireless network. Now, an unknown device (an intruder) is also using my wireless network, which affects my internet speed. I would like to control my wireless network with the following capabilities:

- My computer is always allowed to access the wireless network.
- The unknown device is not allowed to access the wireless network.
- I don't have to keep changing my wireless password as often.

## How can I do that?

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to [Advanced](#) > [Wireless](#) > [MAC Filter](#).
3. Toggle on [MAC Filter](#).
4. Select either of the filtering rules (here we select [Black List](#)).

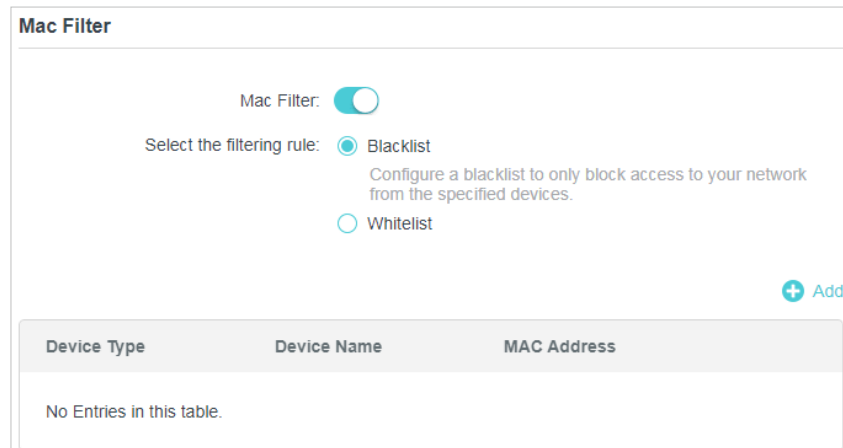

**Mac Filter**

Mac Filter:


Select the filtering rule:  Blacklist  
Configure a blacklist to only block access to your network from the specified devices.

Whitelist

[+ Add](#)


Device Type	Device Name	MAC Address
No Entries in this table.		

5. Click [Add](#) to add devices to the list.

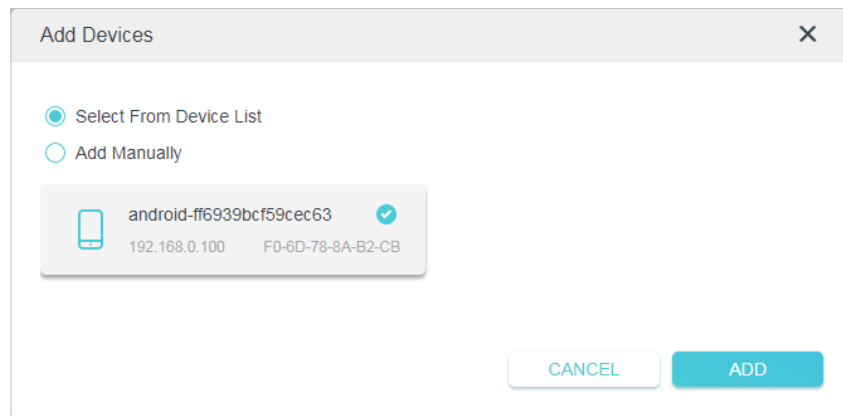

**Add Devices** [X]

Select From Device List  
 Add Manually

 android-ff6939bcf59cec63 ✓  
192.168.0.100 F0-6D-78-8A-B2-CB

[CANCEL](#) [ADD](#)

6. Select [Select From Device List](#) to see how many devices are now connected to the network. Select a device and click [ADD](#) to finish the settings.
7. You can also add devices manually. Select [Add Manually](#), enter device name and the MAC address and click [ADD](#) to finish the settings.

## Done!

Now MAC Filter is implemented to protect your wireless network.

## 3.11. Administration

### 3.11.1. LAN IP Address

Follow the steps below to configure LAN settings of the extender.

Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.

Go to [Device Settings](#) > [LAN Settings](#).

**LAN Settings**  
View and configure LAN settings.

Obtain an IP address automatically (Recommended)  
 Use the following IP address

IP Address: 192.168.0.101  
Subnet Mask: 255.255.255.0  
Gateway: 192.168.0.254  
Primary DNS: 192.168.0.254  
Secondary DNS: 0.0.0.0 (Optional)

**LAN Type:** Select [Obtain an IP address automatically](#) to have your extender automatically obtain IP Address from the main router. Select [Use the following IP address](#) to manually configure the LAN parameters.

**IP Address:** The IP address of the powerline extender.

**Subnet Mask:** The subnet mask associated with IP address.

**Gateway:** The IP address of the gateway device.

**Primary DNS:** Input the DNS IP address provided by your ISP.

**Secondary DNS:** Input the IP address of another DNS server if your ISP provides two DNS servers.

### 3.11.2. Set Up System Time

System time is the time displayed while the extender is running. The system time you configure here will be used for other time-based functions like Parental Controls and Wi-Fi Schedules. You can manually set how to get the system time.

Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.

Go to [Settings](#) > [Time Settings](#) page.

### System Time

Set the extender's system time.

---

Current Time: 01/01/2020 12:50:29 AM

24-Hour Time:

Set Time:

Time Zone:

NTP Server I:

NTP Server II:  (Optional)

### To automatically synchronize the time:

1. Select [Get from the Internet](#).
1. Select your local [Time Zone](#) from the drop-down menu.
2. In the [NTP Server I](#) field, enter the IP address or domain name of your desired NTP Server. (Optional)
3. In the [NTP Server II](#) field, enter the IP address or domain name of the second NTP Server. (Optional)
4. Click [SAVE](#).

### To manually set the date and time:

1. Select [Manually](#).
2. Enter the current [Date](#).
3. Set the current [Time](#) (In 24-hour clock format, e.g. 16:00:00 is 04:00PM).
4. Click [SAVE](#).

### To set up Daylight Saving time:

### Daylight Saving Time

Automatically synchronize the system time with daylight saving time.

---

Daylight Saving Time:  Enable

Start:2020

End:2020

Running Status: Daylight Saving Time is off.


1. Check the box of [Daylight Saving Time](#).

2. Select the correct **Start** date and time when daylight saving time starts at your local time zone.
3. Select the correct **End** date and time when daylight saving time ends at your local time zone.
4. Click **SAVE**.

### 3. 11. 3. Upgrade the Firmware

TP-Link is dedicated to improving and enriching the product features, giving you a better network experience. We will release the latest firmware at our official website, you can download the latest firmware file from our website: [www.tp-link.com](http://www.tp-link.com) and upgrade the firmware to the latest version.

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to **Settings > Firmware Upgrade** page and confirm the **Hardware Version**.

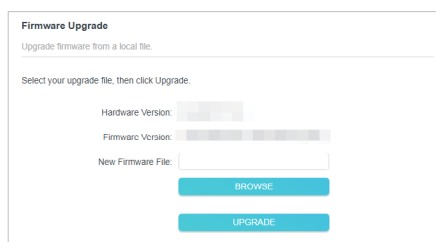

3. Go to [www.tp-link.com](http://www.tp-link.com). Download the latest firmware file for the extender.

■ **Note:** The upgraded firmware version must correspond to the hardware.

4. Click **BROWSE** to locate the downloaded new firmware file, and click **UPGRADE**.

5. Wait a few minutes for the upgrading and rebooting.

■ **Note:**


1. Before upgrading the firmware, it's better to back up your current settings.
2. During the upgrading process, do not turn off or reset the extender.
3. If the upgrade is interrupted, it's possible your extender may stop working and its LEDs blink once a second. In this case, please connect your computer to the extender via an Ethernet cable, and set your computer to static IP 192.168.0.X and subnet mask 255.255.255.0. Then visit <http://192.168.0.254> to complete the upgrade.

### 3. 11. 4. Back Up and Restore Configuration Settings

The configuration settings are stored as a configuration file in the extender. You can back up the configuration file to your computer for future use and restore the extender to a previous settings from the backup file when needed. Moreover, if needed, you can erase the current settings and reset the extender to the default factory settings.

### To backup configuration settings:

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Backup & Restore](#) page.

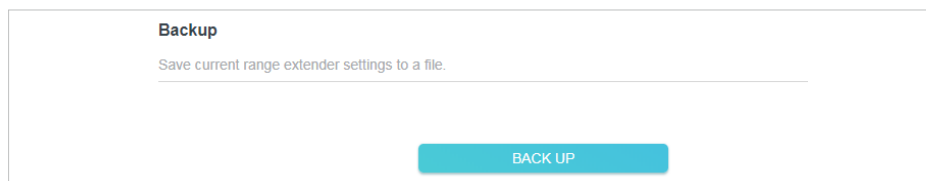


The screenshot shows a web interface titled "Backup". Below the title is the instruction "Save current range extender settings to a file." followed by a horizontal line. At the bottom center of the form is a blue button labeled "BACK UP".

3. Click [BACK UP](#) to save a copy of the current settings to your local computer. A [config.bin](#) file will be stored to your computer.

### To restore configuration settings:

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Backup & Restore](#) page.

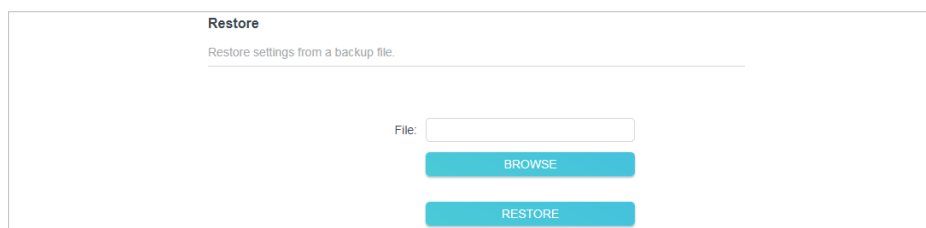


The screenshot shows a web interface titled "Restore". Below the title is the instruction "Restore settings from a backup file." followed by a horizontal line. Below this is a "File:" label next to a text input field. Underneath the input field are two blue buttons: "BROWSE" and "RESTORE".

3. Click [BROWSE](#) to locate the backup configuration file stored on your computer, and click [RESTORE](#). The configuration file is config.bin.
  4. Wait a few minutes for the restoring and rebooting.
- **Note:** During the restoring process, do not turn off or reset the extender.

### To reset the extender to factory default settings:

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the username and password you set for the extender.
2. Go to [Settings](#) > [Factory Default Restore](#) page.

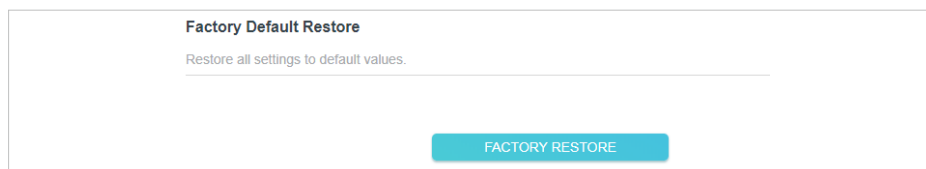

The screenshot shows a web interface titled "Factory Default Restore". Below the title is the instruction "Restore all settings to default values." followed by a horizontal line. At the bottom center of the form is a blue button labeled "FACTORY RESTORE".

3. Click [FACTORY RESTORE](#) to reset the extender.
4. Wait a few minutes for the resetting and rebooting.

■ **Note:**

1. During the resetting process, do not turn off the extender.

2. We strongly recommend you back up the current configuration settings before resetting the extender.

### 3.11.5. Change Login Password

Go to Settings > [Change Login Password](#), and you can change the login password of the extender.

#### Change Login Password

Change the extender's local management password.

---

Old Password:

New Password:

Confirm New Password:

**Note:**

1. The new password must be 6-32 characters long and not include any spacing.

### 3.11.6. System Log

When the extender does not work properly, you can save the system log and send it to the technical support for troubleshooting.

Follow the steps below to save the system log:

1. Connect to the powerline extender wirelessly. Visit <http://tplinkplc.net>, and log in with the password you set for the extender.
2. Go to [Settings](#) > [System Log](#).

#### System Log

View a detailed record of system activities.

---

Current Time: 01/01/2020 12:54:31 AM

Log Type: ALL

Search

[Refresh](#) [Clear All](#)

[SAVE LOG](#)

3. Choose the type and level of the system log according to your need.
4. Click [SAVE LOG](#) to save the system log to local.



## FCC STATEMENT



Product Name: AV1000 Gigabit Powerline ac Wi-Fi Extender

Model Number: TL-WPA7617

**Responsible party:**

**TP-Link USA Corporation, d/b/a TP-Link North America, Inc.**

Address: 145 South State College Blvd. Suite 400, Brea, CA 92821

Website: <http://www.tp-link.com/us/>

Tel: +1 626 333 0234

Fax: +1 909 527 6803

E-mail: [sales.usa@tp-link.com](mailto:sales.usa@tp-link.com)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/ TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference.
- 2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

## **FCC RF Radiation Exposure Statement**

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.

"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

We, **TP-Link USA Corporation**, has determined that the equipment shown as above has been shown to comply with the applicable technical standards, FCC part 15. There is no unauthorized change is made in the equipment and the equipment is properly maintained and operated.

Issue Date: 2020.11.4

## CE Mark Warning



This is a class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

### OPERATING FREQUENCY(the maximum transmitted power)

2400 MHz -2483.5 MHz(20dBm)

5150 MHz -5250 MHz(23dBm)

### EU declaration of conformity

TP-Link hereby declares that the device is in compliance with the essential requirements and other relevant provisions of directives 2014/53/EU, 2009/125/EC, 2011/65/EU and (EU)2015/863.

The original EU declaration of conformity may be found at

<https://www.tp-link.com/en/ce>

### National restrictions

Attention: This device may only be used indoors in all EU member states and EFTA countries.

	AT	BE	BG	CH	CY	CZ	DE	DK
	EE	EL	ES	FI	FR	HR	HU	IE
	IS	IT	LI	LT	LU	LV	MT	NL
	NO	PL	PT	RO	SE	SI	SK	UK

### RF Exposure Information

This device meets the EU requirements (2014/53/EU Article 3.1a) on the limitation of exposure of the general public to electromagnetic fields by way of health protection.

The device complies with RF specifications when the device used at 20 cm from your body.

### Canadian Compliance Statement

This device complies with Industry Canada license-exempt RSSs. Operation is subject to the following two conditions:

1. This device may not cause interference, and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. l'appareil ne doit pas produire de brouillage;
2. l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **Caution:**

1. The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;

### **Avertissement:**

1. Le dispositif fonctionnant dans la bande 5150-5250 MHz est réservé uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;

### **Radiation Exposure Statement:**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### **Déclaration d'exposition aux radiations:**

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

### **Industry Canada Statement**

CAN ICES-3 (B)/NMB-3(B)

CAN ICES-6/NMB-6

### **Korea Warning Statements:**

당해 무선설비는 운용중 전파혼신 가능성이 있음.

### **NCC Notice**

NCC Notice

注意!

依據 低功率電波輻射性電機管理辦法

LP0002低功率射頻器材技術規範\_章節3.8.2

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規定作業之無線電通信。

低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

5.7.9.1應避免影響附近雷達系統之操作。

## BSMI Notice

### 安全諮詢及注意事項

- 請使用原裝電源供應器或只能按照本產品注明的電源類型使用本產品。
- 清潔本產品之前請先切斷電源。請勿使用液體、噴霧清潔劑或濕布進行清潔。
- 注意防潮，請勿將水或其他液體潑灑到本產品上。
- 插槽與開口供通風使用，以確保本產品的操作可靠並防止過熱，請勿堵塞或覆蓋開口。
- 請勿將本產品置放於靠近熱源的地方。除非有正常的通風，否則不可放在密閉位置中。
- 不要私自拆開機殼或自行維修，如產品有故障請與原廠或代理商聯繫。

設備名稱：AV1000 Gigabit Powerline ac Wi-Fi Extender 型號（型式）：TL-WPA7617						
Equipment name Type designation (Type)						
單元 Unit	限用物質及其化學符號 Restricted substances and its chemical symbols					
	鉛 Lead (Pb)	汞 Mercury (Hg)	鎘 Cadmium (Cd)	六價鉻Hexavalent chromium (Cr <sup>6+</sup> )	多溴聯苯 Polybrominated biphenyls (PBB)	多溴二苯醚 Polybrominated diphenyl ethers (PBDE)
PCB	○	○	○	○	○	○
外殼	○	○	○	○	○	○
電源供應板	—	○	○	○	○	○
其他及其 配件	—	○	○	○	○	○
備考1. “超出0.1 wt %” 及 “超出0.01 wt %” 係指限用物質之百分比含量超出百分比含量基準值 Note 1: “Exceeding 0.1 wt %” and “exceeding 0.01 wt %” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition.						
備考2. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。 Note 2: “○” indicates that the percentage content of the restricted substance does not exceed the percentage of reference value of presence.						
備考3. “—” 係指該項限用物質為排除項目。 Note 3: The “—” indicates that the restricted substance corresponds to the exemption.						



Продукт сертифіковано згідно с правилами системи УкрСЕПРО на відповідність вимогам нормативних документів та вимогам, що передбачені чинними законодавчими актами України.





## Safety Information

- Keep the device away from water, fire, humidity or hot environments.
- Do not attempt to disassemble, repair, or modify the device.
- Do not use the device where wireless devices are not allowed.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.
- Plug the powerline devices directly into the wall outlets but not the power strips.
- Plug the powerline devices into the wall outlets with earthing connection.

Environment:

- Operating Temperature: 0°C ~ 40°C (32°F ~104°F)
- Alert to service person

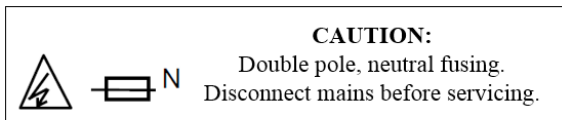

### CAUTION NEUTRAL FUSING



Please read and follow the above safety information when operating the device. We cannot guarantee that no accidents or damage will occur due to improper use of the device. Please use this product with care and operate at your own risk.

## Explanation of the symbols on the product label

Symbol	Explanation
	Class II equipment
	AC voltage
	<b>RECYCLING</b> This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.
	Indoor use only
	Protection earth

	Warning electric shock
	Fuse is used in neutral N