


## INSTRUCTIONAL GUIDE

# WIRED KEYBOARD


- 1 Plug in Satechi Aluminum Wired Keyboard into iMac's USB-A port.

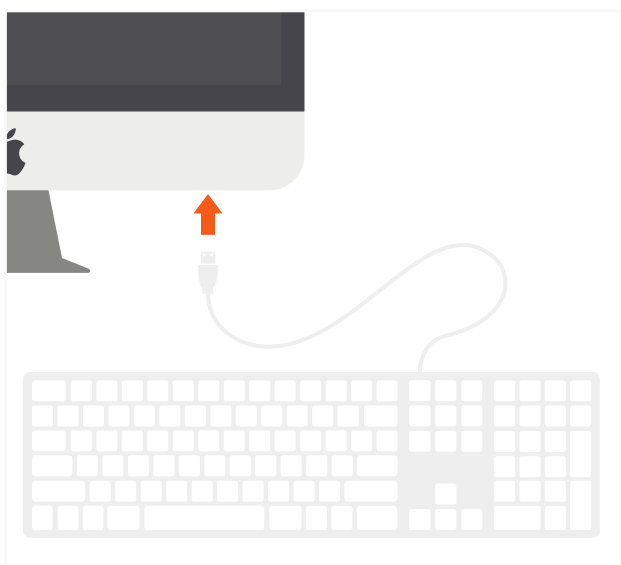

- 2 On MacOS, "Keyboard Setup Assistant" may show when first connecting the Keyboard. Follow the on-screen instructions to identify keyboard before first use.



- 3 Use media/function keys for convenient MacOS shortcuts. Function keys were designed for MacOS and may vary based on OS.

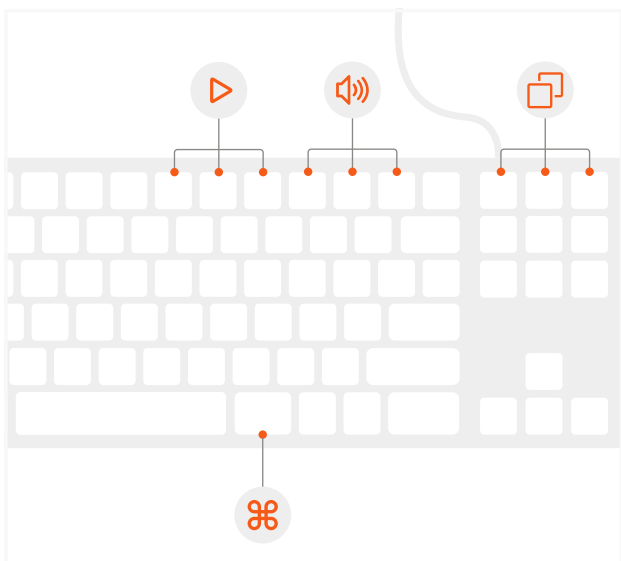

- 4 Unplug and replug the keyboard if you experience any issues. Open Keyboard icon in System Preferences and click "Change Keyboard Type" to re-identify the keyboard.

