

USER MANUAL

LCD Monitor

trovaprezzi.it

ENGLISH

ProLite XUB2490HSUC

Thank you very much for choosing the iiyama LCD monitor.

We recommend that you take a few minutes to read carefully through this brief but comprehensive manual before installing and switching on the monitor. Please keep this manual in a safe place for your future reference.



iiyama | Servicecard





Dear user, we congratulate you on the purchase of your iiyama LCD.

For details on warranty and locally used pixel policies that apply directly after installation of your product please check the iiyama website.

To report a fault, please contact your local support centre found at https://iiyama.com

Things to check before you call the iiyama information line
if the power cable is connected securely and turned on?
if the display has been turned on?
if the signal cable is connected securely and the correct input selected?
if the computer has been restarted with the display connected?
if the graphics card is correctly installed with the latest drivers possible?
if the correct native resolution has been selected via 'Display Properties'?
If the R/G/B signal configuration is correct?
if the displays On Screen Menu is shown?
if the correct brightness and contrast settings have been set?
if given display tolerances and compatibility have been considered?
if via the On Screen Menu you have performed a Factory Reset/Recall?

Before reporting the screen defect, please prepare the following information/evidence:

model number *

purchase receipt and serial number *

name and address for collection

telephone/fax number, for availability during the day

convenient collection date (date, time)

short description of the defect

Important Note:

If there is no fault found in the collected equipment after inspection, the transferring party shall incur charges for transport and administration.

If you have checked all of the above and there is still no picture, call our information line for assistance in your country.

* see the identification plate on the back of the case.



https://iiyama.com

CE MARKING DECLARATION OF CONFORMITY

This LCD monitor complies with the requirements of the EC/EU Directive 2014/30/EU "EMC Directive", 2014/35/EU "Low Voltage Directive", 2009/125/EC "ErP Directive" and 2011/65/EU "RoHS Directive".

The electro-magnetic susceptibility has been chosen at a level that gives correct operation in residential areas, business and light industrial premises and small-scale enterprises, inside as well as outside of the buildings. All places of operation are characterised by their connection to the public low voltage power supply system.

IIYAMA CORPORATION: Wijkermeerstraat 8, 2131 HA Hoofddorp, The Netherlands

Model No. : PL2490HC

For displays with glossy bezels the user should consider the placement of the display as the bezel may cause disturbing reflections from surrounding light and bright surfaces.



We recommend recycling of used product. Please contact your dealer or iiyama service center. Recycle information is obtained via the Internet, using the address: https://iiyama.com

You can access the Web page of different countries from there.

- We reserve the right to change specifications without notice.
- All trademarks used in this user manual are the property of their respective owners.
- As an ENERGY STAR[®] Partner, iiyama has determined that this product meets the ENERGY STAR[®] guidelines for energy efficiency.
- This product qualifies for ENERGY STAR[®] in the "factory default" setting and this is the setting in which power saving will be achieved. Changing the factory default picture settings or enabling other features will increase power consumption that could exceed the limits necessary to qualify for ENERGY STAR[®] rating.
- Eprel registration number XUB2490HSUC-B5 : 1334752

TABLE OF CONTENTS

FOR YOUR SAFETY	1
SAFETY PRECAUTIONS	1
SPECIAL NOTES ON LCD MONITORS	3
CUSTOMER SERVICE	3
CLEANING	3
BEFORE YOU OPERATE THE MONITOR	
FEATURES	4
CHECKING THE CONTENTS OF THE PACKAGE	4
USING ARM OR STAND	5
FITTING AND REMOVAL OF STAND	7
WEB CAMERA INSTALLATION	8
CONTROLS AND CONNECTORS	9
CONNECTING YOUR MONITOR	10
COMPUTER SETTING	11
ADJUSTING THE HEIGHT AND THE VIEWING ANGLE	11
OPERATING THE MONITOR	12
ADJUSTMENT MENU CONTENTS	13
SCREEN ADJUSTMENTS	19
STANDBY FEATURE	22
TROUBLE SHOOTING	23
RECYCLING INFORMATION	24
APPENDIX	25
SPECIFICATIONS	25
DIMENSIONS	26
COMPLIANT TIMING	27

ENGLISH

FOR YOUR SAFETY

SAFETY PRECAUTIONS

WARNING

STOP OPERATING THE MONITOR IF YOU ARE AWARE OF ANY PROBLEMS

If you notice any abnormal phenomena such as smoke, strange sounds or fumes, unplug the monitor and contact your dealer or iiyama service center immediately. Further use may be dangerous and can cause fire or electric shock.

NEVER REMOVE THE CABINET

High voltage circuits are inside the monitor. Removing the cabinet may expose you to the danger of fire or electric shock.

DO NOT PUT ANY OBJECT INTO THE MONITOR

Do not put any solid objects or liquids such as water into the monitor. In case of an accident, unplug your monitor immediately and contact your dealer or iiyama service center. Using the monitor with any object inside may cause fire, electric shock or damage.

INSTALL THE MONITOR ON A FLAT, STABLE SURFACE

The monitor may cause an injury if it falls or is dropped.

DO NOT USE THE MONITOR NEAR WATER

Do not use where water may be splashed or spilt onto the monitor as it may cause fire or electric shock.

OPERATE UNDER THE SPECIFIED POWER SUPPLY

Be sure to operate the monitor only with the specified power supply. Use of an incorrect voltage will cause malfunction and may cause fire or electric shock.

PROTECT THE CABLES

Do not pull or bend the power cable and signal cable. Do not place the monitor or any other heavy objects on the cables. If damaged, the cables may cause fire or electric shock.

ADVERSE WEATHER CONDITIONS

It is advisable not to operate the monitor during a heavy thunder storm as the continual breaks in power may cause malfunction. It is also advised not to touch the plug in these circumstances as it may cause electric shock.

CAUTION

INSTALLATION LOCATION

Do not install the monitor where sudden temperature changes may occur, or in humid, dusty or smoky areas as it may cause fire, electric shock or damage. You should also avoid areas where the sun shines directly on the monitor.

CAUTION

DO NOT PLACE THE MONITOR IN A HAZARDOUS POSITION

The monitor may topple and cause injury if not suitably located. Please also ensure that you do not place any heavy objects on the monitor, and that all cables are routed such that children may not pull the cables and possibly cause injury.

MAINTAIN GOOD VENTILATION

Ventilation slots are provided to keep the monitor from overheating. Covering the slots may cause fire. To allow adequate air circulation, place the monitor at least 10 cm (or 4 inches) from any walls. When removing the tilt stand, the ventilation slots on the back side of the monitor can be blocked. This may overheat the monitor and may cause fire or damage. Make sure to allow enough ventilation when removing the tilt stand. Operating the monitor on its back, side, upside down or on a carpet or any other soft material may also cause damage.

DISCONNECT THE CABLES WHEN YOU MOVE THE MONITOR

When you move the monitor, turn off the power switch, unplug the monitor and be sure the signal cable is disconnected. If you do not disconnect them, it may cause fire or electric shock.

UNPLUG THE MONITOR

If the monitor is not in use for a long period of time it is recommended that it is left unplugged to avoid accidents.

HOLD THE PLUG WHEN DISCONNECTING

To disconnect the power cable or signal cable, always pull it by the plug. Never pull on the cable itself as this may cause fire or electric shock.

DO NOT TOUCH THE PLUG WITH WET HANDS

Pulling or inserting the plug with wet hands may cause electric shock.

WHEN YOU INSTALL THE MONITOR ON YOUR COMPUTER

Be sure the computer is strong enough to hold the weight of the monitor, otherwise, you may damage your computer.

CAREFUL! PROTECT YOUR HANDS AND FINGERS

- Be careful not to hurt your fingers or hands when you change the height or the angle.
- Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.

REMARK FOR 24/7 USAGE

This product is not specifically designed for 24/7 usage in all environments.

REMARK FOR WALL MOUNTING

This product is not designed for digital signage (electronic signboard) applications such as wall mounting.

OTHERS

ERGONOMIC RECOMMENDATIONS

To eliminate eye fatigue, do not operate the monitor against a bright background or in a dark room. For optimal viewing comfort, the monitor should be just below eye level and 40-60 cm (16-24 inches) away from your eyes. When using the monitor over a prolonged time, a ten minute break every hour is recommended as looking at the screen continuously can cause eye strain.

SPECIAL NOTES ON LCD MONITORS

The following symptoms are normal with LCD monitors and do not indicate a problem.

- **NOTE** When you first turn on the LCD monitor, the picture may not fit in the display area because of the type of computer that is used. In this case, adjust the picture position to the correct position.
 - You may find slightly uneven brightness on the screen depending on the desktop pattern you use.
 - Due to the nature of the LCD screen, an afterimage of the previous screen may remain after switching the image, when the same image is displayed for hours. In this case, the screen can be recovered slowly by changing the image or turning off the Power Switch for some hours.

CUSTOMER SERVICE

NOTE If you have to return your unit for service and the original packaging has been discarded, please contact your dealer or iiyama service center for advice or replacement packaging.

CLEANING

NOTE

- WARNING If you drop any materials or liquids such as water into the monitor when cleaning, unplug the power cable immediately and contact your dealer or iiyama service center.
- **CAUTION** For safety reasons, turn off the power switch and unplug the monitor before you clean it.
 - To protect the LCD panel, do not scratch or rub the screen with a hard object.
 - Never use any of the following strong solvents. These will damage the cabinet and the LCD screen.

Thinner	Spray-type cleaner
Benzine	Wax
Abrasive cleaner	Acid or Alkaline solvent

- Touching the cabinet with any product made from rubber or plastic for a long time may cause degeneration or loss of paint on the cabinet.
- **CABINET** Stains can be removed with a cloth lightly moistened with a mild detergent solvent. Then wipe the cabinet with a soft dry cloth.
- LCD Periodic cleaning with a soft dry cloth is recommended.
- **SCREEN** Don't use tissue paper etc. because these will damage the LCD screen.

BEFORE YOU OPERATE THE MONITOR

FEATURES

- Supports Resolutions up to 1920 × 1080
- High Contrast 1000:1 (Typical), Adv. Contrast Function Available / Brightness 250cd/m² (Typical) / Quick Response Time 4ms (Gray to Gray)
- Blue Light Reducer
- Digital Character Smoothing
- Automatic Set-up
- Web Camera
- 2 × 2W Stereo Speakers
- ENERGY STAR[®] Compliant
- Standby Feature
- VESA Mounting Standard (100mm×100mm) Compliant
- Keyhole for Security Lock

CHECKING THE CONTENTS OF THE PACKAGE

The following accessories are included in your package. Check to see if they are enclosed with the monitor. If anything is missing or damaged, please contact your local iiyama dealer or regional iiyama office.

- Power Cable*
- HDMI Cable
- DisplayPort Cable Stand-Neck
- USB Cable Screwdriver

- Web Camera Safety Guide
- Stand-Base with a screw
- Quick Start Guide
- CAUTION
 - The rating of the Power Cable enclosed in 120V area is 10A/125V. If you are using a power supply higher than this rating, then a power cable with a rating of 10A/250V must be used. However, all guarantees and warranties are void for any problems or damage caused by a power cable not supplied by iiyama.

An approved power cable greater or equal to H05VVF, 3G, 0.75mm² must be used.

USING ARM OR STAND




- **CAUTION** Before installation, make sure the display arm or desk arm stand is strong enough to hold the necessary weight of the monitor and the mount.
 - Panel angle adjustment range : 23° upward and 5° downward




[DISPLAY ARM OR DESK ARM STAND]

CAUTION ■ When you use with the display arm or desk arm stand, in consideration of thickness of the mounting stage, tighten the M4 Screws (4pcs) which "L" length is 8mm to fasten the monitor. Using the screw longer than this may cause electric shock or damage because it may contact with the electrical parts inside the monitor.

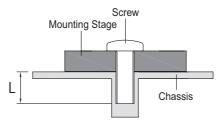

[ROTATING THE MONITOR]

The monitor is designed to be compatible with both landscape and portrait modes. Video card for portrait display will be required for rotating the image on the screen.

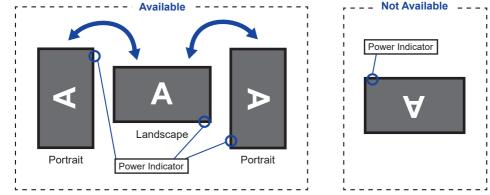

With Stand:

- **NOTE** Adjust the monitor's height before panel rotation.
 - Attempting to rotate the panel forcibly without adjusting the stand height may cause damage to the panel or the stand.

ENGLISH


FITTING AND REMOVAL OF STAND

CAUTION


- Put the monitor on a stable surface. The monitor may cause injury or damage if it falls or is dropped.
- Do not give a strong impact to the monitor. It may cause damage.
- Unplug the monitor before removal or installation to avoid an electric shock or a damage.

<Installation>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Install the Stand-Neck to the monitor and then tighten the 'thumb screw' with the provided screwdriver to secure them.

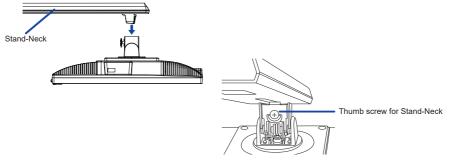

③ Install the Stand-Base to the Stand-Neck and then tighten the 'thumb screw' to secure them.

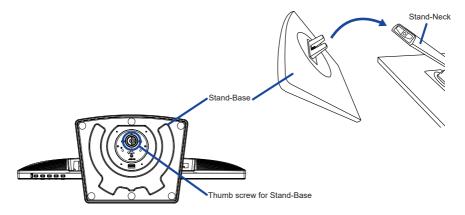


<Removal>

- Put a piece of soft cloth on the table beforehand to prevent the monitor from being scratched. Lay the monitor flat on a table with front face down.
- ② Loosen the 'thumb screw' to remove the Stand-Base from the Stand-Neck.
- ③ Loosen the 'thumb screw' with the provided screwdriver to remove the Stand-Neck from the monitor.

WEB CAMERA INSTALLATION


Install the Web Camera to the USB port at the top of your monitor.

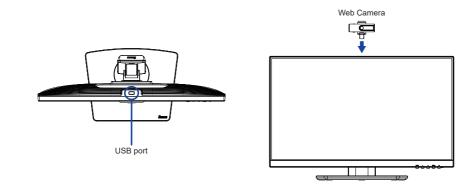

CAUTION The Web Camera will not work if the monitor and computer are not connected with a USB cable.

- When using any communication app, set as follows.
 - Camera: FULL HD 1080P Webcam
 - Microphone: Realtek USB2.0 MIC
 - Speaker: PLX2490C (Audio for Intel[®] Display)

CONTROLS AND CONNECTORS

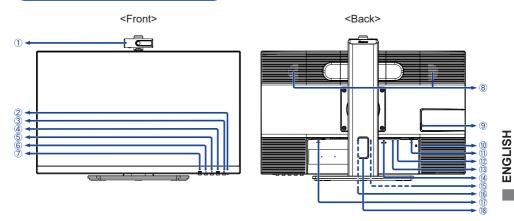

- ① Web Camera
- ② Power Indicator

NOTE Blue: Normal operation Orange: Standby mode

- ③ Power Switch (①)
- ④ Menu Button (MENU)
- (5) + / Volume Button (+) *
- ⑥ / Eco Button (-)*
- ⑦ Auto Adjust / Signal Select Button (AUTO) *
- ⑧ Speakers
- ⑨ USB Downstream Connector (↔ 5V, 500mA)
- 1 Keyhole for Security Lock

NOTE You can fasten a security lock and cable to prevent the monitor from being removed without your permission.


- 1) USB Upstream Connector (🖘)
- 12 Headphone Connector (🞧)
- (1) Audio Connector (3)
- (1) VGA Connector (D-SUB)
- (15 HDMI Connector (HDMI)
- 16 DisplayPort Connector (DP)
- (1) AC Connector (\sim : Alternating current)
- 18 Cable Hole

* You can skip the Menu items and directly display an option setting screen or an adjustment scale.

CONNECTING YOUR MONITOR

- 1 Ensure that both the computer and the monitor are switched off.
- ② Connect the computer to the monitor with the signal cable.
- ③ Connect the computer to the monitor with the USB Cable.
- ④ Connect the monitor to the audio equipment with the Audio Cable for computer when using the audio features. It is only available with analog inputs.
- (5) Connect the Power Cable to the monitor first and then to the power source.
- ⑥ Turn on your monitor and computer.
- NOTE Make sure that the building installation has a circuit breaker of 120/240V, 20A (maximum).
 - The signal cables used for connecting the computer and monitor may vary with the type of computer used. An incorrect connection may cause serious damage to both the monitor and the computer. The cable supplied with the monitor is for a standard connector. If a special cable is required please contact your local iiyama dealer or regional iiyama office.
 - Make sure you tighten the finger screws at each end of the signal cable.
 - The Class I pluggable equipment Type A must be connected to protective earth.
 - The socket-outlet shall be installed near the equipment and shall be easily accessible.
 - Excessive sound pressure from ear-/headphones can cause hearing damage/hearing loss.


[Example of Connection]

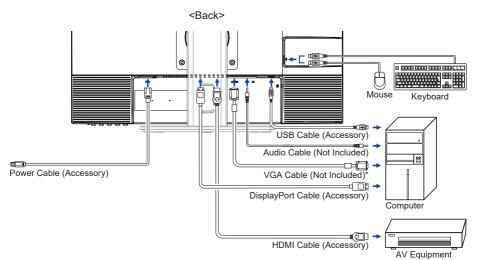

* VGA cable is not supplied with the monitor. If you use low quality VGA cable, it may cause a result of electro-magnetic interference. Please contact the iiyama Support Centre in your country if you wish to connect the monitor via the VGA input.

[Collect Cables]

Put the cables through the Cable Hole to bundle them.




Signal Timing


Change to the desired signal timing listed on page 27: COMPLIANT TIMING.

ADJUSTING THE HEIGHT AND THE VIEWING ANGLE

- For optimal viewing it is recommended to position yourself directly opposite to the full face of the monitor, then adjust the monitor's height and angle to your own preference.
- Hold the panel so that the monitor does not topple when you change the monitor's height or angle.
- You are able to adjust the monitor's height up to 150mm, angle up to 45° right and left, 23° upward and 5° downward.
- NOTE Do not touch the LCD screen when you change the height or the angle. It may cause damage or break the LCD screen.
 - Careful attention is required not to pinch your fingers or hands into the moving part of the stand when you change the height or the angle.
 - Injury can occur if care is not taken to avoid finger contact with the displays base when adjusting the height.



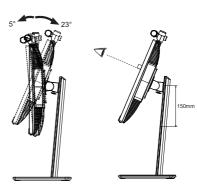


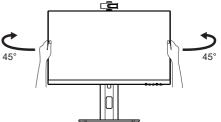

OPERATING THE MONITOR

To create the best picture, your iiyama LCD monitor has been preset at the factory with the COMPLIANT TIMING shown on page 27. You are also able to adjust the picture by following the button operation shown below. For more detailed adjustments, see page 19 for SCREEN ADJUSTMENTS.

 Press the MENU Button to start the On Screen Display feature. There are additional Menu items which can be switched by using the + / – Buttons.



- ② Select the Menu item which contains the adjustment icon relating to the adjustment you want to make. Press the MENU Button. Then, use the + / – Buttons to highlight the desired adjustment icon.
- ③ Press the MENU Button again. Use the + / Buttons to make the appropriate adjustment or setting.
- ④ Press the AUTO Button to leave the menu, and the settings you just made would be automatically saved.

For example, to correct for vertical position, select Menu item of Image Settings and then press the MENU Button. Then, select Vertical Position by using the + / - Buttons.

An adjustment page appears after you press the MENU Button. Then, use the + / – Buttons to change the vertical position settings. The vertical position of the overall display should be changing accordingly while you are doing this.

iivama				
C LUMINANCE	MAGE SETTINGS			
INAGE SETTINGS	Part CLOCK		50	
	PM452	-	50	
😥 🚥	HORIZONTAL POSITION	-		⊐•
EKTRA	VERTICAL POSITION	-	50	_▶
	ASPECT RATIO	•	nu	•

Press the AUTO Button lastly, it ends, all changes are saved in the memory.

NOTE

- When button operations are aborted during adjustment, On-Screen Display disappears when the time set for the OSD Timeout has passed. Also, the AUTO button can be used to return previous menu and turn off the On-Screen Display.
- Any changes are automatically saved in the memory when the On Screen Display disappears. Turning off the power should be avoided while using the Menu.
- Adjustments for H. / V. Position, Pixel Clock and Phase are saved for each signal timing. Except for these adjustments, all other adjustments have only one setting which applies to all signal timings.

ADJUSTMENT MENU CONTENTS

Luminance	EC MARE SETTINGS	Partie HERRONSCO SOLUT		
Adjustment Item	Probler	m / Option Button to Press		
Contrast	Too dull Too intens	se + -		
Brightness*1	Too dark ← +			
	Standard	For general windows environment and monitor default setting.		
	Text	For text editing and viewing in a word processing environment.		
i-Style Color* ²	Internet	For internet environment.		
	Game	For PC game environment.		
	Movie	For movie and video environment.		
	Sports	For sport environment.		
	On	Increased Contrast Ratio		
Adv. Contrast	Off	Typical Contrast Ratio		
NOTE Adv. Contrast adjusts brightness according to the image, and improve the contrast ratio during movie playing. Contrast, Brightness, Gamma, Color Temp., Eco and i-Style Color cannot be adjusted and selected while Adv. Contrast is active.				
	Off	Normal		
_	Mode1	Brightness of back-light is reduced.		
Eco Direct	Mode2	Brightness of back-light is reduced more than Mode1.		
	Mode3	Brightness of back-light is reduced more than Mode2.		


*¹ Adjust the Brightness when you are using the monitor in a dark room and feel the screen is too bright.

*² i-Style Color is disabled when Blue Light Reducer is activated.

Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Eco: Press the - Button when the Menu is not displayed.

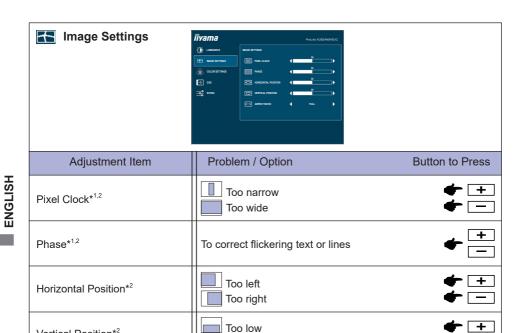

*¹ See page 19 for SCREEN ADJUSTMENTS.

Ir

Full

Aspect

Too high

Expansion display

Expansion display of Aspect

*² Only Analog Input.

Vertical Position*2

Aspect Ratio

Color Settings*		Procise armo arm	
Adjustment Item	Problem	/ Option	Button to Press
	Gamma1	Normal	
Gamma	Gamma2	High contrast	t
	Gamma3	Dark	
		Red	
		Yellow	1
		Green	Too weak 🛛 👉 🕂
	Hue	Cyan	Too strong
		Blue	
6 Axis		Magenta	
0 AXIS	Saturation	Red	
		Yellow	
		Green	Too weak 👉 🛨
	Saturation	Cyan	Too strong
		Blue	
		Magenta	
	Warm		
	Normal		
	Cool		1
Color Temp.		Red	Too weak 👉 🛨
	User	Green	Too strong
		Blue	
	sRGB		
 NOTE SRGB is an international standard which defines and unifies the difference of color appearance between equipment. You can not adjust the Brightness, Contrast, i-Style Color, Adv. Contrast, Gamma, Blue Light Reducer and Eco during sRGB mode because those settings are locked. 			

* Color Settings adjustments is disabled when Blue Light Reducer is activated.

ENGLISH

🕀 OSD

De LUMINANCE	ON SCREEN DISPLAY SETTINGS			
IMAGE SETTINGS	OSD HORIZONTAL POSITION	•	50%	_,
COLOR SETTINGS	OSD VERTICAL POSITION	-	50%	
÷ 000	C 000 TMME	-	10	
EKTRA	ANDUAGE		ENGLISH	

Adjustment Item	Problem / Option			Button to Press
OSD Horizontal Position	OSD is too left OSD is too right			
OSD Vertical Position	OSD is too low OSD is too high			
OSD Time	You can set the OSD display duration time + +			
	English	English	Polski	Polish
Language	Français	French	Русский	Russian
Language	Deutsch	German	日本語	Japanese
	Nederlands	Dutch		

Extra	іїуата	Pielek KURSHIDHEDC		
	Constanting Constanting			
Adjustment Item	Proble	m / Option Button to Press		
Reset	Yes	Factory-preset data is restored.		
Resei	No	Return to Menu.		
	On	DDC/CI is On.		
DDC / CI	Off	DDC/CI is Off.		
	Auto	Select the signal input automatically.		
Signal Select Direct	D-SUB	Select the Analog input.		
Signal Select	HDMI	Select the Digital (HDMI) input.		
	DP	Select the Digital (DisplayPort) input.		
If there are more input not available.	sources ava onnected, th ain.	natically be selected when just one source is available. ailable and you select one of them, the AUTO option is e monitor may not recover the last one used after specific source.		
	Off / -2 / -1 / 0 / +1 / +2			
OverDrive*1		prove the gray level response time of the		
	LCD pan	level results in a faster response time.		
	HDMI	Select the HDMI input.		
Audio Source* ²	DP	Select the DisplayPort input.		
	LINE IN	Select the LINE IN input.		
	On	Opening Logo is On.		
Opening Logo	Off	Opening Logo is Off.		
	Displays	information regarding the current input signal coming		
Information	from the	graphic card in your computer.		
		See your graphic card user guide for more information about changing the resolution and refresh.		

*¹ When OverDrive is activated, some level of image retention will be caused.

*² Suitable for HDMI/DisplayPort inputs only.

Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Signal Select: Press the AUTO button when the Menu is not displayed, it shows following Menu. Press the AUTO button again to select input source and then press the MENU button.



ENGLISH

Direct

You can skip the Menu items and display an adjustment scale directly by using the following button operations.

• Volume: Press the + Button when the Menu is not displayed.

Adjustment Item	Problem / Option	Button to Press
Volume	Too soft Too loud	

• Auto Adjust: Press and hold the AUTO Button for 3-4 seconds when the Menu is not displayed.

Only Analog Input

Adjustment Item	Problem / Option
Auto Adjust *	Adjust H. / V. Position, Pixel Clock and Phase automatically.

- * For best results, use the Auto Adjust in conjunction with the adjustment pattern. See page 19 for SCREEN ADJUSTMENTS.
- Blue Light Reducer * : Pressing and holding of the + Button for 3-4 seconds when the Menu is not displayed.
 Off : Normal
 Mode1 : Blue light is reduced.
 Mode2 : Blue light is reduced more than Mode1.
 Mode3 : Blue light is reduced more than Mode2.
- * Blue Light Reducer cannot be enabled if i-Style Color, Adv.Contrast or sRGB colour are enabled.
- Lock Mode:

<OSD>

Hold the MENU button and turn on the monitor when the monitor is power-off, it will lock/unlock the OSD Key Lock function.

<Power/OSD>

Pressing and holding the MENU button for 10 seconds when Menu is not displayed, will lock/unlock the Power/OSD Key Lock function.

SCREEN ADJUSTMENTS

Adjust the image by following the procedure below to get the desired picture when selecting Analog input.

- The screen adjustments described in this manual are designed to set image position and minimize flicker or blur for the particular computer in use.
- The monitor is designed to provide the best performance at resolution of 1920 × 1080, but can not provide the best at resolutions of less than 1920 × 1080 because the picture is automatically stretched to fit the full screen. It is recommended to operate at resolution of 1920 × 1080 in normal use.
- Displayed text or lines will be blurred or irregular in thickness when the picture is stretched due to the screen enlargement process.
- It is preferable to adjust the image position and frequency with the monitor controls, rather than the computer software or utilities.
- Perform adjustments after a warm-up period of at least thirty minutes.
- Additional adjustments may be required after the Auto Image Adjust depending on the resolution or signal timing.
- The Auto Image Adjust may not work correctly when displaying the picture other than the screen adjustment pattern. In this case, manual adjustments are required.

There are two ways to adjust the screen. One way is automatic adjustment for Position, Clock and Phase. The other way is performing each adjustment manually.

Perform the Auto Image Adjust first when the monitor is connected to a new computer, or resolution is changed. If the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Image Adjust, manual adjustments are required. Both adjustments should be made by using the screen adjustment pattern (Test.bmp) obtained via the iiyama web site (https://iiyama.com).

Adjust the image by following the procedure below to get the desired picture.


This manual explains adjustment under Windows® OS.

① Display the picture at the optimum resolution.

② Enter the Test.bmp (screen adjustment pattern) to wallpaper.


NOTE Consult the appropriate documentation for doing this.

Set the display position to center in the wallpaper setting dialogue box.

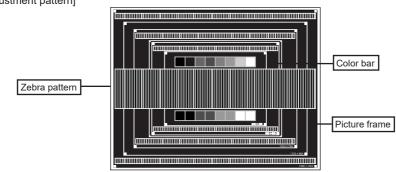


[Adjustment pattern]


- ③ Pressing and holding of the AUTO Button for about 3-4 seconds. (Auto Adjust)
- ④ Adjust the image manually by following procedure below when the screen has a flicker or blur, or the picture does not fit in the display area after performing the Auto Image Adjust.
- ⑤ Adjust the V.Position so that the top and bottom of the picture frame will fit to the display area.

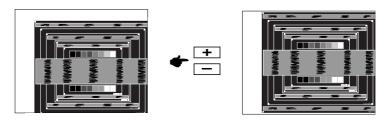

(6) 1) Adjust the H.Position so that the left side of the picture frame will move to the left edge of the display area.

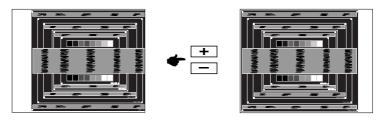


2) Stretch the right side of the picture frame to the right edge of the display area by adjusting the Clock.




- **NOTE** When the left side of the picture frame moves apart from the left edge of the display area during the Clock adjustment, adjust steps 1) and 2).
 - Another way to make the Clock adjustment is to correct the vertical wavy lines in the zebra pattern.
 - The picture may flicker during the Clock, H.Position and V.Position adjustment.
 - In case the picture frame is bigger or smaller than the data display area after the Clock adjustment, repeat steps from ③.

⑦ Adjust the Phase to correct horizontal wavy noise, flicker or blur in the zebra pattern.







- NOTE In case the strong flicker or blurs remain on a part of the screen, repeat steps ⑥ and \overline{O} because the Clock may not be adjusted correctly.
 - Adjust the H.Position after the Phase adjustment if the horizontal position moves during the adjustment.
- ⑧ Adjust the Brightness and Color to get the desired picture after you complete the Clock and Phase adjustments.

Put back your favorite wallpaper.


STANDBY FEATURE

This product features the standby function. When activated, it automatically reduces unnecessary power consumption of the monitor when your computer is not in use.

There is a standby step the monitor takes as described below. The standby function, including any timer settings is configured by the operating system. Check your operating system manual for information on how this can be configured.

Standby Mode

When the video signal from the computer is off, the monitor enters into Standby Mode which reduces the power consumption to less than 0.5W*. The screen becomes dark, and the power indicator turns to orange. From Standby Mode, the image reappears in several seconds when either the keyboard or the mouse are touched again.

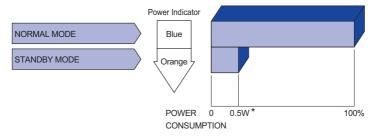

* When the USB devices are not connected.

ENGLISH

TROUBLE SHOOTING

If the monitor fails to operate correctly, please follow the steps below for a possible solution.

- 1. Perform the adjustments described in OPERATING THE MONITOR, depending on the problem you have. If the monitor does not get a picture, skip to 2.
- 2. Consult the following items if you cannot find an appropriate adjustment item in OPERATING THE MONITOR or if the problem persists.
- 3. If you are experiencing a problem which is not described below or you cannot correct the problem, discontinue using the monitor and contact your dealer or iiyama service center for further assistance.

	Problem	Check
1	The picture does not appear.	
	(Power indicator does not light up.)	 The Power Cable is firmly seated in the socket. The Power Switch is turned ON. The AC socket is live. Please check with another piece of equipment.
	(Power indicator is blue.)	 If the blank screen saver is in active mode, touch the keyboard or the mouse. Increase the Contrast and/or Brightness. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
	(Power indicator is orange.)	 If the monitor is in standby mode, touch the keyboard or the mouse. The computer is ON. The Signal Cable is properly connected. The signal timing of the computer is within the specification of the monitor.
2	The screen is not synchronized.	The Signal Cable is properly connected.The signal timing of the computer is within the specification of the monitor.
3	The screen position is not in the center.	□ The signal timing of the computer is within the specification of the monitor.
4	The screen is too bright or too dark.	The video output level of the computer is within the specification of the monitor.
5	The screen is shaking.	☐ The power voltage is within the specification of the monitor.☐ The signal timing of the computer is within the specification of the monitor.

Problem

Check

- 6 No sound.
- □ The audio equipment (computer etc.) is ON.

□ The Audio Cable is properly connected.

- □ The Audio Cable is properly connected.
 - \Box The Volume is turned up.
 - □ The audio output level of the audio equipment is within the specification of the monitor.
- The sound is too loud or too quiet.The audio output level of the audio equipment is within the specification of the monitor.
- (8) A strange noise is heard.

RECYCLING INFORMATION

For better environment protection please don't dispose your monitor. Please visit our web site: https://iiyama.com for monitor recycling.

APPENDIX

Design and specifications are subject to change without prior notice.

SPECIFICATIONS


Size Category		24"		
	Panel technology	IPS		
	Size	Diagonal: 23.8" (60.4cm)		
	Pixel pitch	0.2745mm H × 0.2745mm V		
LCD Panel	Brightness	250cd/m ² (Typical), 200cd/m ² (Default / Energy Saving)		
	Contrast ratio	1000 : 1 (Typical), Adv. Contrast Function Available		
	Viewable angle	Right / Left / Up / Down: 89 degrees each (Typical)		
	Response time	4ms (Gray to Gray)*1		
Display C	Colors	Approx.16.7M		
Sync Frequency		Analog: Horizontal: 24.0-80.0kHz, Vertical: 56-75Hz Digital: Horizontal: 30.0-80.0kHz, Vertical: 56-75Hz		
Native Resolution		1920 × 1080, 2.1 MegaPixels		
Supported max. resolution		VGA : 1920 × 1080, 60Hz HDMI : 1920 × 1080, 60Hz DisplayPort : 1920 × 1080, 60Hz		
Input Cor	nnector	VGA, HDMI, DisplayPort		
Input Sync Signal		Separate sync: TTL, Positive or Negative		
Input Vide	eo Signal	Analog: 0.7Vp-p (Standard), 75Ω, Positive Digital: HDMI, DisplayPort		
USB Star		USB2.0 (DC5V, 500mA)		
Number of Connector	of USB Ports or shape	1 Upstream : Series B 1 Downstream : Series A		
Input Aud	lio Connector	ø 3.5mm mini jack (Stereo)		
Input Aud	lio Signal	1.0Vrms maximum		
Headpho	ne Connector	ø 3.5mm mini jack (Stereo)		
Speakers	; 	2W × 2 (Stereo speakers)		
Maximum	n Screen Size	527.0mm W × 296.5mm H / 20.7" W × 11.7" H		
Power Source		100-240VAC, 50/60Hz, 1.5A		
Power Co	onsumption*2	16W typical Standby mode: 0.5W maximum, Off mode: 0.3W maximum		
	ns / Net Weight g web camera)	540.0 × 382.5 - 532.5 × 209.5mm / 21.3 × 15.1 - 21.0 × 8.2" (W×H×D) 4.9kg /10.8lbs		
Angle		Tilt: Upward: 23 degrees, Downward: 5 degrees Swivel: Left / Right: 45 degrees each Rotation: Clockwise / Counterclockwise: 90 degrees each		
	Max. Resolution	1080p / 30fps		
10/-1	Focus Type	Autofocus		
Web Camera	Microphone	Built-in Mic		
	Field of View	75 degrees		
	Interface	USB2.0 / 3.0		

Environmental Considerations	Operating: Storage:	Temperature Humidity Temperature Humidity	5 to 35°C / 41 to 95°F 10 to 85% (No condensation) -20 to 60°C / -4 to 140°F 5 to 85% (No condensation)
Approvals	als CE, UKCA, VCCI, PSE, EAC, ENERGY STA		

- NOTE *¹ When OverDrive is set to +2.
 - *² When the USB devices are not connected.

DIMENSIONS

540.0mm/21.3" 534.0mm/21.0" 49.<u>0mm/1</u>.9' 75.0mm/3.0 61.0mm/2.4 n 267.0mm/10.5" 373.5mm/14.7" 382.5mm/15.1" (532.5mm/21.0") 325.5mm/12.8" 342.0mm/13.5" (492.0mm/19.4" 209.5mm/8.2 301.5mm/11.9 Ø (

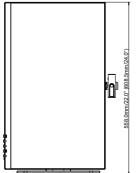

) : Maximum adjustment range

COMPLIANT TIMING

Video Mode	Horizontal Frequency	Vertical Frequency	Dot Clock	
640 × 400	24.827kHz	56.424Hz	21.053MHz	*
	31.469kHz	59.940Hz	25.175MHz	1
640 × 480	35.000kHz	66.667Hz	30.240MHz	*
	37.500kHz	75.000Hz	31.500MHz	
	35.156kHz	56.250Hz	36.000MHz	
800 × 600	37.879kHz	60.317Hz	40.000MHz]
	46.875kHz	75.000Hz	49.500MHz	
	48.363kHz	60.004Hz	65.000MHz	
4004	56.476kHz	70.069Hz	75.000MHz	
1024 × 768	60.023kHz	75.029Hz	78.750MHz]
	60.150kHz	74.720Hz	80.000MHz	*
4000 + 4004	63.981kHz	60.020Hz	108.000MHz	1
1280 × 1024	79.976kHz	75.025Hz	135.000MHz	1
1440 × 900	55.935kHz	59.887Hz	106.500MHz	1
1680 × 1050	65.290kHz	60.000Hz	146.250MHz	1
1920 × 1080	66.590kHz	59.930Hz	138.500MHz]

NOTE * Digital inputs are not compliant.